150

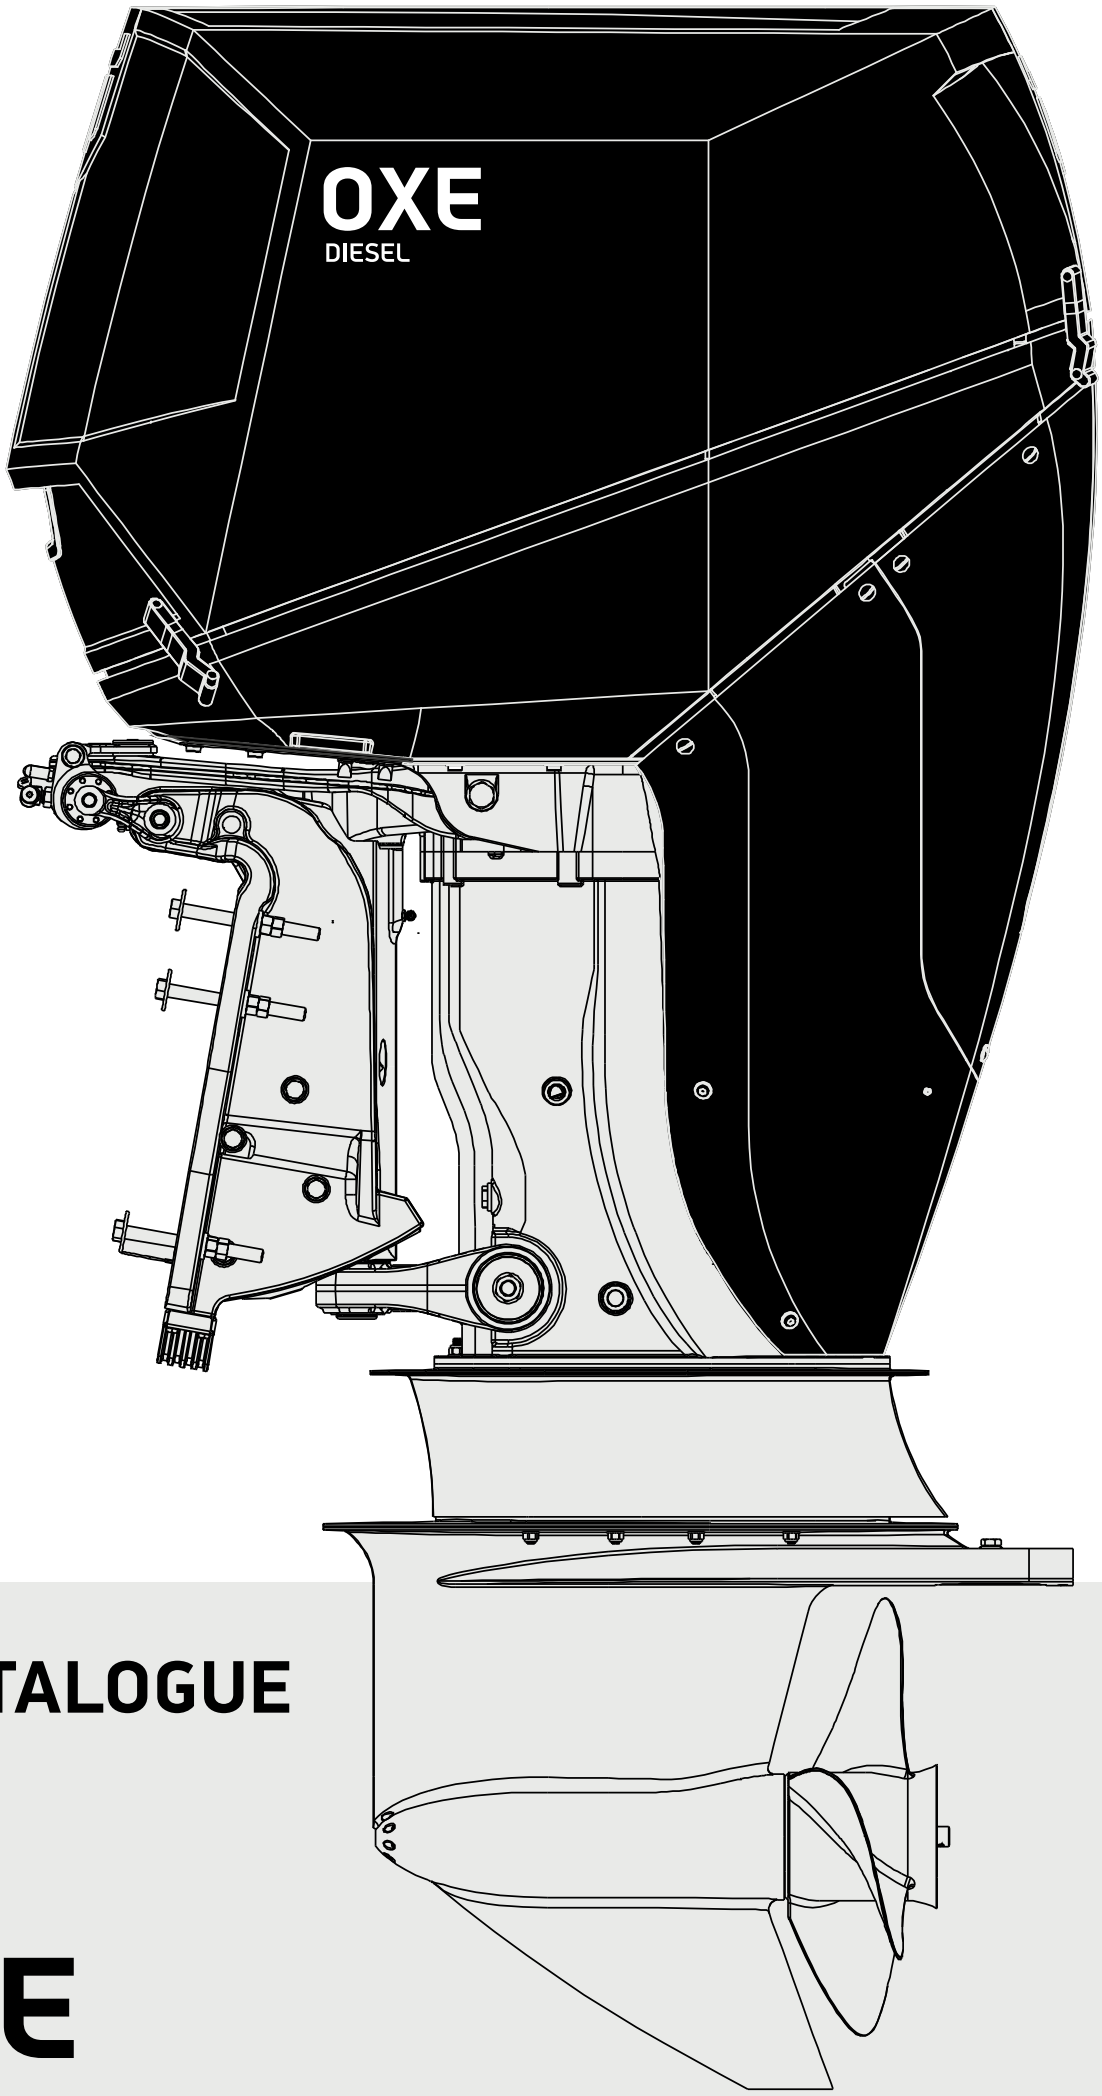

PARTS CATALOGUE

ODM1013 V. 0.9 2018-11-08

OXE
DIESEL

OXE DIESEL

PARTS CATALOGUE

OXE 150 HP

CONTENT

1 OXE DIESEL 150 1

1.1 UPPER HOUSING ASSEMBLY 3

1.1.1 UPPER BELT HOUSING ASSEMBLY 5

1.1.2 DIPSTICK TUBE ASSEMBLY 7

1.2A LOWER LEG XL ASSEMBLY 9

1.2B LOWER LEG XXL ASSEMBLY 11

1.2.1 OIL PICKUP ASSEMBLY 13

1.2.2 LOWER HOUSING ASSEMBLY 15

1.2.3 GEARBOX HOUSING ASSEMBLY 17

1.2.4 GEARBOX HOUSING LID ASSEMBLY 19

1.2.5 BEARING HOUSING ASSEMBLY 21

1.2.6 XL ADAPTER ASSEMBLY 23

1.2.7 XXL ADAPTER ASSEMBLY 25

1.2.8 HYDRAULIC SYSTEM ASSEMBLY 27

1.3 GEARBOX ASSEMBLY 31

1.3.1 INPUT SHAFT ASSEMBLY 33

1.3.2 OUTPUT SHAFT ASSEMBLY 36

1.3.3 REVERSE GEAR ASSEMBLY 37

1.4 TRANSOM MOUNT ASSEMBLY 39

1.4.1 STEERING ARM ASSEMBLY 41

1.4.2 LOWER YOKE ASSEMBLY 43

1.4.3 SWIVEL BRACKET ASSEMBLY 45

1.4.4 CLAMP BRACKETS ASSEMBLY 47

1.5 MARINE ENGINE ASSEMBLY 49

1.5.1 TURBO ASSEMBLY 51

1.5.2 THERMOSTAT BYPASS ASSEMBLY 59

1.5.3 COOLERS ASSEMBLY 61

1.5.4 FUEL SYSTEM ASSEMBLY 77

1.5.4.1 EXTERNAL FUEL PUMP KIT 79

1.5.5 DRY SUMP ASSEMBLY 81

1.5.6 STARTER MOTOR ASSEMBLY 83

1.5.7 ALTERNATOR ASSEMBLY 85

1.5.8 ENGINE BLOCK ASSEMBLY 87

1.5.9 FLYWHEEL ASSEMBLY 89

1.5.10 EXHAUST MANIFOLD ASSEMBLY 91

1.5.11 CRANKCASE VENTILATION ASSEMBLY 93

1.6 ELECTRIC SYSTEM 95

1.6.1 ECU ASSEMBLY 97

1.7 COWLING ASSEMBLY 99

1.7.1 COWL SET 101

1.8 ENGINE INTERNAL PARTS 103

1.8 ENGINE INTERNAL PARTS 104

1.8.1 CAMSHAFT ASSEMBLY 105

1.8.2 CRANKSHAFT ASSEMBLY 107

1.8.3 CYLINDER HEAD ASSEMBLY 109

1.8.4 TIMING BELT ASSEMBLY 112

1.8.5 ENGINE OIL SYSTEM ASSEMBLY 113

1.8.5.1 ENGINE OIL FILTER ASSEMBLY 114

1.8.6 OIL PUMP ASSEMBLY 115

1.8.7 GLOW PLUGS AND INJECTORS 116

1.9 SERVICE/REPAIR KITS 117

1.9.1 SERVICE KIT 1 / 50H 119

1.9.2 SERVICE KIT 2 XL/ 200H 121

1.9.4 SERVICE KIT 3 XL/ 800H 123

1.9.5 SERVICE KIT 3 XXL/800H 125

1.9.6 HEAT EXCHANGER BUNDLE KIT 127

1.9.7 HYDRAULIC COOLER CORE KIT 128

1.9.8 TURBOCHARGER SERVICE KIT 129

1.9.9 UPPER BELT REPLACEMENT KIT 131

1.9.10 INTERCOOLER CORE KIT 132

1.9.11 LOWER BELT SERVICE KIT XL/XXL 133

1.9.12 PROPELLER SHAFT REPAIR KIT 135

1.9.13 FUEL PUMP KIT 136

1.9.14 ANODE KIT 137

1.9.15 ANODE KIT 33” 138

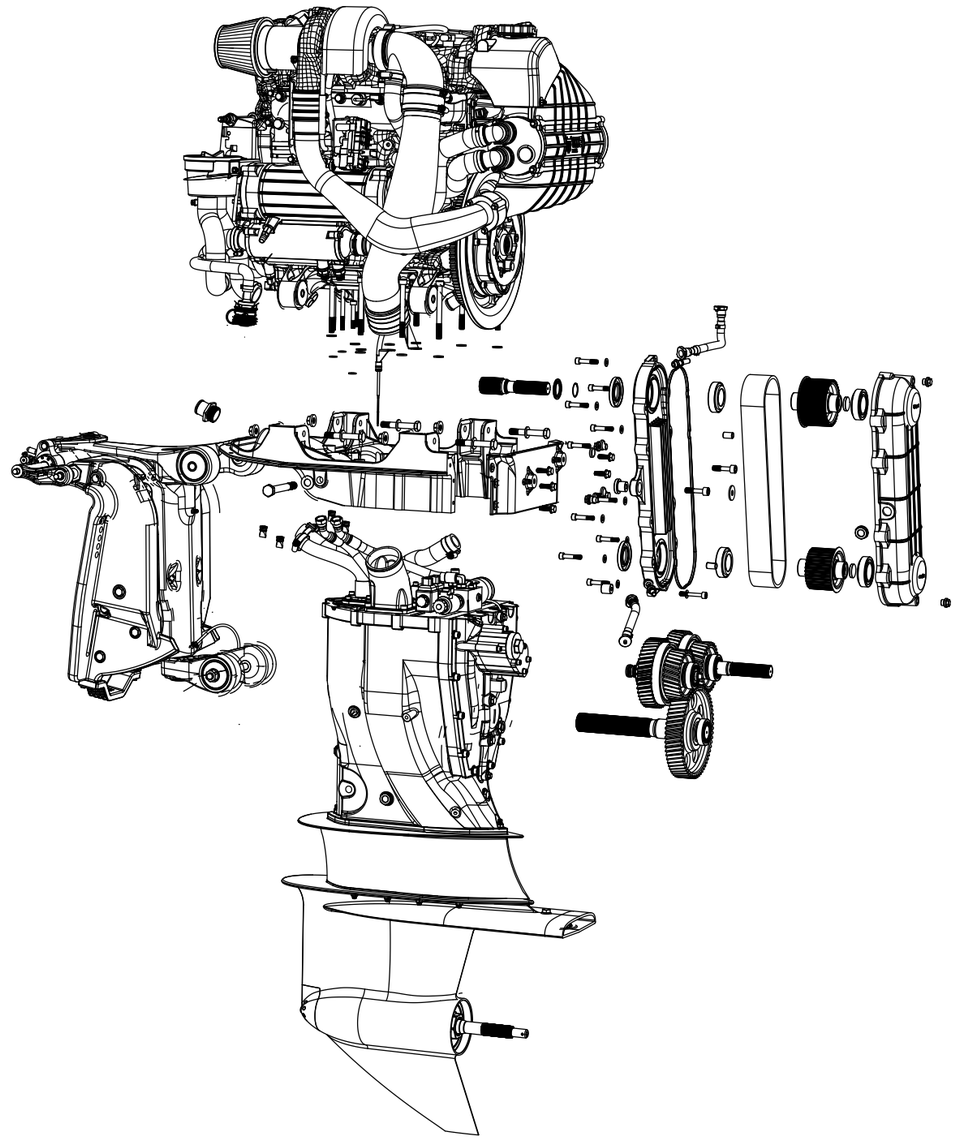

OXE DIESEL

OXE DIESEL

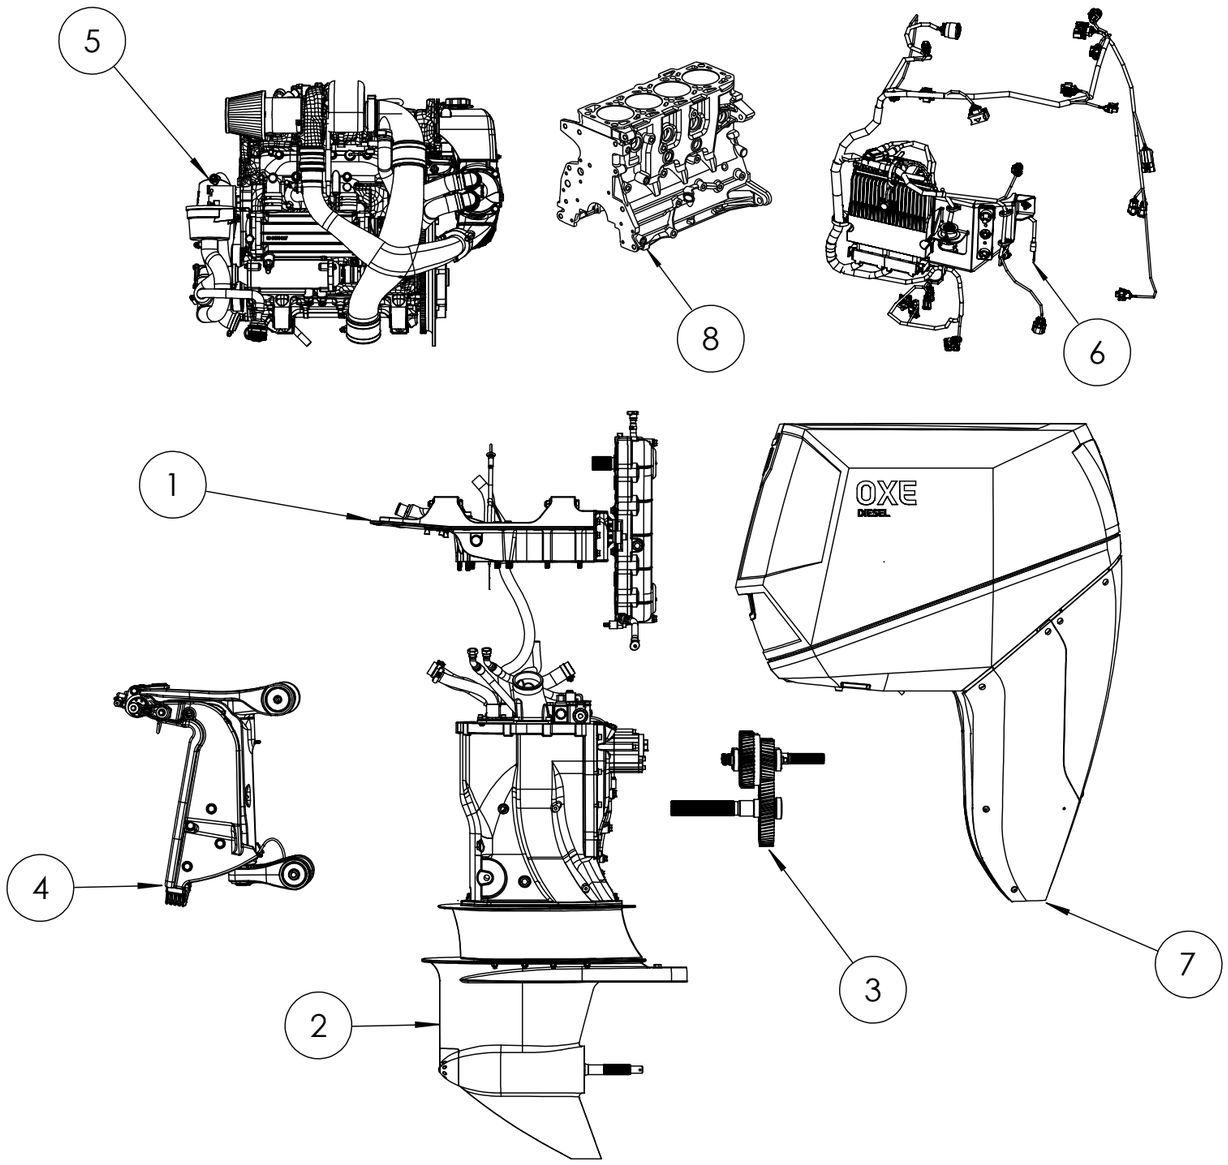

PART LIST		
ITEM NO.	**PART NUMBER**	**DESCRIPTION**
1	30-0110-001	Upper housing assembly
2	30-0111-001 / 30-0111-200	Lower leg assembly XL / XXL
3	30-0112-001	Gearbox assembly
4	30-0113-001	Transom mount assembly
5	30-0114-001	Marine engine assembly
6	30-0116-001	Electric system
7	30-0117-001	Cowling assembly
8	30-0170-001	Internal engine parts
9		Service/repair kits

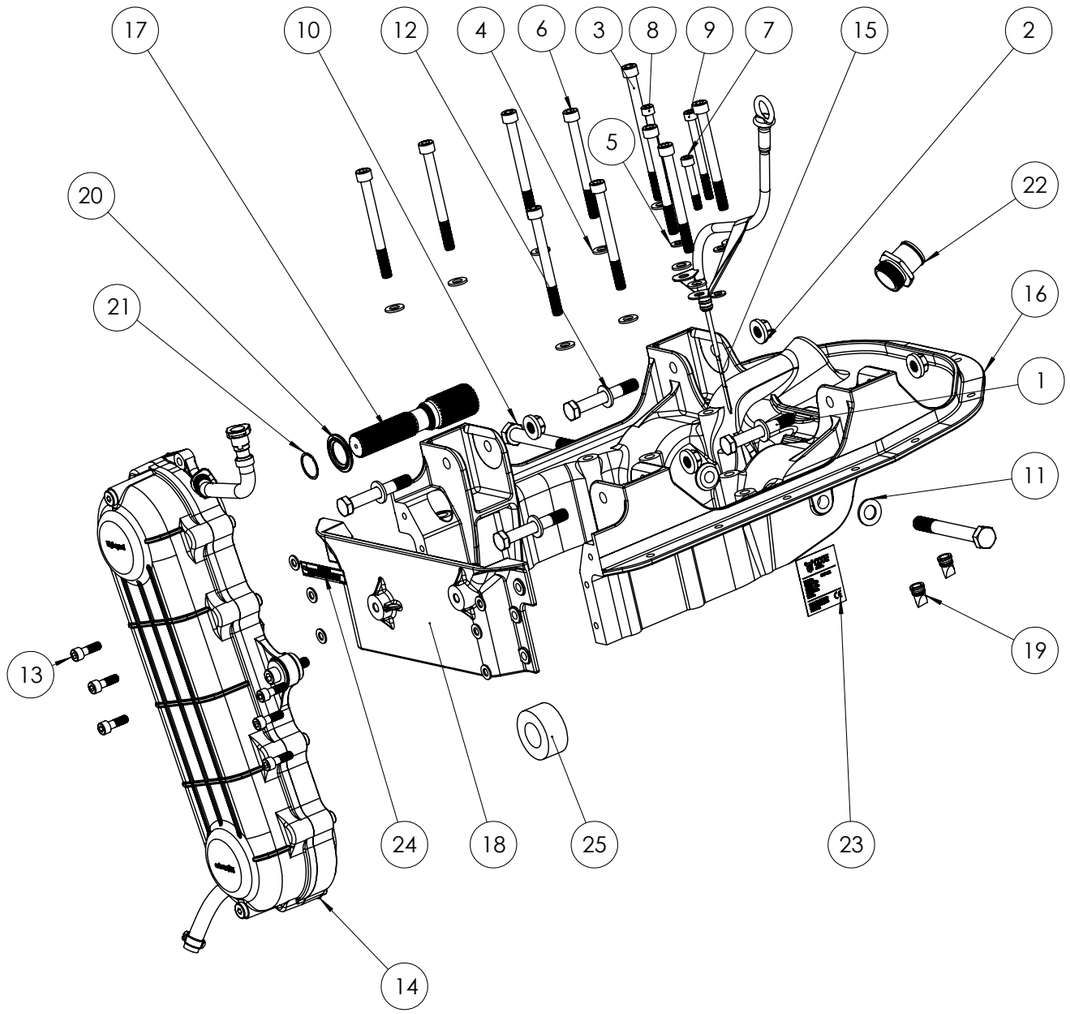

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0130-169	Bolt, adapter plate	4
2	30-0130-312	Washer	4
3	30-0130-075	Bolt	1
4	30-0130-193	Washer	10
5	30-0130-192	Washer	9
6	30-0130-072	Bolt	9
7	30-0130-047	Bolt	1
8	30-0130-055	Bolt	1
9	30-0130-054	Bolt	1
10	30-0130-290	Bolt	2
11	30-0130-199	Washer	2
12	30-0130-194	Washer	4
13	30-0130-042	Bolt	6
14	30-0110-056	Belt housing assembly	1
15	30-0110-079	Dipstick tube assembly	1
16	30-0110-020	Adapter plate	1
17	30-0110-023	Engine adapter shaft	1
18	30-0110-021	Adapter back plate	1
19	30-0122-042	Duck bill	4
20	30-0110-068	Ring, shaft, engine adapter	1
21	30-0122-108	Clip	1
22	30-0122-064	Connector	1
23	30-0300-012	Identification label	1
24	30-0300-004	Rotation warning label	1
25	30-0110-086	Pipe insulation	1

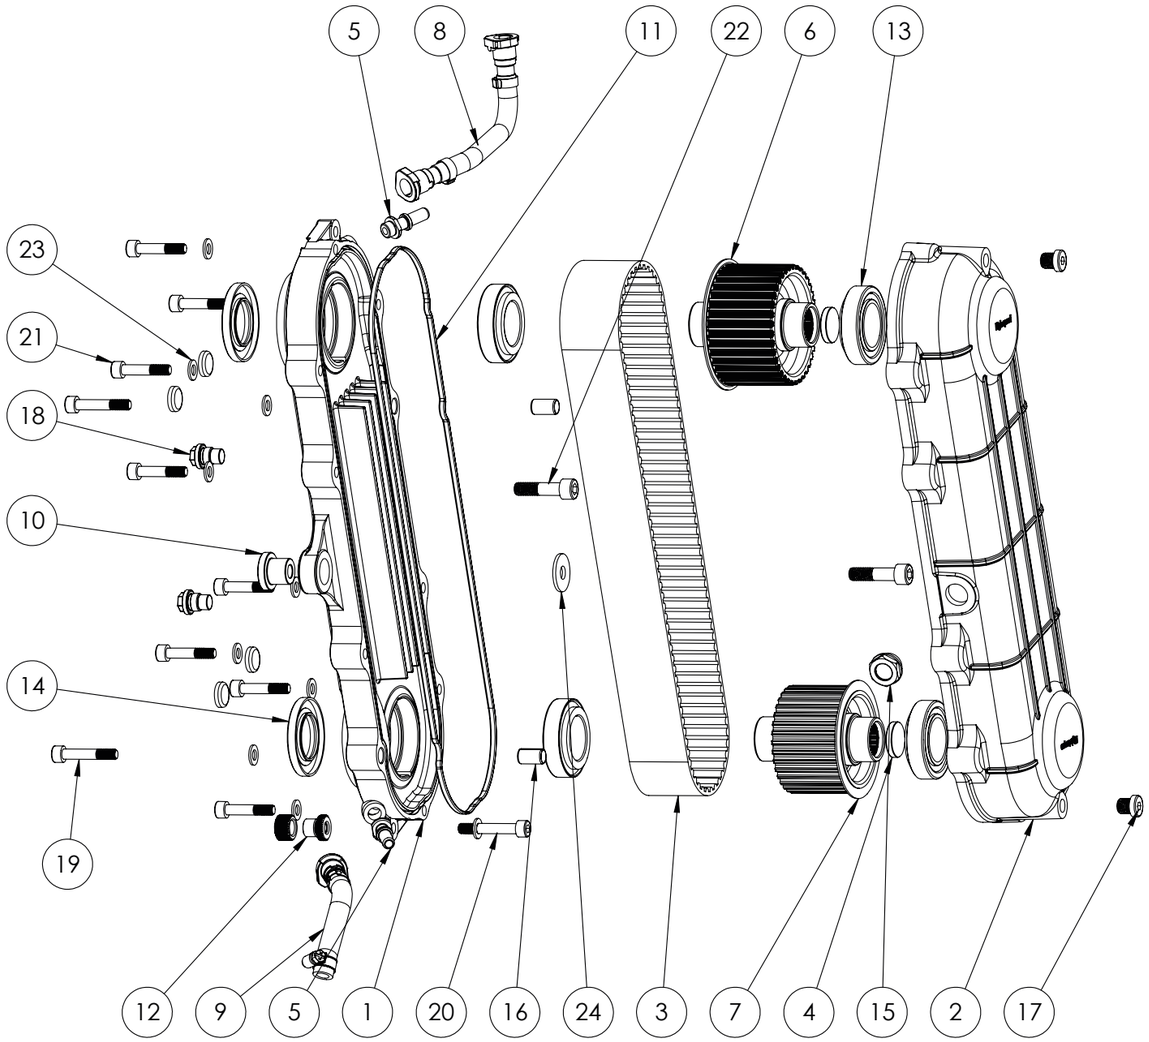

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0110-057	Belt housing bracket	1
2	30-0110-058	Belt housing lid	1
3	30-0110-062	Upper belt	1
4	30-0110-063	Pulley plug	2
5	30-0110-066	Adapter male, quick connection	2
6	30-0110-072	Belt pulley 38 assembly	1
7	30-0110-073	Belt pulley 34 assembly	1
8	30-0110-075	Belt housing in hose cpl	1
9	30-0110-076	Belt housing hose out cpl	1
10	30-0110-077	Bushing belt housing	2
11	30-0110-083	Belt housing seal	1
12	30-0110-087	Adjustment screw cpl	1
13	30-0120-019	Bearing	4
14	30-0121-031	Radial seal	2
15	30-0122-018	Sight glass	1
16	30-0122-112	Guide pin	2
17	30-0122-135	Plug	2
18	30-0122-234	Anode	2
19	30-0130-046	Bolt	2
20	30-0130-047	Bolt	1
21	30-0130-057	Bolt	8
22	30-0130-064	Bolt	2
23	30-0130-192	Washer	11
24	30-0130-198	Washer	2

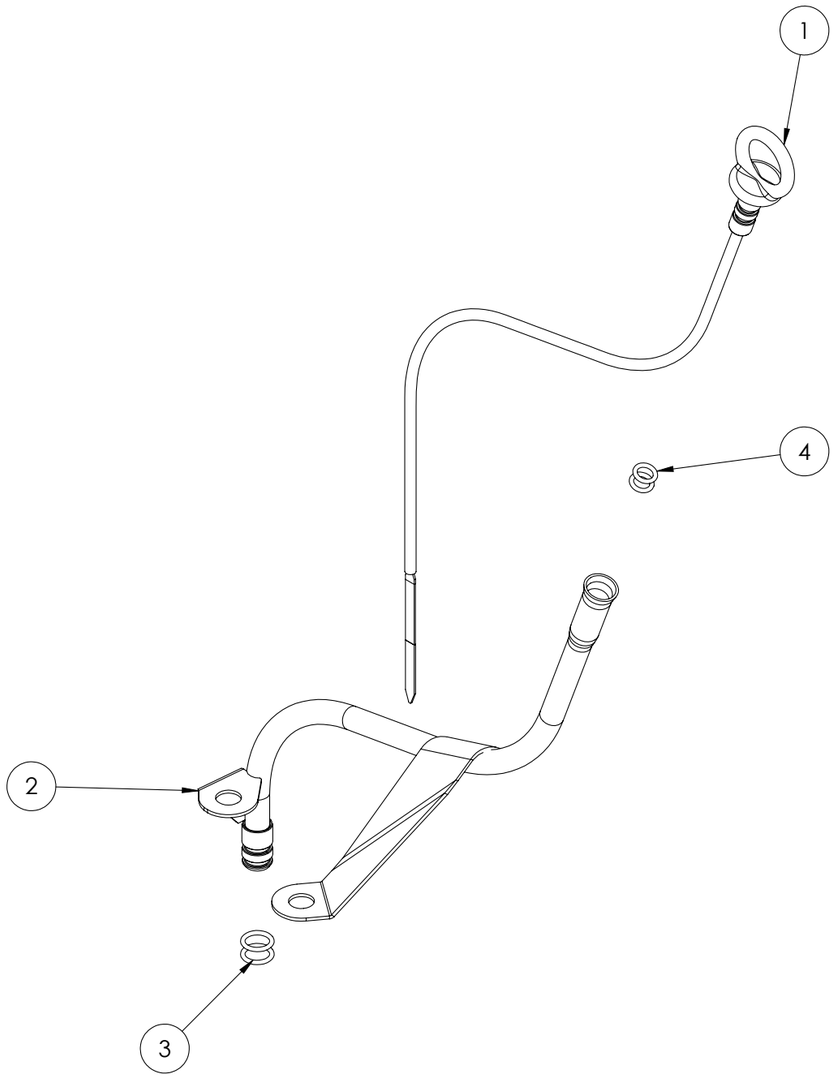

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0110-041	Dipstick	1
2	30-0110-037	Dipstick tube	1
3	30-0121-034	O-ring	2
4	30-0121-065	O-ring	2

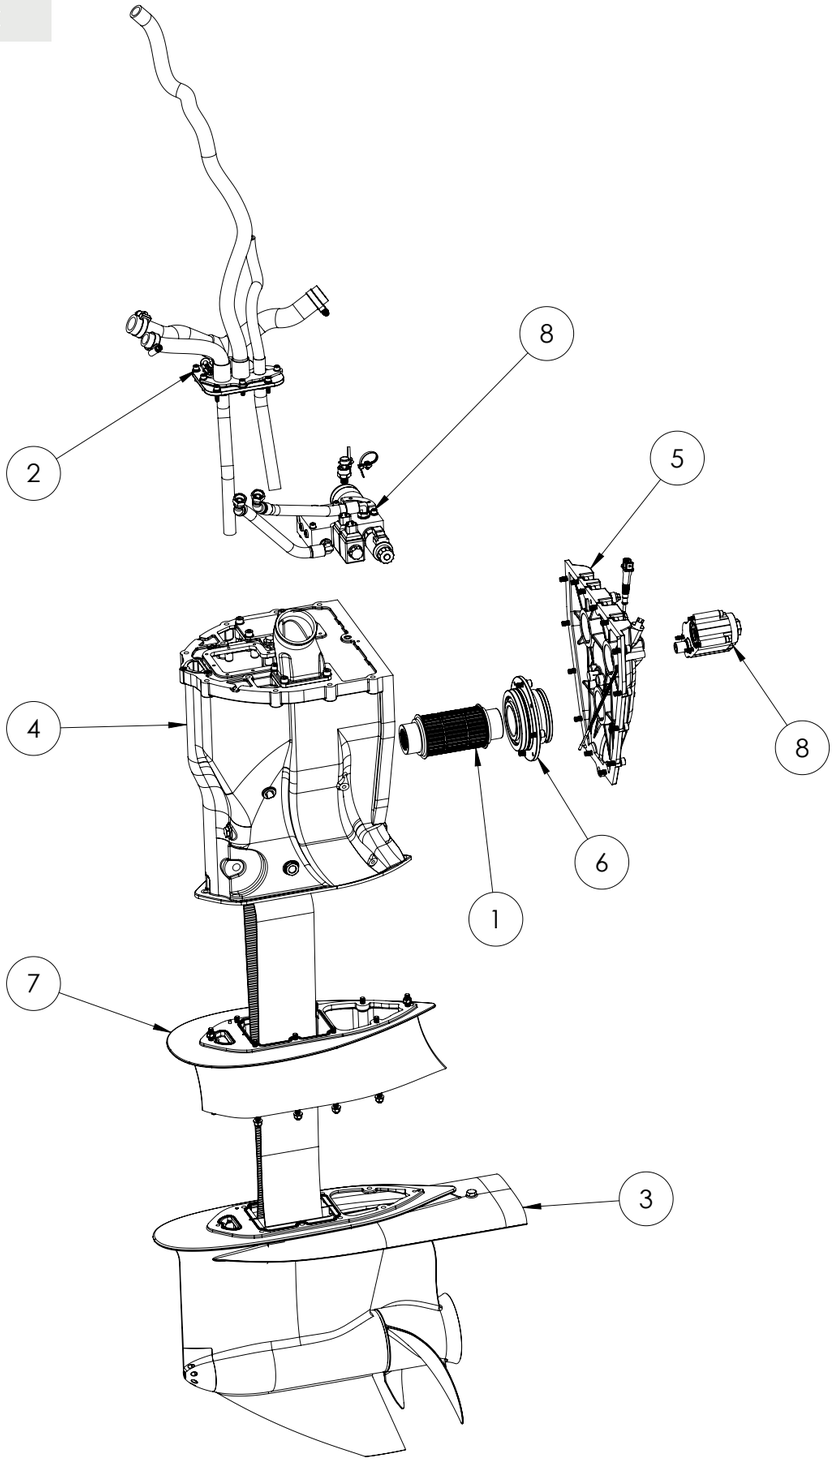

1.2A LOWER LEG XL ASSEMBLY
30-0111-001
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-095	Upper pulley 30 assembly	1
2	30-0111-101	Oil pickup assembly	1
3	30-0111-131	Lower Housing assembly	1
4	30-0111-132	Gearbox housing assembly	1
5	30-0111-133	Gearbox housing lid assembly	1
6	30-0111-134	Bearing housing assembly	1
7	30-0111-135	XL adapter assembly	1
8	30-0115-001	Hydraulic system assembly	1

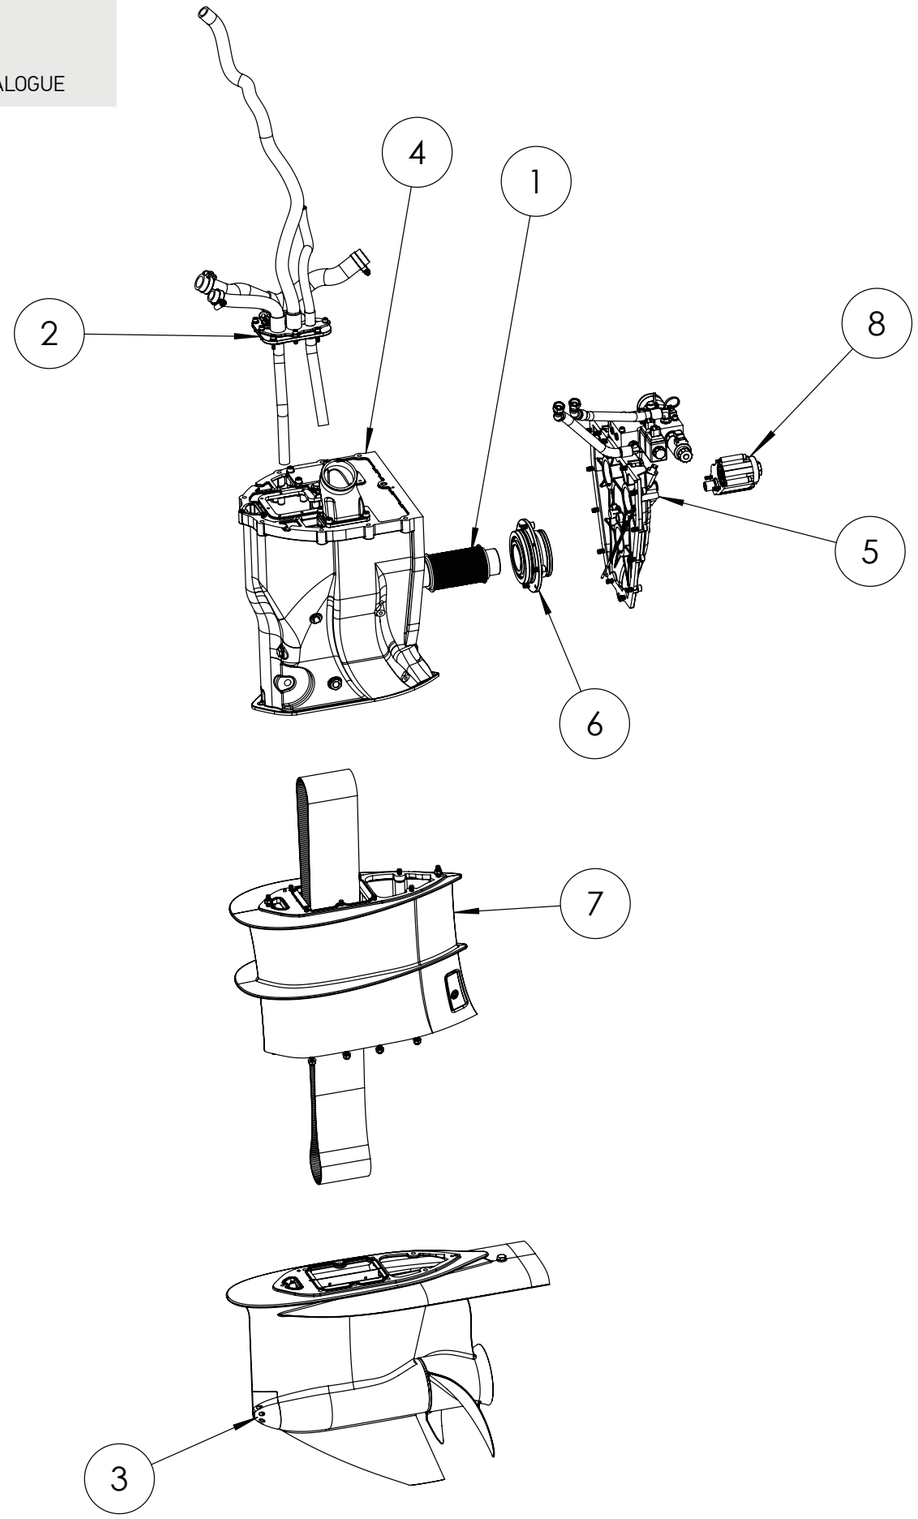

1.2B LOWER LEG XXL ASSEMBLY
30-0111-200
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-095	Upper pulley 30 assembly	1
2	30-0111-101	Oil pickup assembly	1
3	30-0111-131	Lower Housing assembly	1
4	30-0111-132	Gearbox housing assembly	1
5	30-0111-133	Gearbox housing lid assembly	1
6	30-0111-134	Bearing housing assembly	1
7	30-0111-140	XXL adapter assembly	1
8	30-0115-001	Hydraulic system assembly	1

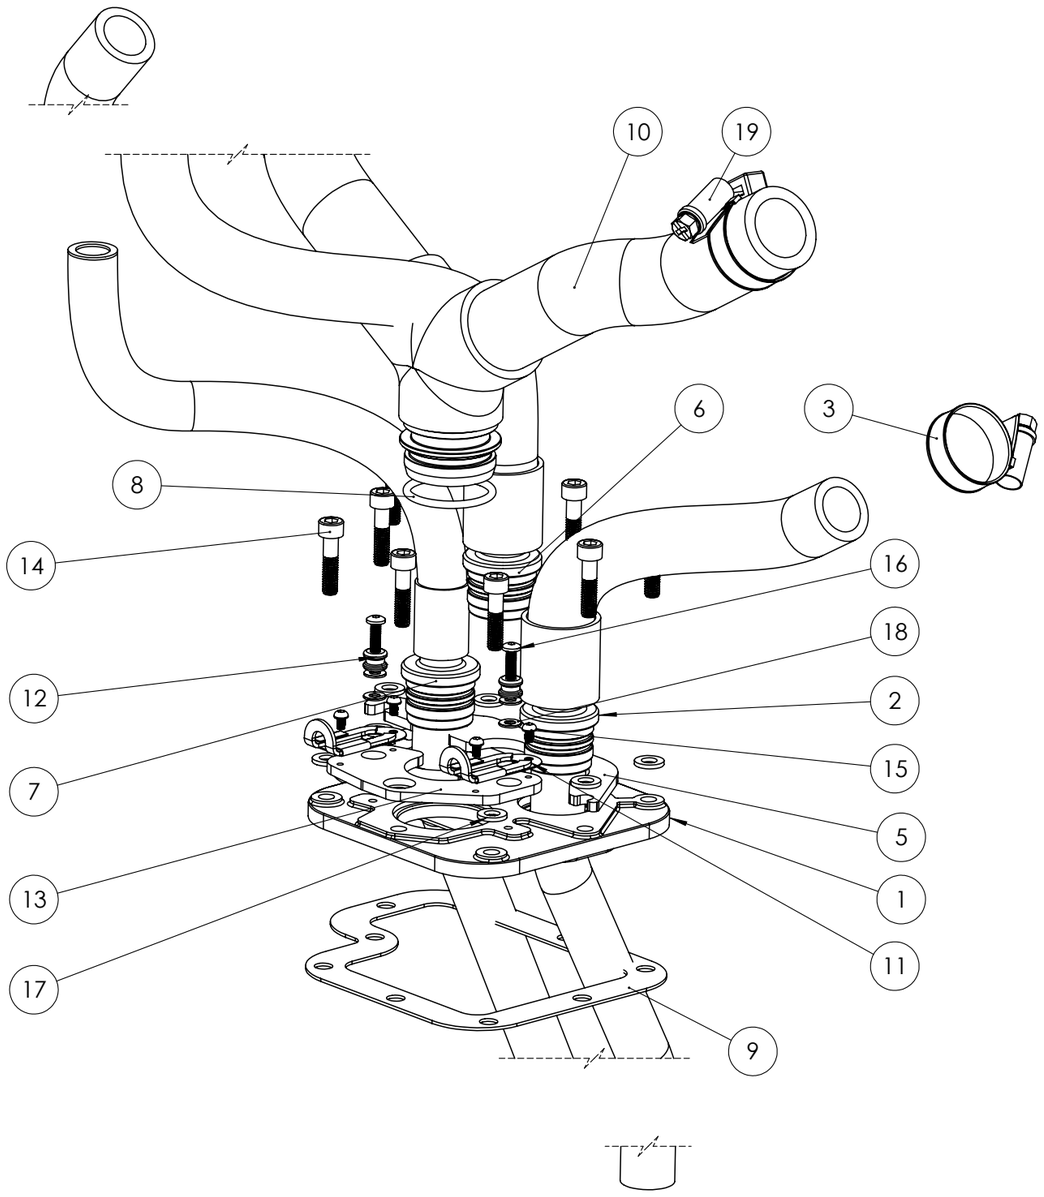

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-108	Lid, oil sump	1
2	30-0111-111	Pipe, oil pickup assy	1
3	30-0122-055	Clamp, hose	1
4	30-0121-033	O-ring	6
5	30-0111-086	Locator, oil hose	1
6	30-0111-114	Hose oil sump deaeration	1
7	30-0111-110	Pipe, oil return assy	1
8	30-0121-046	O-ring	1
9	30-0111-098	Gasket, oil sump lid	1
10	30-0111-102	Hose, oil return, assembly	1
11	30-0122-121	Pipe flange clip	2
12	30-0122-122	Spacer	2
13	30-0111-107	Clamp, oil return	1
14	30-0130-022	Bolt	9
15	30-0130-313	Bolt	4
16	30-0130-314	Bolt	2
17	30-0130-191	Washer	9
18	30-0130-343	Washer	4
19	30-0122-050	Clamp, hose	2

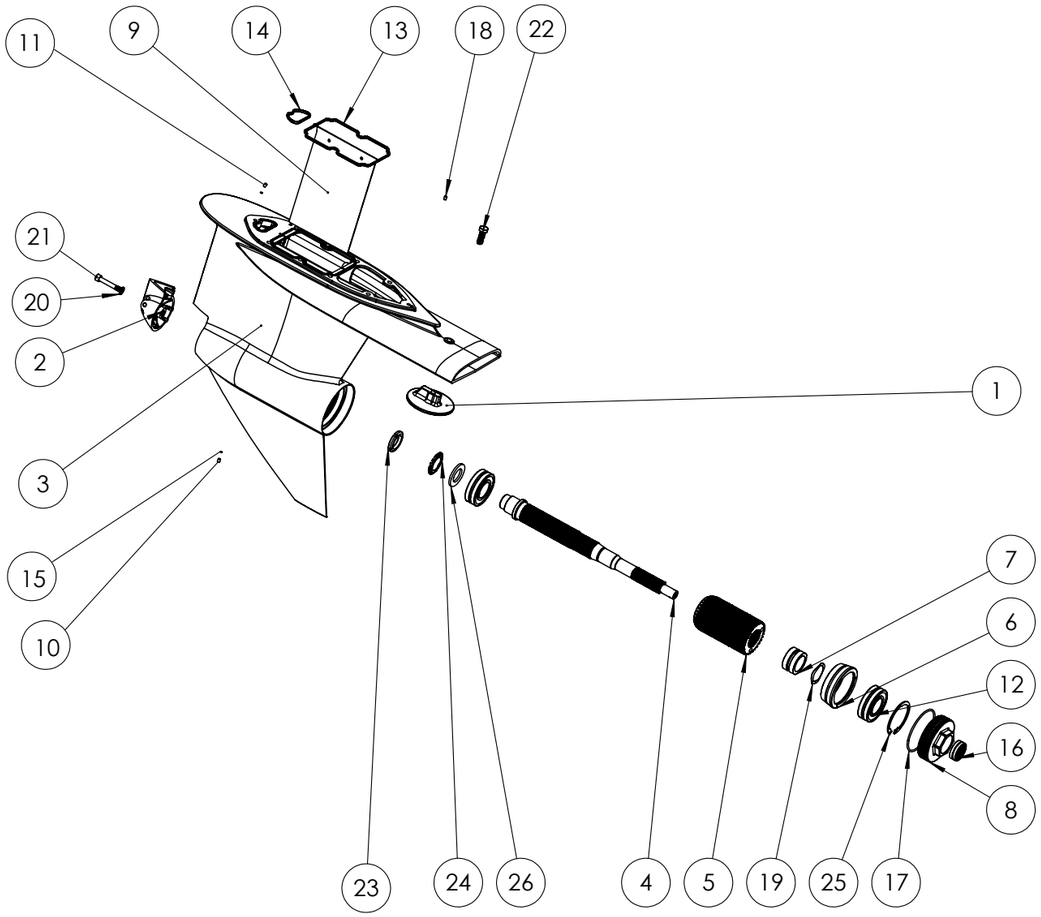

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-066	Anode	1
2	30-0111-123	Lower water intake	1
3	30-0111-122	Lower Housing	1
4	30-0111-005	Propeller shaft	1
5	30-0111-003	Lower pulley 30	1
6	30-0111-081	Bearing holder	1
7	30-0111-048	Spacer, prop. shaft	1
8	30-0111-006	Retainer	1
9	30-0111-145	Divider plate	1
10	30-0122-217	Drain magnet plug	1
11	30-0122-215	Drain plug	1
12	30-0120-001	Bearing	2
13	30-0111-121	Cavity seal, belt, lower housing	1
14	30-0111-124	Cavity seal, water, lower housing	1
15	30-0122-218	Fibre seal	2
16	30-0121-071	Radial seal	2
17	30-0121-008	O-ring	1
18	30-0122-230	Guide pin	2
19	30-0122-071	Washer	1
20	30-0130-192	Waser	1
21	30-0130-048	Bolt	1
22	30-0130-143	Bolt	1
23	30-0130-186	Nut	1
24	30-0130-195	Locking ring	1
25	30-0122-281	Washer	1

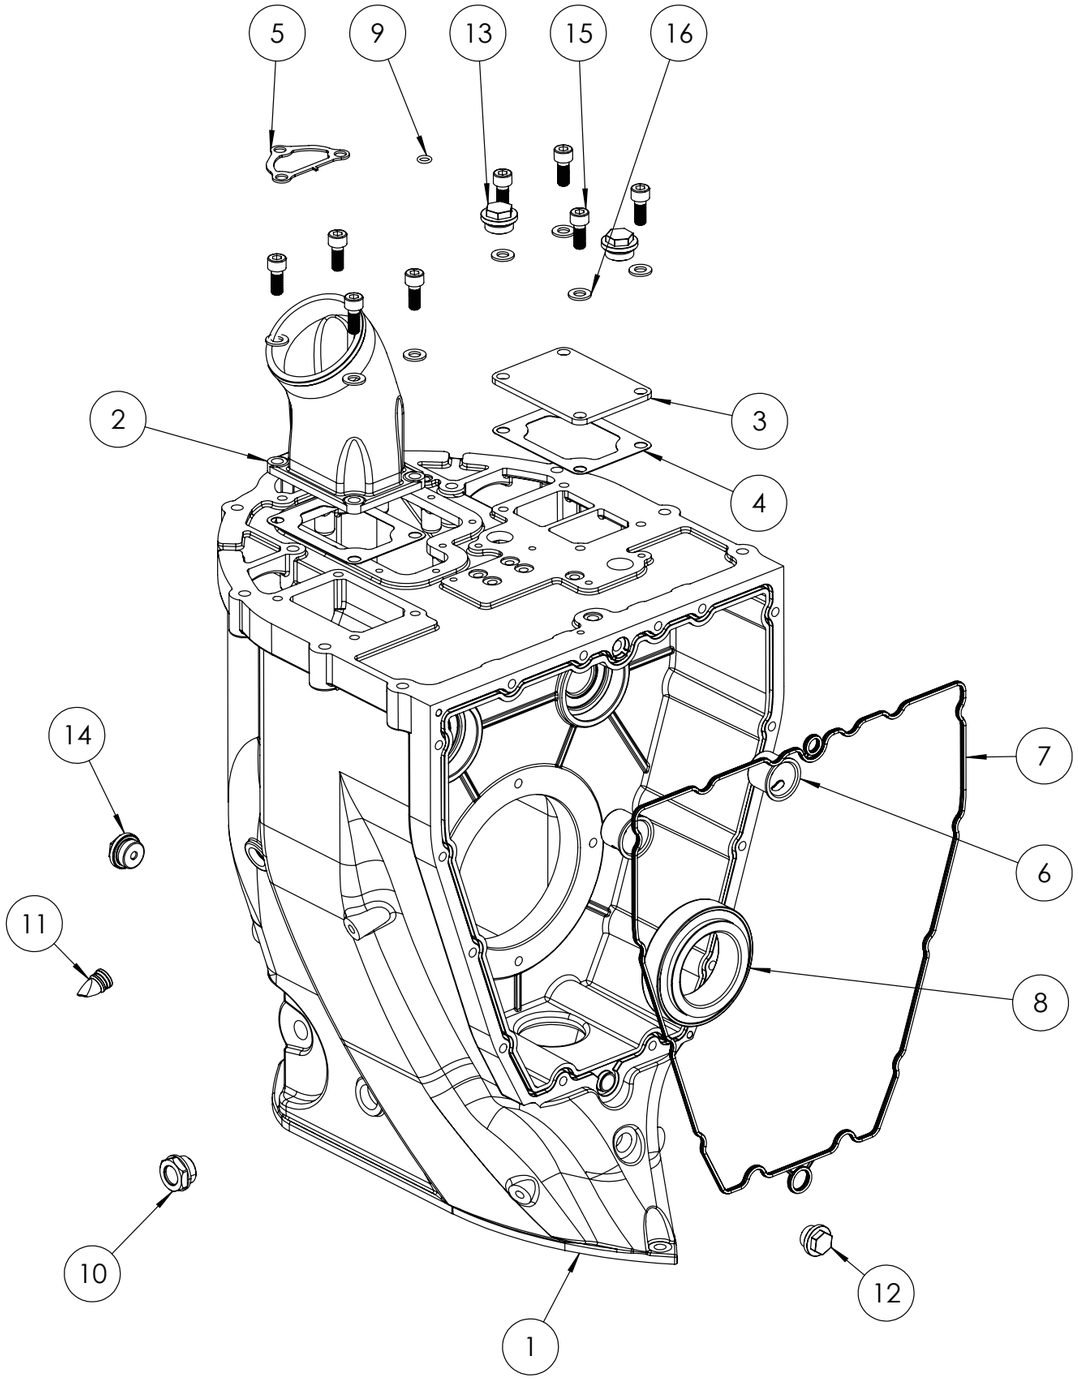

1.2.3 GEARBOX HOUSING ASSEMBLY
30-0111-132
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-020	Gearbox housing	1
2	30-0111-023	Exhaust connector	1
3	30-0111-076	Exhaust block plate	1
4	30-0111-077	Gasket	2
5	30-0111-080	Gasket	1
6	30-0111-099	Axle sleeve	2
7	30-0111-125	Seal	1
8	30-0120-008	Bearing	1
9	30-0121-065	O-ring	1
10	30-0122-018	Sight glass	1
11	30-0122-042	Duck bill	2
12	30-0122-189	Magnet plug	1
13	30-0122-191	Plug	2
14	30-0122-192	Magnet plug	2
15	30-0130-041	Bolt	8
16	30-0130-192	Washer	8

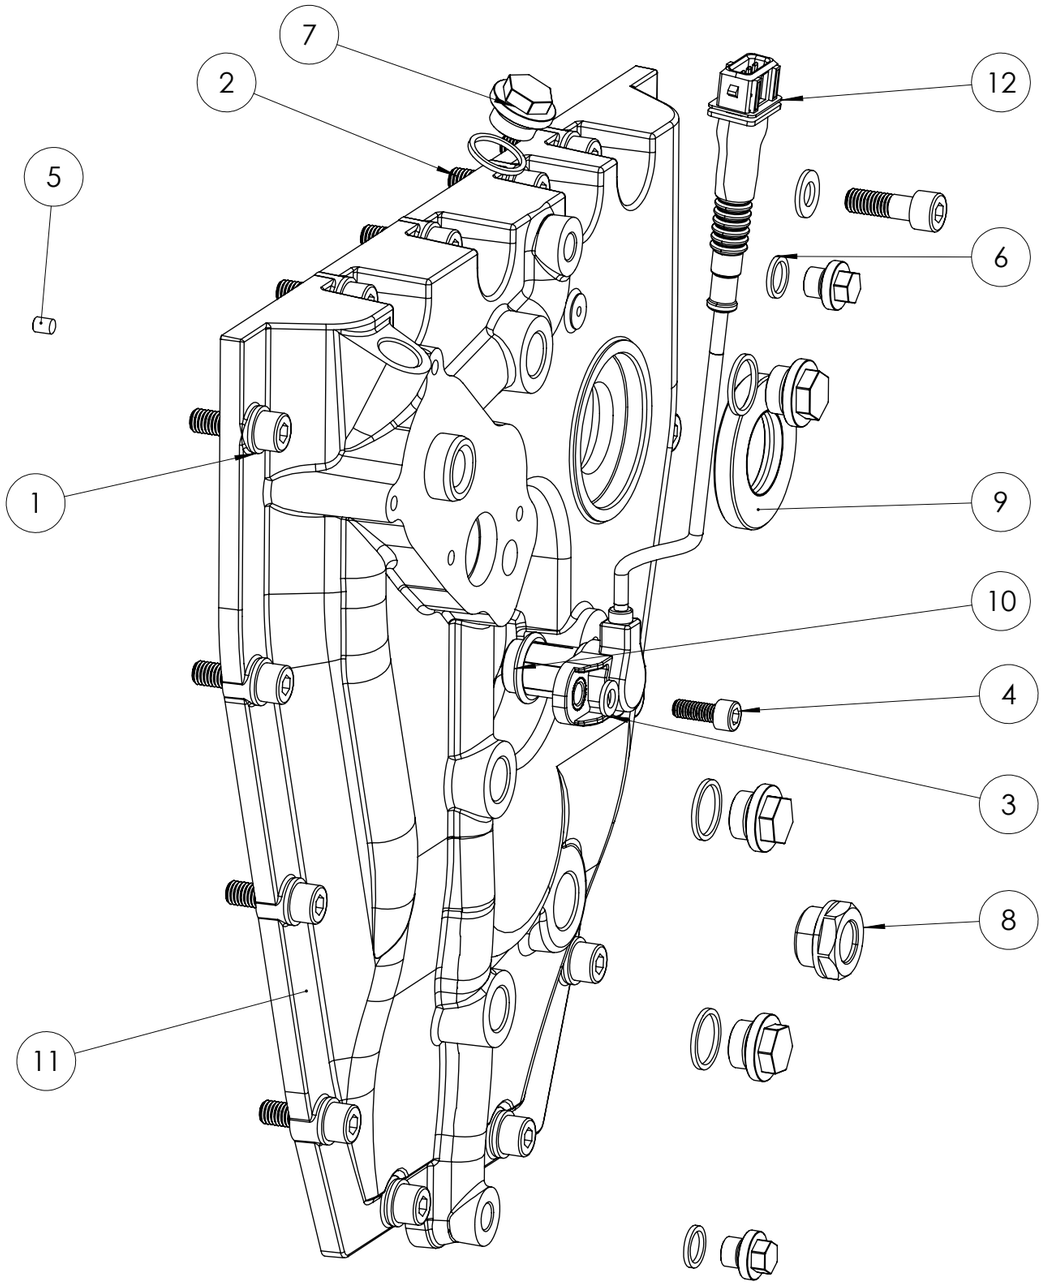

1.2.2 GEARBOX HOUSING LID ASSEMBLY
30-0111-133
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0130-192	Washer	14
2	30-0130-042	Bolt	14
3	30-0130-191	Washer	1
4	30-0130-020	Bolt	1
5	30-0122-230	Guide pin	2
6	30-0122-184	Plug	2
7	30-0122-188	Plug	4
8	30-0122-018	Sight glass	1
9	30-0121-014	Radial seal	1
10	30-0121-064	O-ring	1
11	30-0111-109	Lid, Gearbox housing	1
12	30-0116-034	Sensor, Prop. Sensor	1

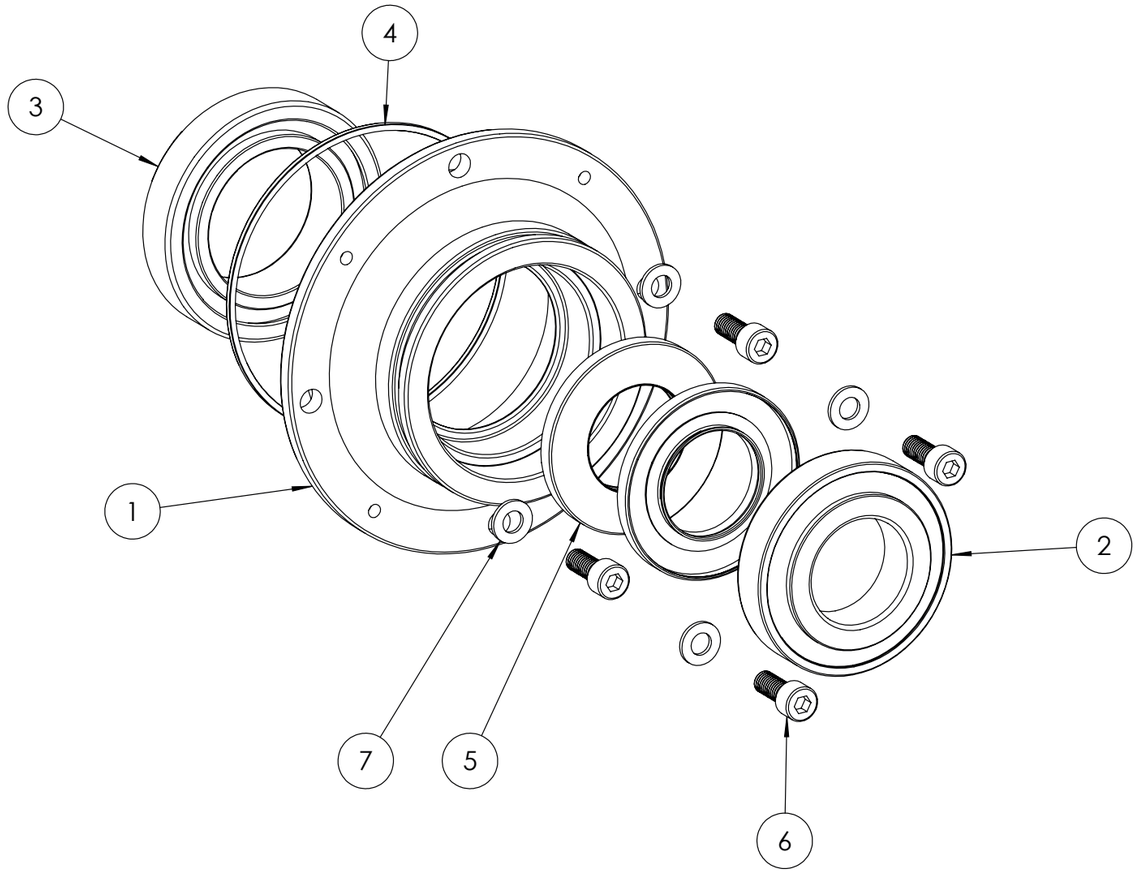

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-015	Bearing housing	1
2	30-0120-006	Bearing	1
3	30-0120-008	Bearing	1
4	30-0121-009	O-ring	1
5	30-0121-018	Radial seal	2
6	30-0130-041	Bolt	4
7	30-0130-192	Washer	4

1.2.5 BEARING HOUSING ASSEMBLY
30-0111-134
OXE DIESEL PARTS CATALOGUE

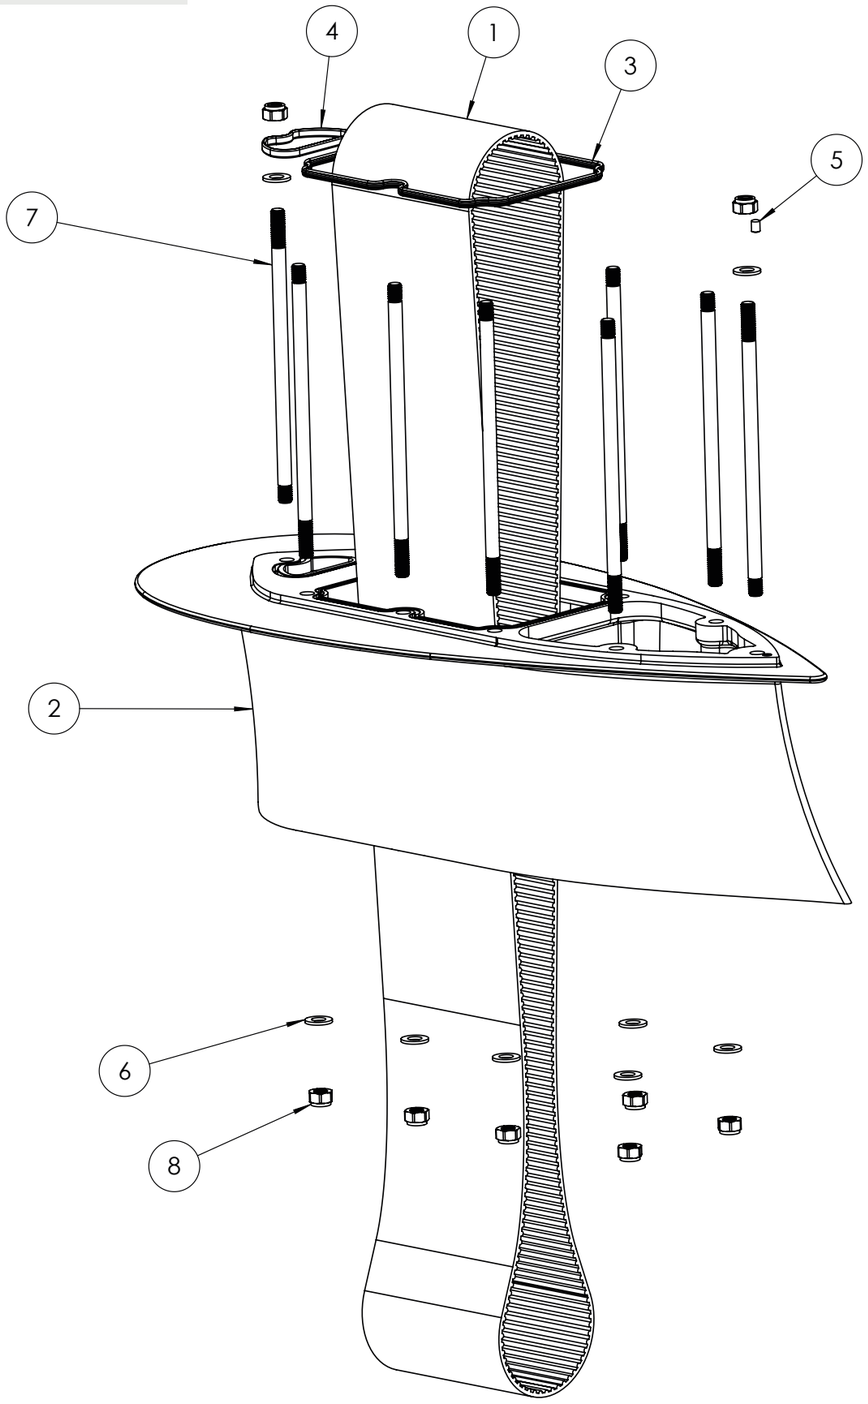

1.2.6 XL ADAPTER ASSEMBLY
30-0111-135
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-002	Lower belt	1
2	30-0111-032	Adapter 25 inch	1
3	30-0111-121	Cavity seal, belt, lower housing	1
4	30-0111-124	Cavity seal, water, lower housing	1
5	30-0122-230	Guide pin	2
6	30-0130-192	Washer	10
7	30-0130-255	Bolt	10
8	30-0130-262	Nut	10

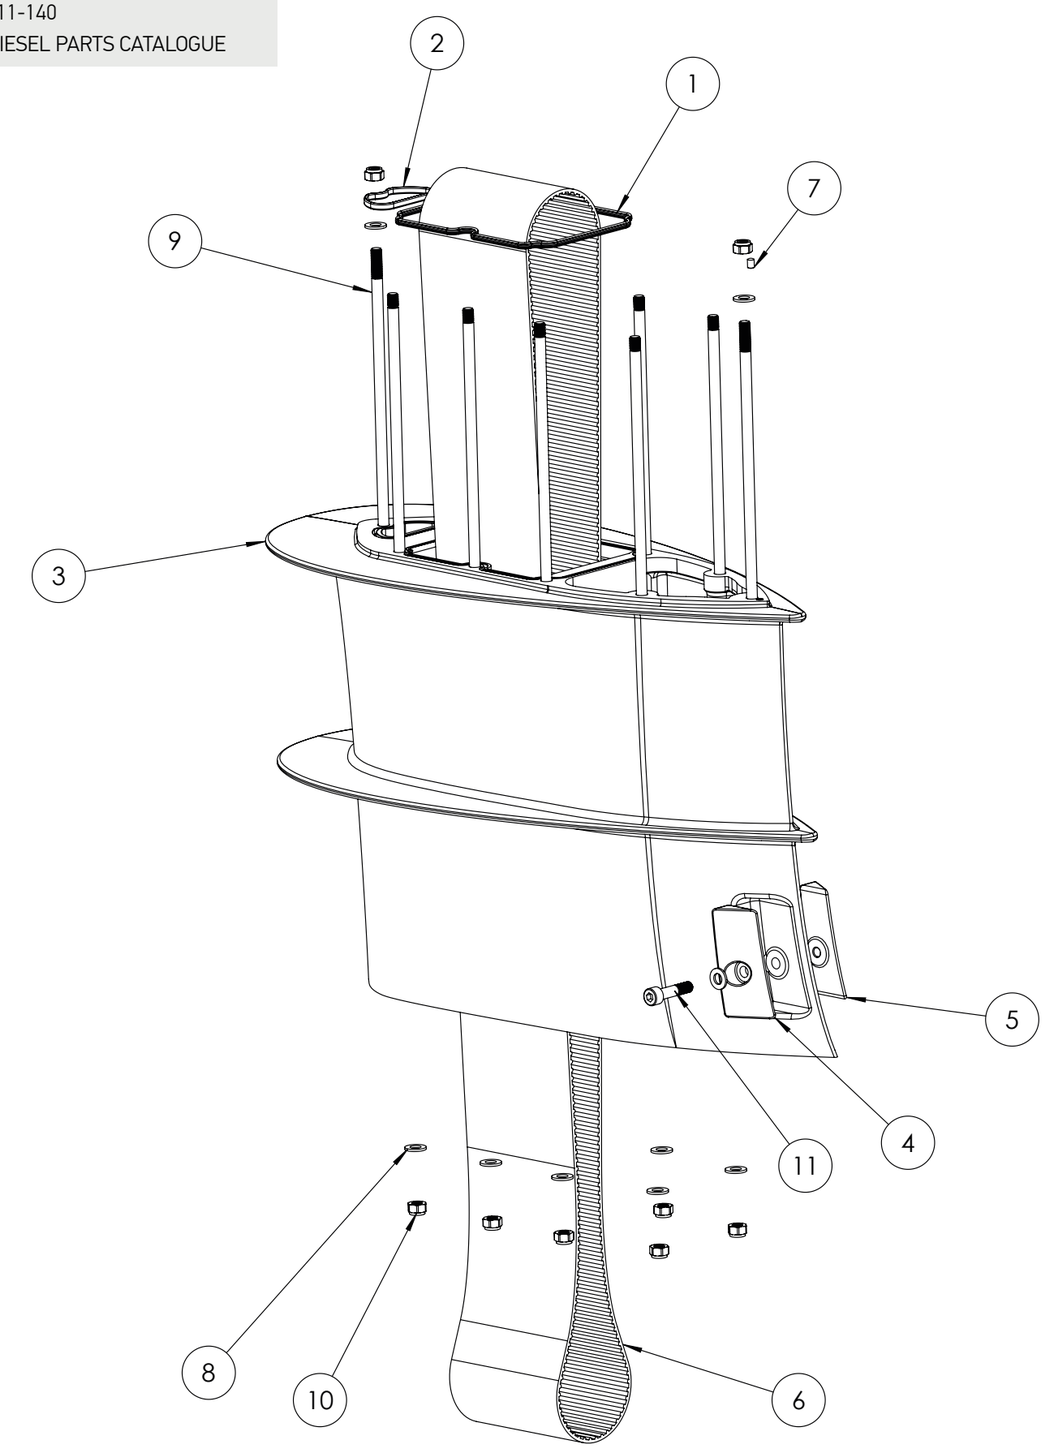

1.2.7 XXL ADAPTER ASSEMBLY
30-0111-140
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-121	Seal	1
2	30-0111-124	Seal	1
3	30-0111-126	Adapter 30 inch	1
4	30-0111-141	Anode port	1
5	30-0111-142	Anode starboard	1
6	30-0111-143	Lower belt - long rig	1
7	30-0122-230	Guide pin	2
8	30-0130-192	Washer	11
9	30-0130-256	Stud bolt	10
10	30-0130-262	Nut	10
11	30-0130-266	Bolt	1

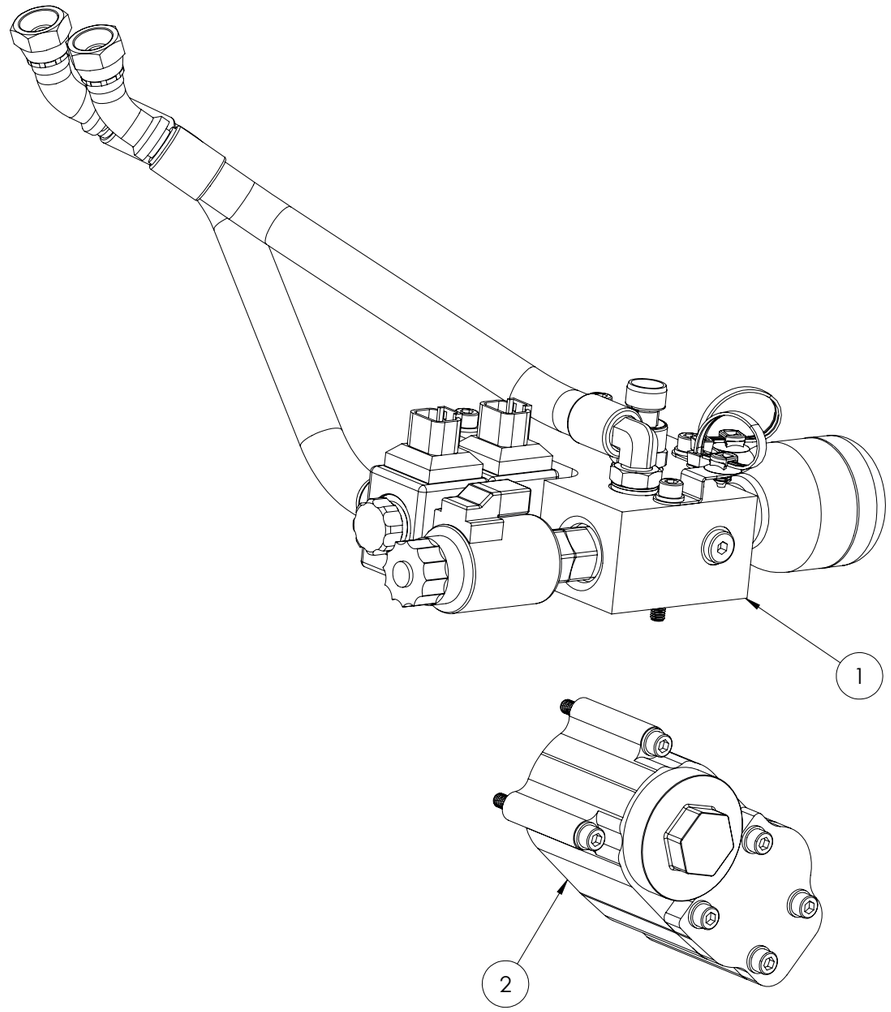

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0115-002	Valve block assembly, hydraulic	1
2	30-0115-032	Hydraulic pump assembly	1

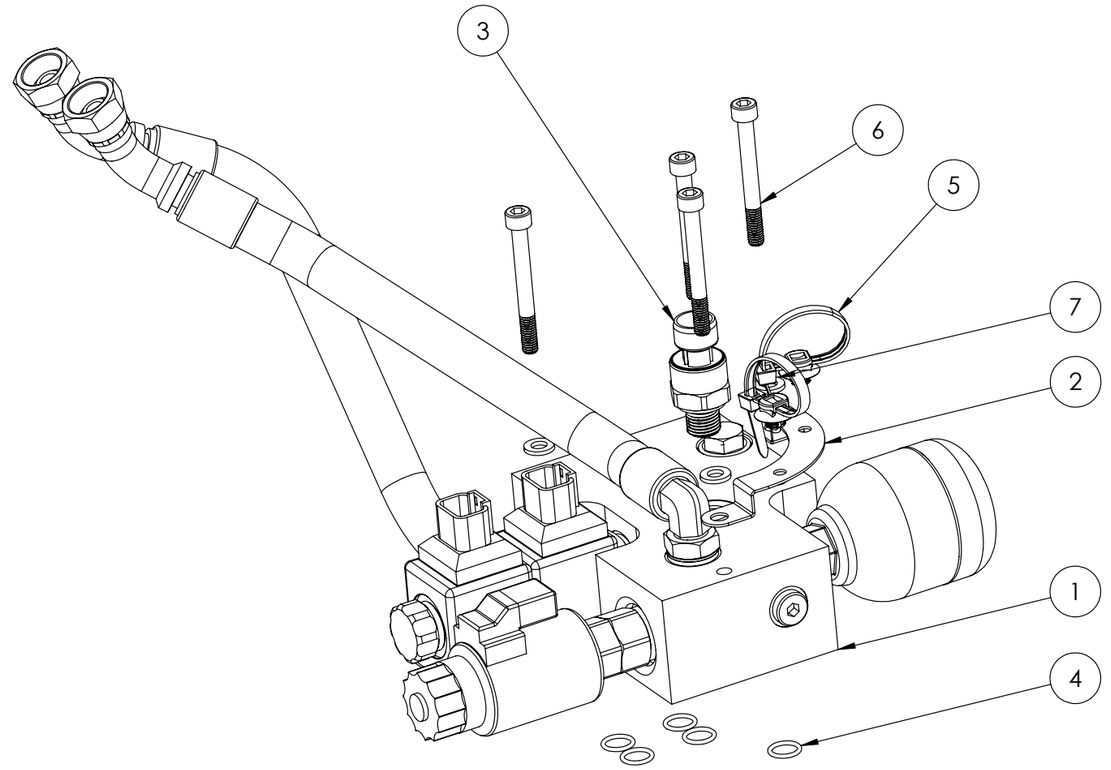

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0115-037	Valve block cpl	1
2	30-0115-047	Cable anchor hydraulic block	1
3	30-0116-052	Gearbox oil pressure sensor	1
4	30-0121-001	O-ring	6
5	30-0122-248	Pine clip	2
6	30-0130-028	Bolt	4
7	30-0130-191	Washer	4

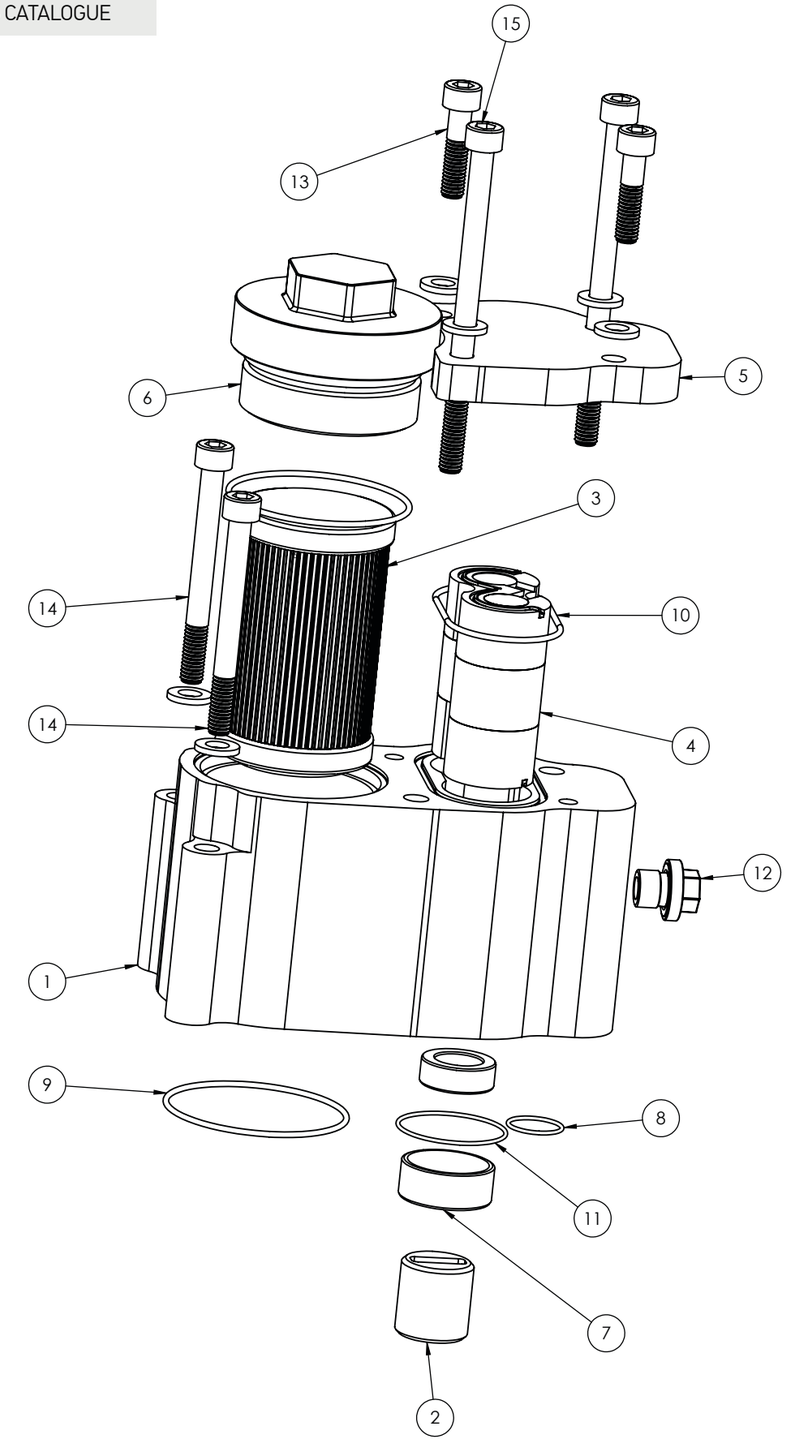

PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0115-026	Hydraulic pump housing	1
2	30-0115-027	Adapter, pumpdrive	1
3	30-0115-028	Hydraulic filter	1
4	30-0115-029	Hydraulic pump	1
5	30-0115-030	Pump cover	1
6	30-0115-031	Filter end cover	1
7	30-0120-037	Bushing	1
8	30-0121-002	O-ring	1
9	30-0121-042	O-ring	2
10	30-0121-043	O-ring	1
11	30-0121-044	O-ring	1
12	30-0122-184	Plug	1
13	30-0130-022	Bolt	2
14	30-0130-029	Bolt	2
15	30-0130-034	Bolt	2
16	30-0130-191	Washer	6

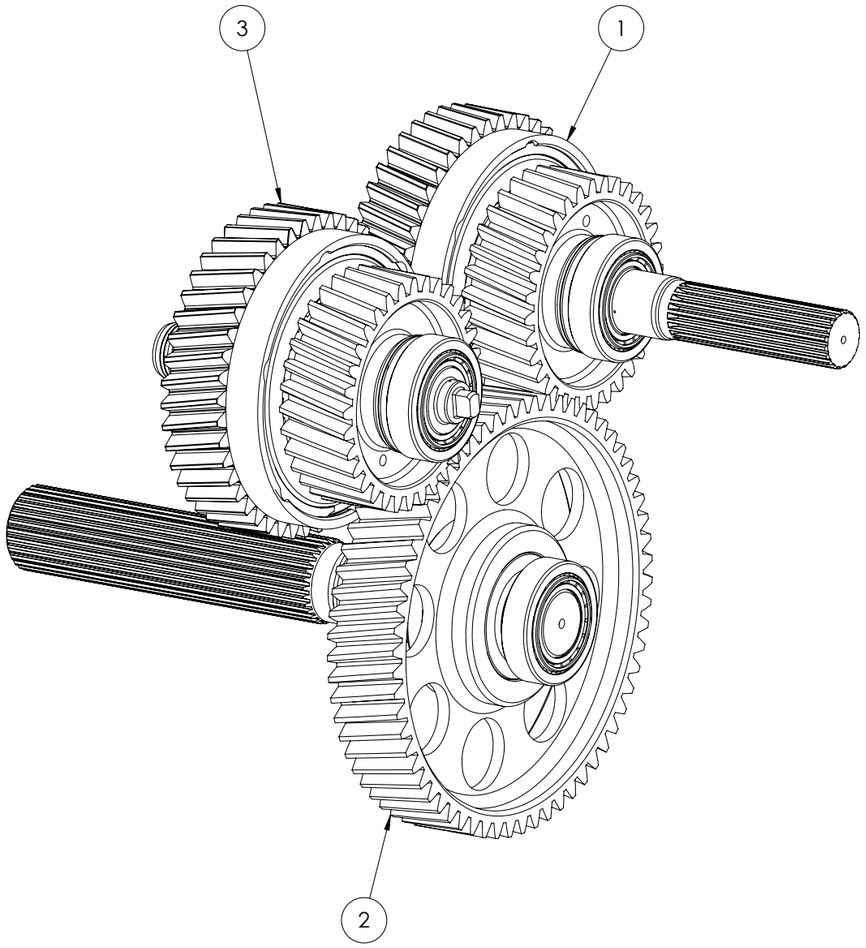

1.3 GEARBOX ASSEMBLY
30-0112-001
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0112-002	Input shaft assembly	1
2	30-0112-005	Output shaft assembly	1
3	30-0112-004	Reverse gear assembly	1

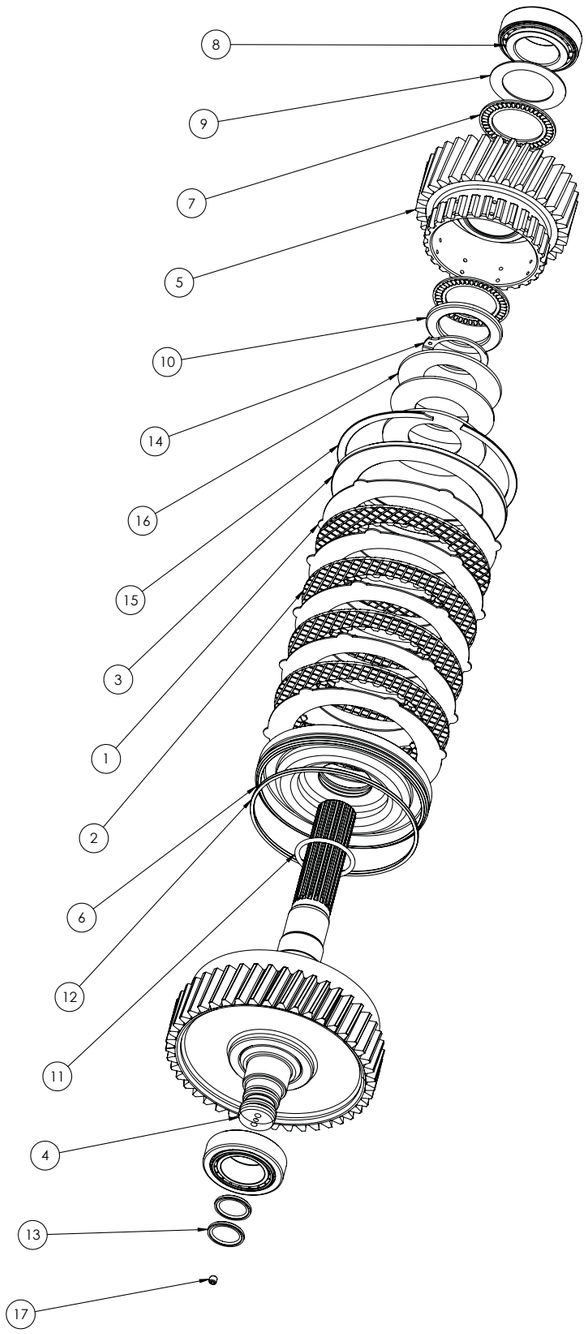

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0112-012	Steel friction disc	5
2	30-0112-013	Sintered friction disc	4
3	30-0112-029	Clutch support disc	1
4	30-0112-039	Clutch input shaft assembly	1
5	30-0112-041	Drive gear assembly	1
6	30-0112-042	Clutch piston	1
7	30-0120-003	Bearing	2
8	30-0120-007	Bearing	2
9	30-0120-009	Washer	1
10	30-0120-010	Washer	1
11	30-0121-006	O-ring	1
12	30-0121-009	O-ring	1
13	30-0121-021	Shaft seal	2
14	30-0122-003	Lock ring	1
15	30-0122-006	Lock ring	1
16	30-0122-039	Disc spring	3
17	30-0122-046	Screw	1

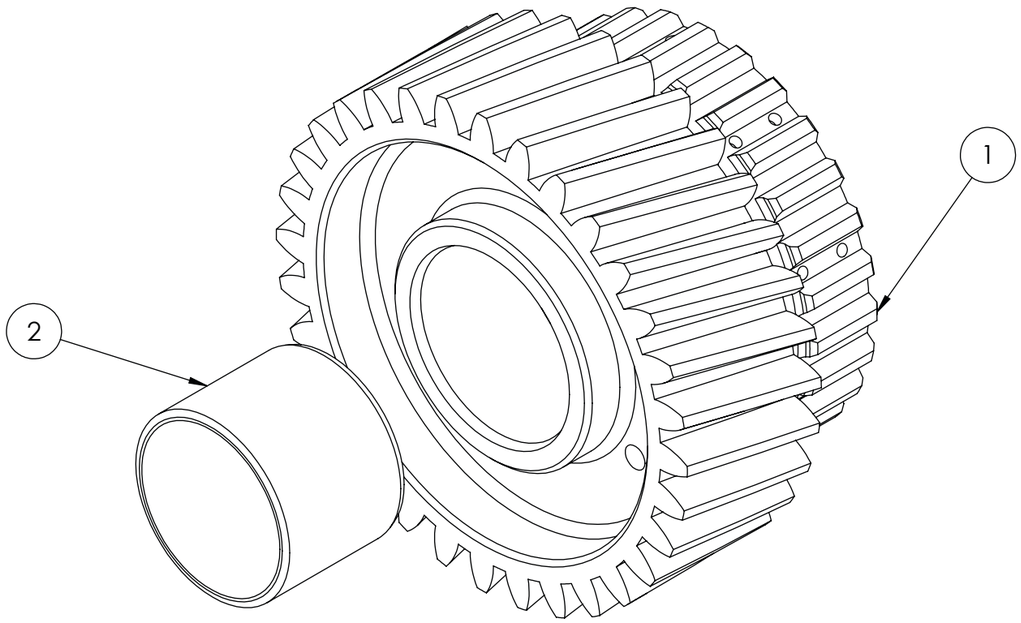

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0112-021	Pulley, drive gear	1
2	30-0120-011	Bushing, drive gear	1

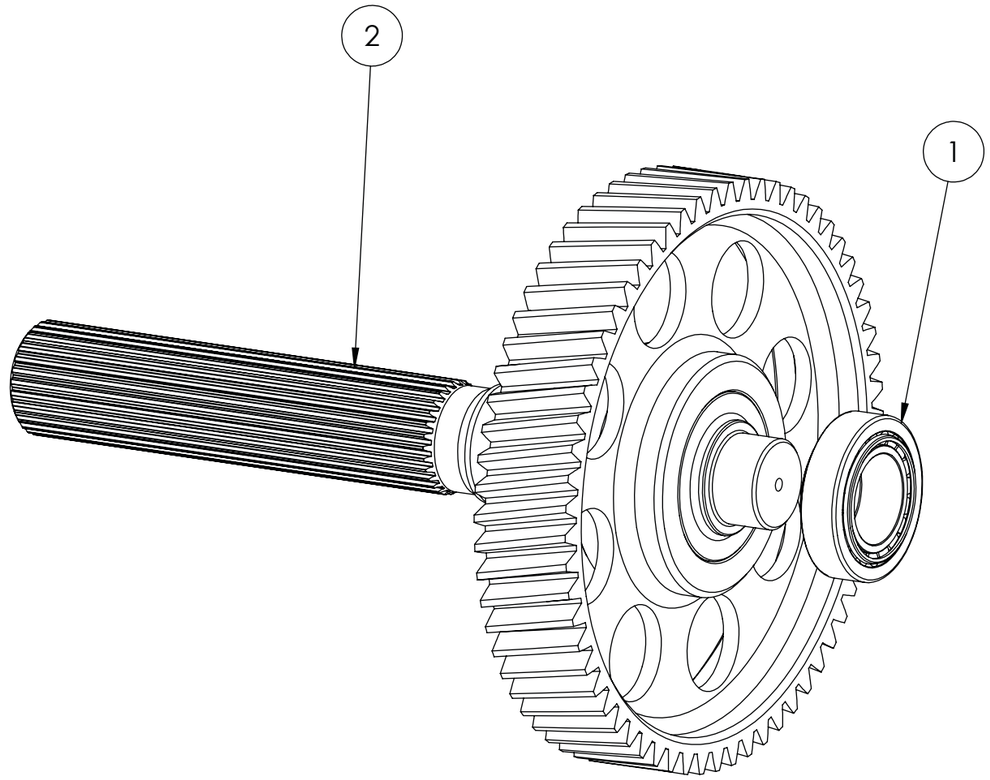

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0120-007	Bearing	1
2	30-0112-038	Output shaft assembly	1

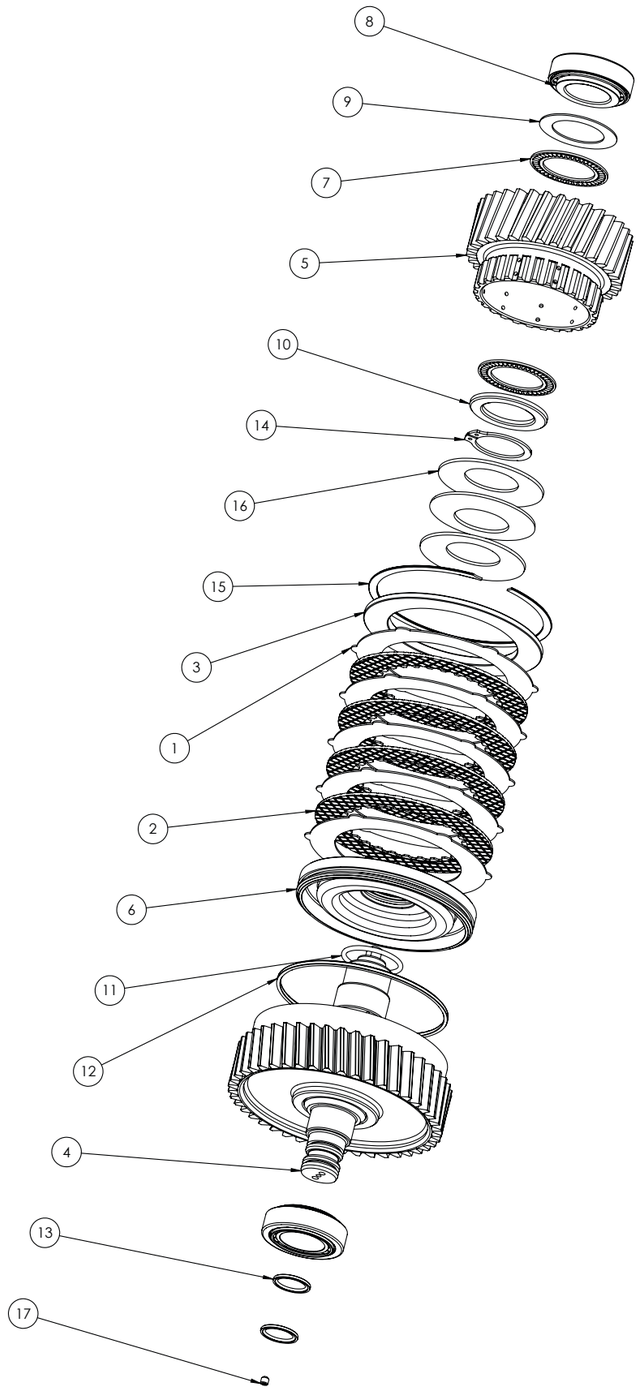

1.3.3 REVERSE GEAR ASSEMBLY
30-0112-004
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0112-012	Steel friction disc	5
2	30-0112-013	Sintered friction disc	4
3	30-0112-029	Clutch support disc	1
4	30-0112-040	Reverse gear clutch assembly	1
5	30-0112-041	Drive gear assembly	1
6	30-0112-042	Clutch piston	1
7	30-0120-003	Bearing	2
8	30-0120-007	Bearing	2
9	30-0120-009	Washer	1
10	30-0120-010	Washer	1
11	30-0121-006	O-ring	1
12	30-0121-009	O-ring	1
13	30-0121-021	Shaft seal	2
14	30-0122-003	Lock ring	1
15	30-0122-006	Lock ring	1
16	30-0122-039	Disc spring	3
17	30-0122-046	Screw	1

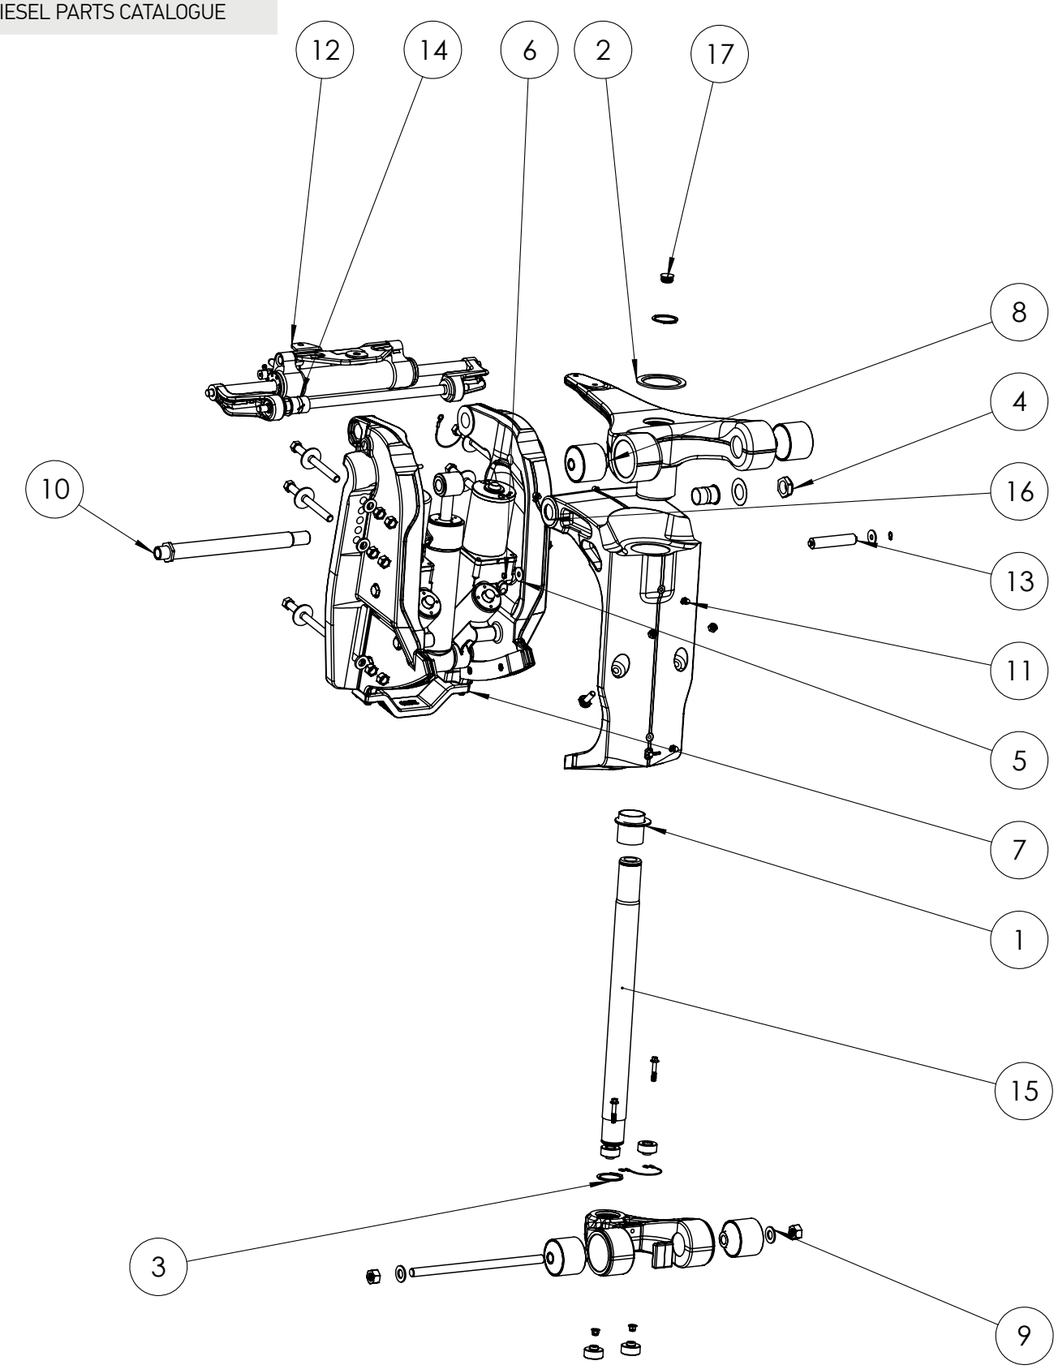

1.4 TRANSOM MOUNT ASSEMBLY
30-0113-001
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0113-011	Lower axial bearing	1
2	30-0113-009	Upper axial bearing	1
3	30-0122-004	Circlip	2
4	30-0130-274	Nut	1
5	30-0130-345	Washer	2
6	30-0122-160	Locking ring	2
7	30-0113-062	Clamp brackets assembly	1
8	30-0113-059	Steering arm assembly	1
9	30-0113-060	Lower yoke assembly	1
10	30-0113-037	Bolt, clamp bracket	1
11	30-0113-061	Swivel bracket assembly	1
12	30-0113-045	Transportation bracket, steering arm	1
13	30-0113-054	Tilt piston rod	1
14	30-0113-041	Swivel bush	2
15	30-0113-004	Steering shaft	1
16	30-0113-055	Swivel shim	2
17	30-0122-253	Plug	1

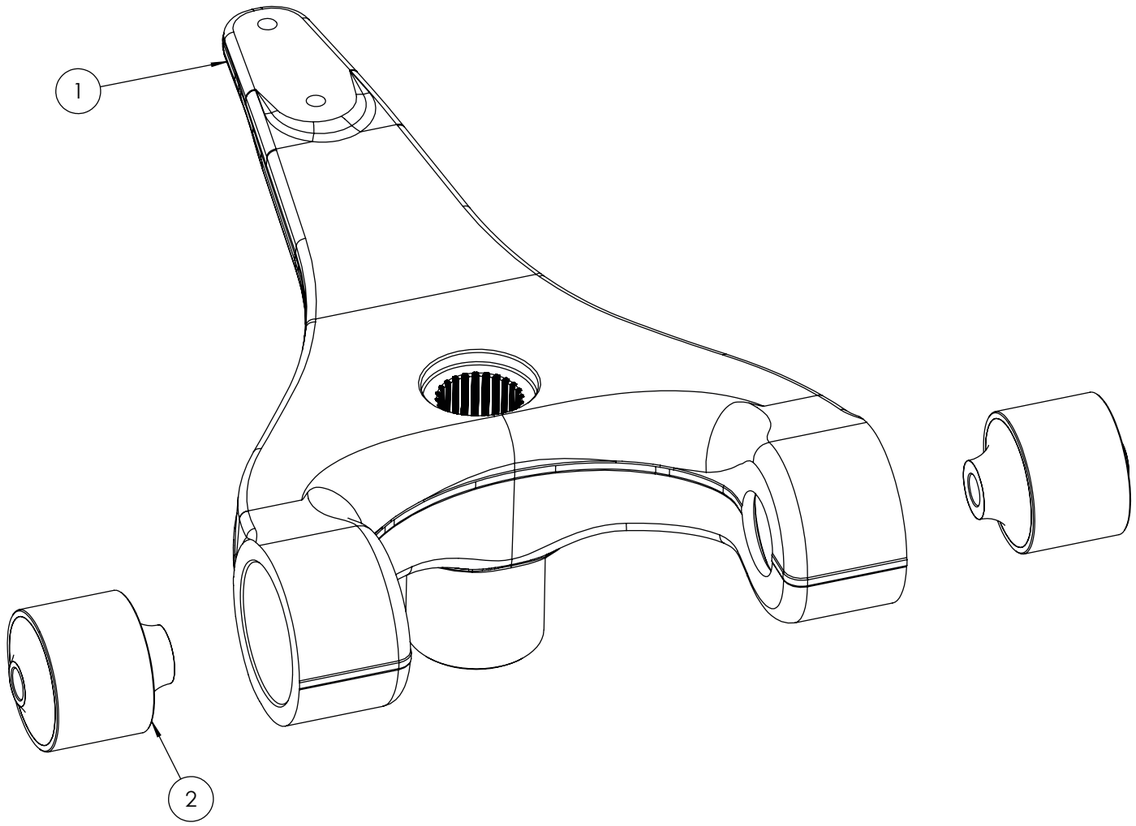

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0113-074	Steering arm	1
2	30-0113-020	Bushing, steering arm	2

1.4.1 STEERING ARM ASSEMBLY
30-0113-059
OXE DIESEL PARTS CATALOGUE

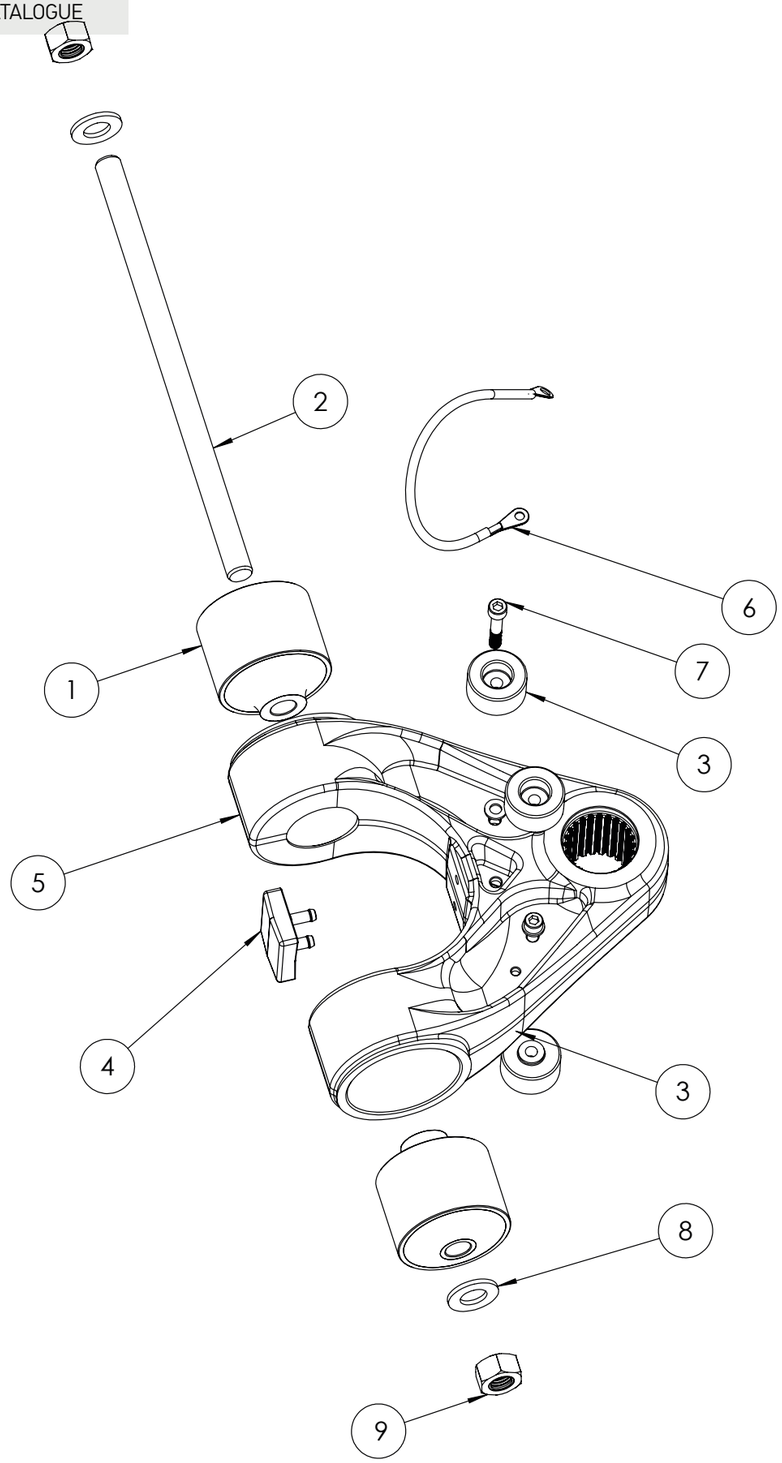

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0113-020	Bushing	2
2	30-0113-033	Transom rod	1
3	30-0113-044	Anode lower yoke	4
4	30-0113-057	Thrust bushing	1
5	30-0113-075	Lower yoke	1
6	30-0122-199	Ground wire	1
7	30-0130-024	Bolt	2
8	30-0130-199	Washer	2
9	30-0130-275	Nut	2

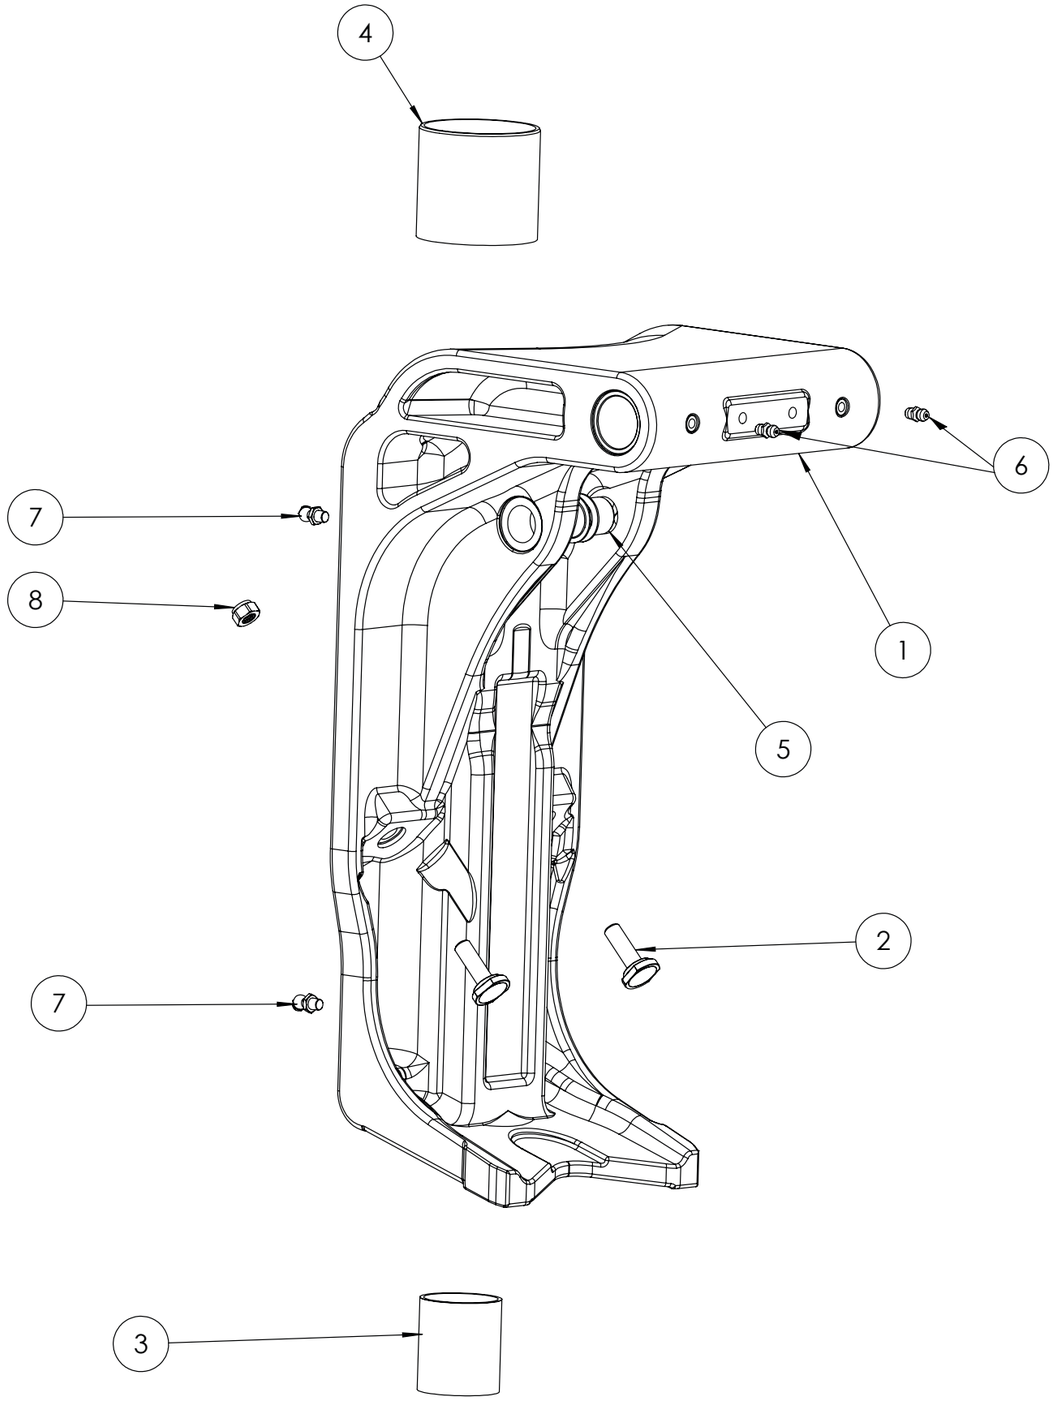

1.4.3 SWIVEL BRACKET ASSEMBLY
30-0113-061
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0113-073	Swivel bracket	1
2	30-0113-031	Bolt thrust receiver	2
3	30-0120-014	Bushing	1
4	30-0120-015	Bushing	1
5	30-0120-018	Bushing	2
6	30-0122-047	Grease point, front	2
7	30-0122-220	Grease point, rear	2
8	30-0130-262	Nut	2

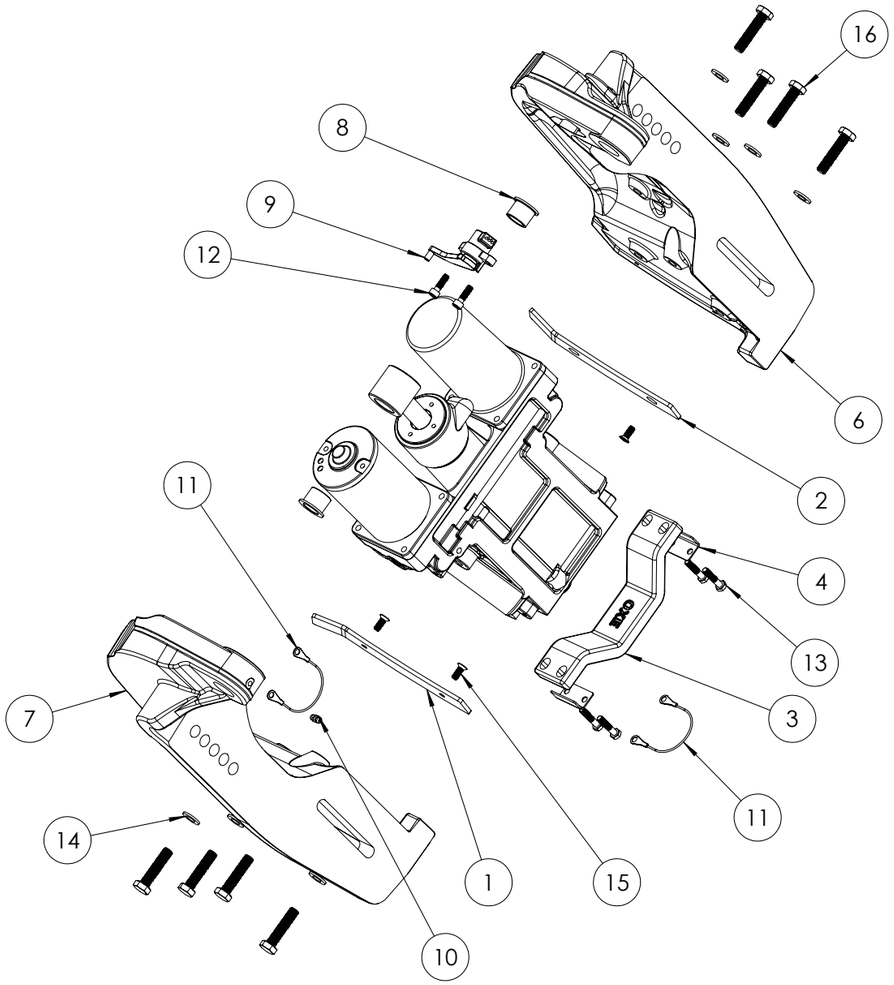

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0113-049	Bushing, right, swivel	1
2	30-0113-050	Bushing, , swivel	1
3	30-0113-052	Transom anode	1
4	30-0113-053	Plate transom anode	2
5	30-0113-068	Transom hydraulics	1
6	30-0113-076	Clamp bracket port	1
7	30-0113-077	Clamp bracket starboard	1
8	30-0113-084	Tilt piston bearing	2
9	30-0116-950	Trim sensor	1
10	30-0122-047	Nipple	1
11	30-0122-199	Ground wire	2
12	30-0130-021	Bolt	2
13	30-0130-103	Bolt	4
14	30-0130-193	Washer	8
15	30-0130-204	Bolt	4
16	30-0130-232	Bolt	8

CLICK ON THE NUMBERS TO NAVIGATE THROUGH THE ASSEMBLIES

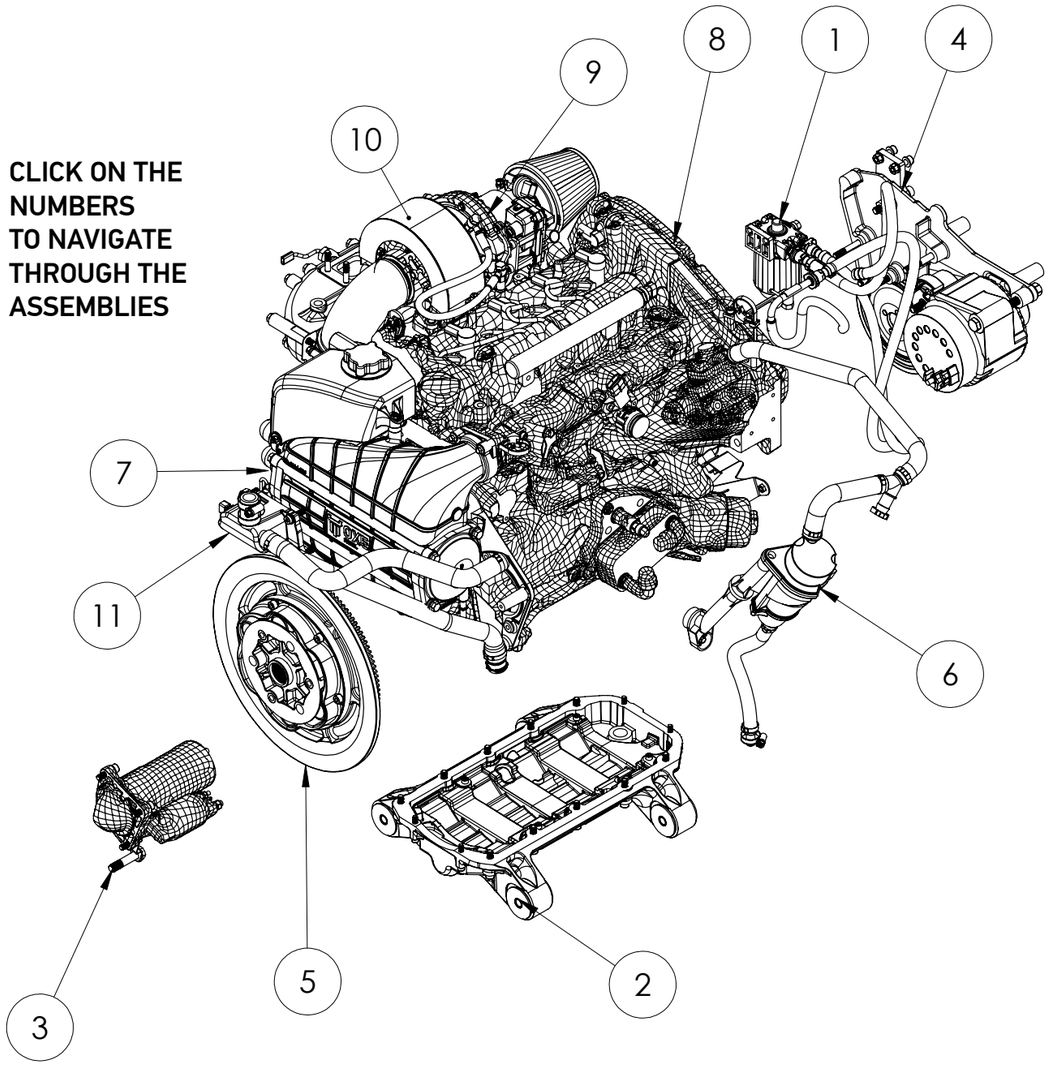

1.5 MARINE ENGINE ASSEMBLY
30-0114-511
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-088	Fuel system assembly	1
2	30-0114-090	Dry sump assembly	1
3	30-0114-094	Starter motor assembly	1
4	30-0114-095	Alternator assembly	1
5	30-0114-101	Flywheel assembly	1
6	30-0114-117	Crankcase ventilation assembly	1
7	30-0114-082	Coolers assembly	1
8	30-0114-100	Engine base assembly	1
9	30-0114-103	Exhaust manifold assembly	1
10	30-0114-079	Turbo assembly	1
11	30-0114-080	Thermostat bypass assembly	1

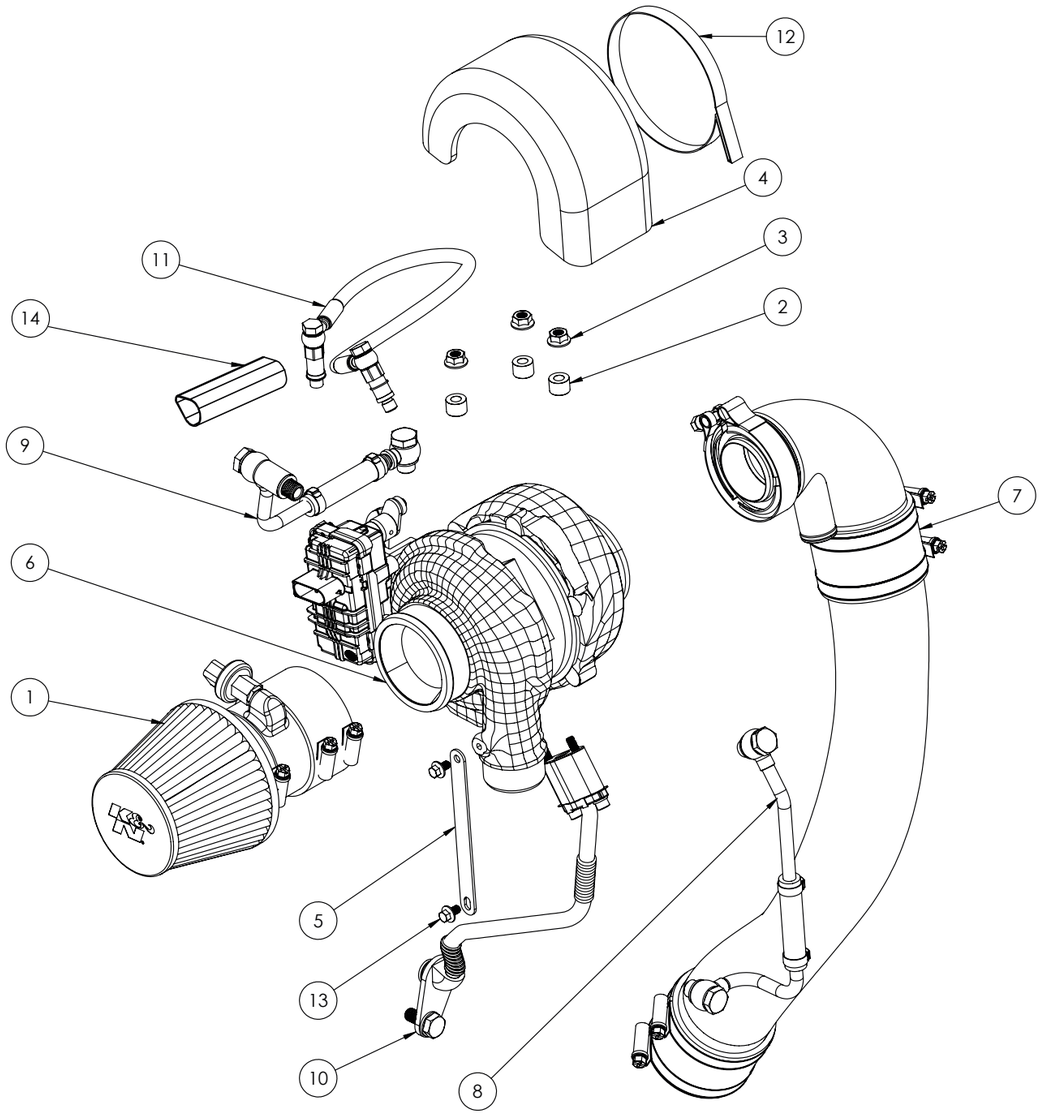

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-081	Air intake assembly	1
2	30-0114-297	Distance	3
3	30-0114-298	Nut	3
4	30-0114-340	Turbo heat cover	1
5	30-0114-387	Retainer	1
6	30-0114-500	Turbocharger	1
7	30-0114-421	Exhaust pipe assembly	1
8	30-0114-510	Turbo water out assembly	1
9	30-0114-423	Turbo water in assembly	1
10	30-0114-424	Turbo oil out assembly	1
11	30-0114-425	Turbo oil in assembly	1
12	30-0114-441	Cable tie Turbo heat cover	2
13	30-0130-229	Bolt	2
14	30-0114-525	Heat Cover, TWI	1

1.5.1.1 AIR INTAKE ASSEMBLY

30-0114-081

OXE DIESEL PARTS CATALOGUE

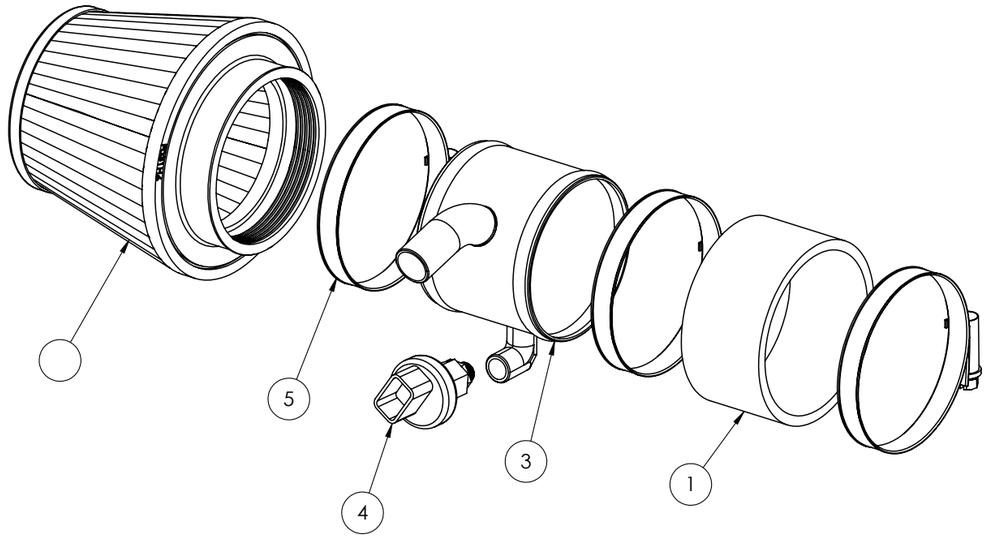

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-219	Air filter hose	1
2	30-0114-427	Air filter	1
3	30-0114-434	Air filter adapter	1
4	30-0116-020	Sensor	1
5	30-0122-056	Hose clamp	3

1.5.1.2 EXHAUST PIPE ASSEMBLY

30-0114-421

OXE DIESEL PARTS CATALOGUE

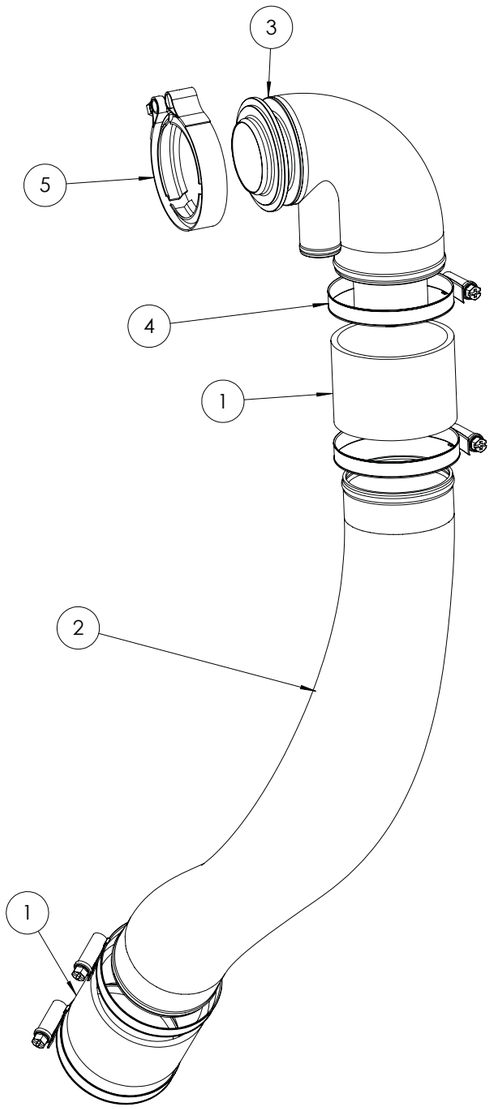

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-087	Flex hose, high temp exhaust	2
2	30-0114-225	Exhaust pipe	1
3	30-0114-234	Exhaust Elbow	1
4	30-0122-056	Hose clamp	4
5	30-0122-102	Clamp, v-band	1

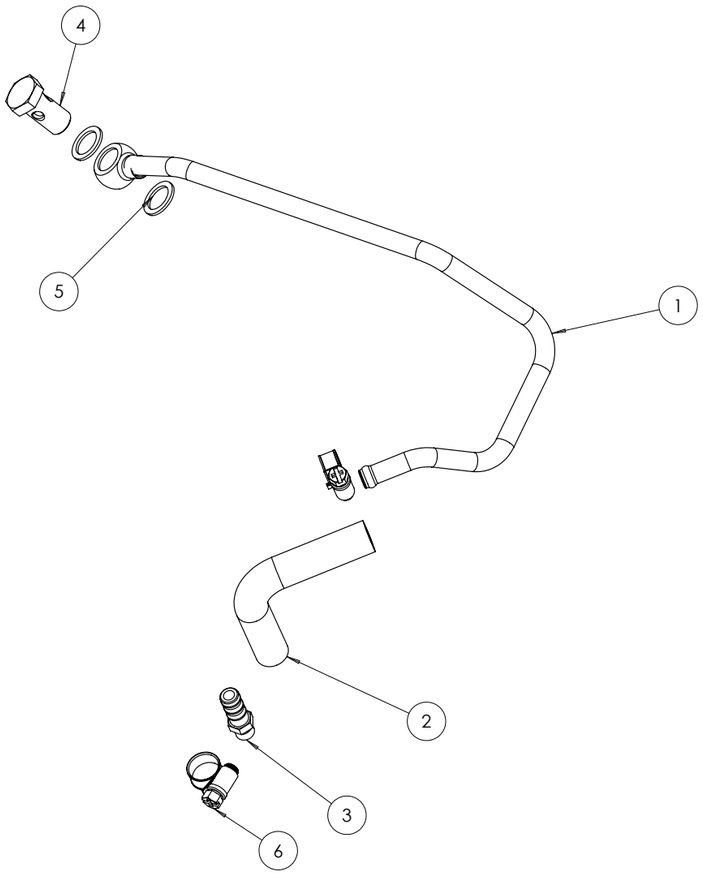

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-508	Hose, main, turbo cooling outlet	1
2	30-0114-509	Connecting hose, turbo cooling outlet	1
3	30-0122-254	Connector, hose, cooling water	1
4	30-0122-103	Banjo bolt	1
5	30-0122-040	Copper washer	2
6	30-0122-052	Hose clamp	2

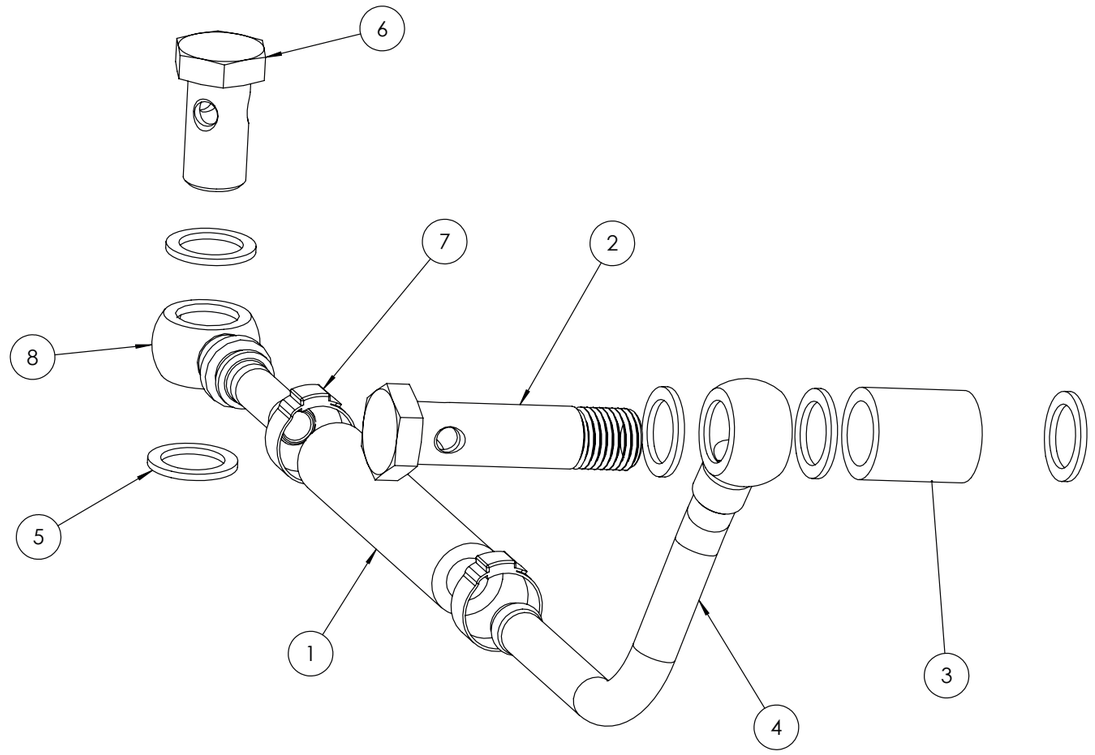

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-393	Hose	1
2	30-0114-430	Banjo bolt	1
3	30-0114-431	Adaptor	1
4	30-0114-432	Pipe	1
5	30-0121-040	Washer	5
6	30-0122-103	Banjo Bolt	1
7	30-0122-156	Hose clamp	2
8	30-0122-222	Banjo	1

1.5.1.5 TURBO OIL OUTLET ASSEMBLY

30-0114-424

OXE DIESEL PARTS CATALOGUE

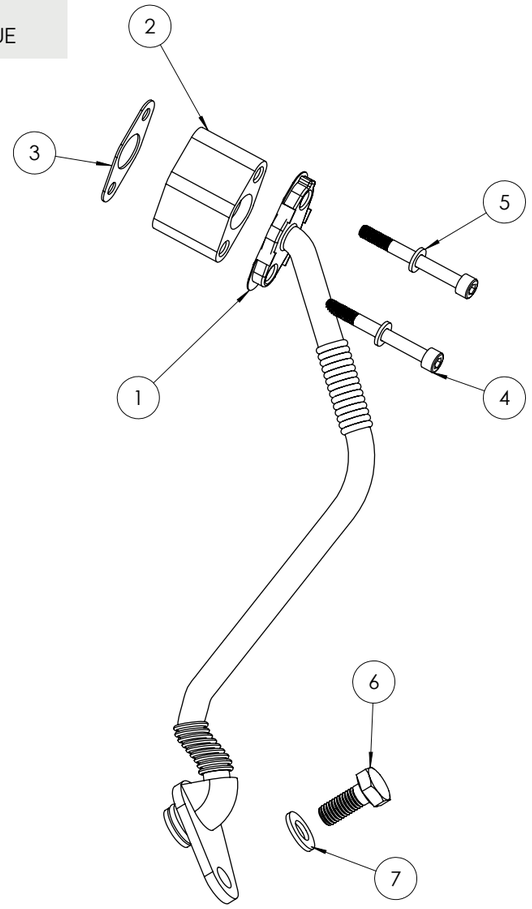

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-134	Oil return pipe	1
2	30-0114-292	Spacer, turbo oil return	1
3	30-0114-428	Gasket	1
4	30-0130-028	Screw	2
5	30-0130-191	Washer	2
6	30-0130-153	Screw	1
7	30-0130-193	Washer	1

1.5.1.6 TURBO OIL INLET ASSEMBLY

30-0114-425

OXE DIESEL PARTS CATALOGUE

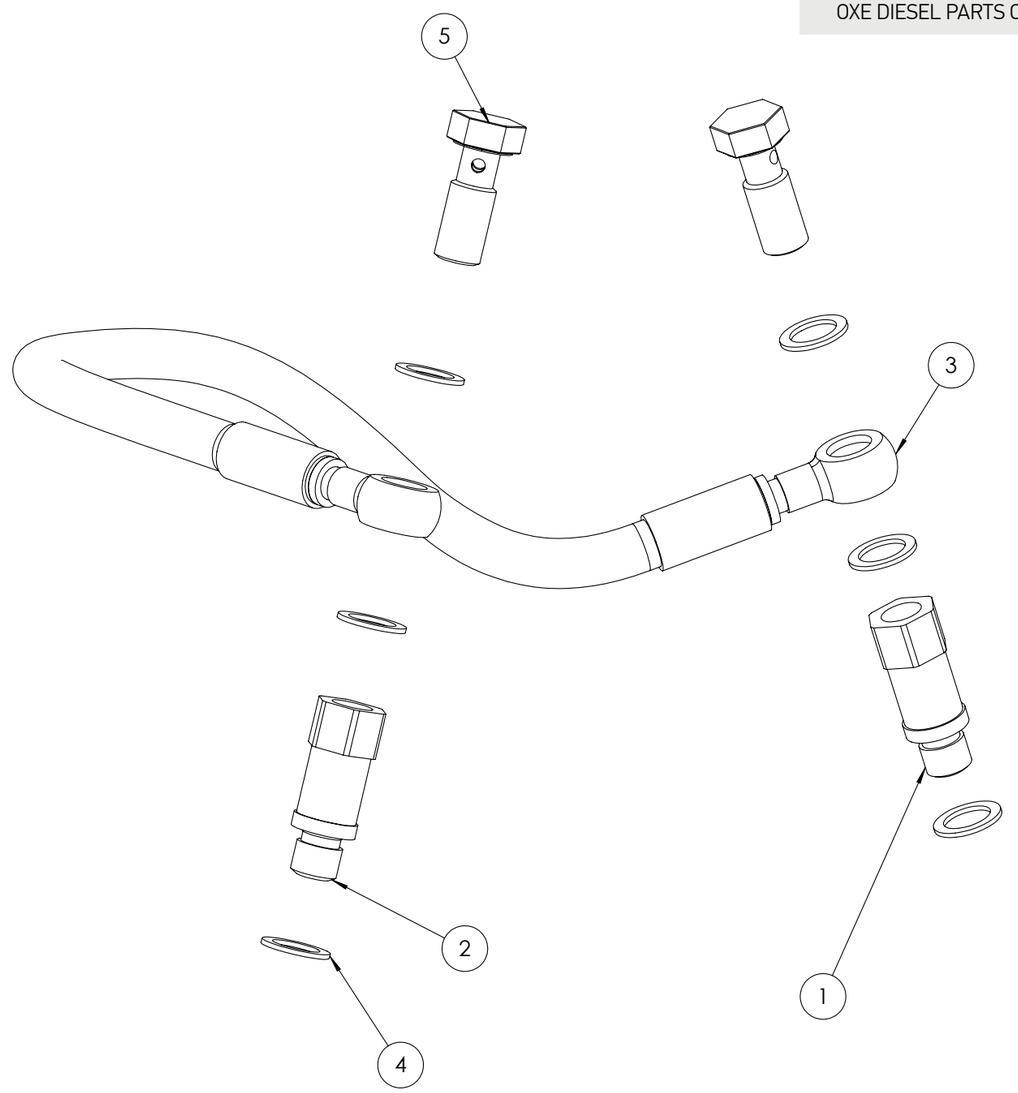

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-312	Adaptor, turbo oil inlet	1
2	30-0114-313	Adapter	1
3	30-0114-323	Hose, turbo oil feed	1
4	30-0121-052	Washer	6
5	30-0122-141	Banjo screw	2

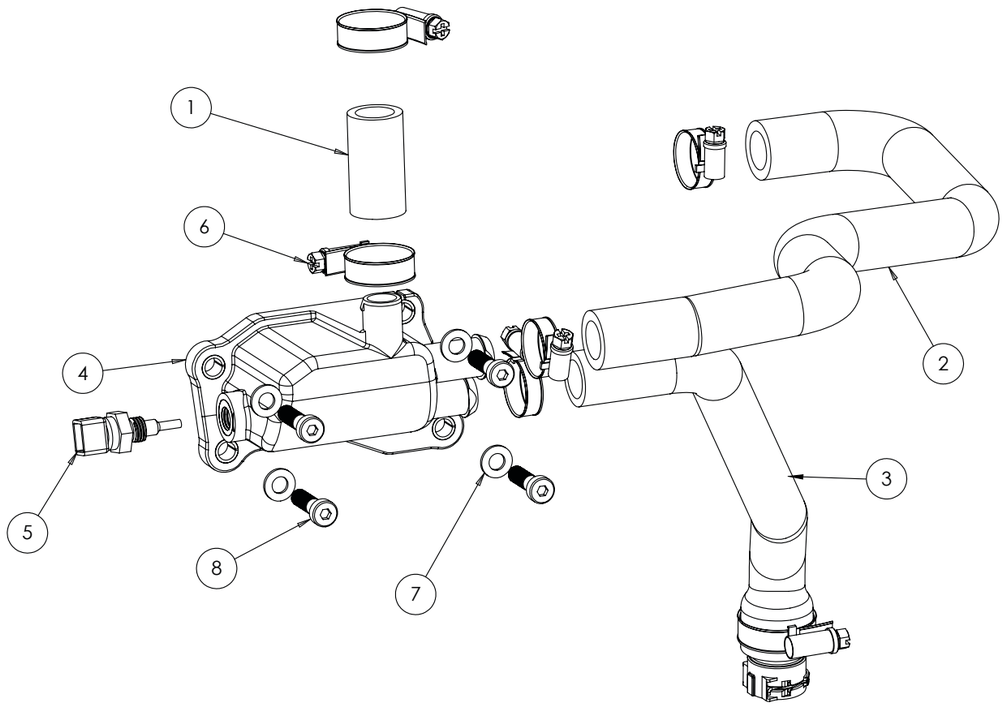

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-084	Hose, expansion tank	1
2	30-0114-124	Hose, oil cooler outlet	1
3	30-0114-412	Hose , oil cooler inlet	1
4	30-0114-414	Thermostat bypass housing	1
5	30-0116-080	Sensor, coolant temp	1
6	30-0122-055	Hose clamp	2
7	30-0130-192	Washer	4
8	30-0130-228	Bolt	4

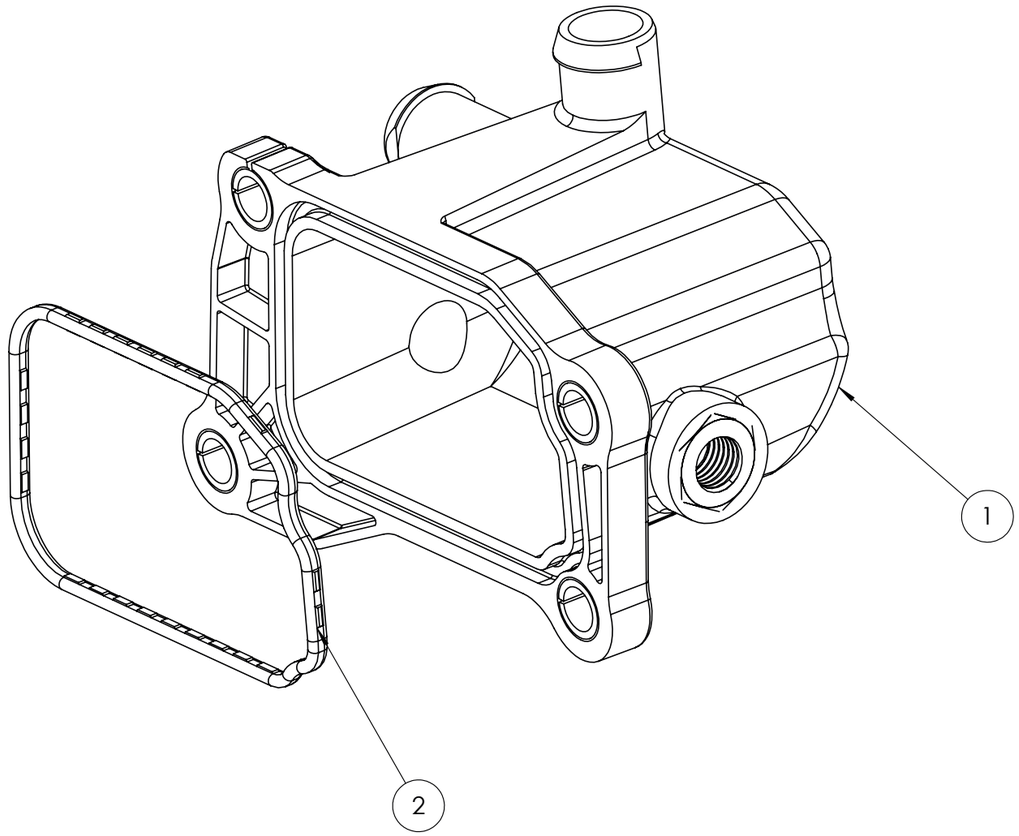

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-415	Thermostat bypass	1
2	30-0114-416	Seal	1

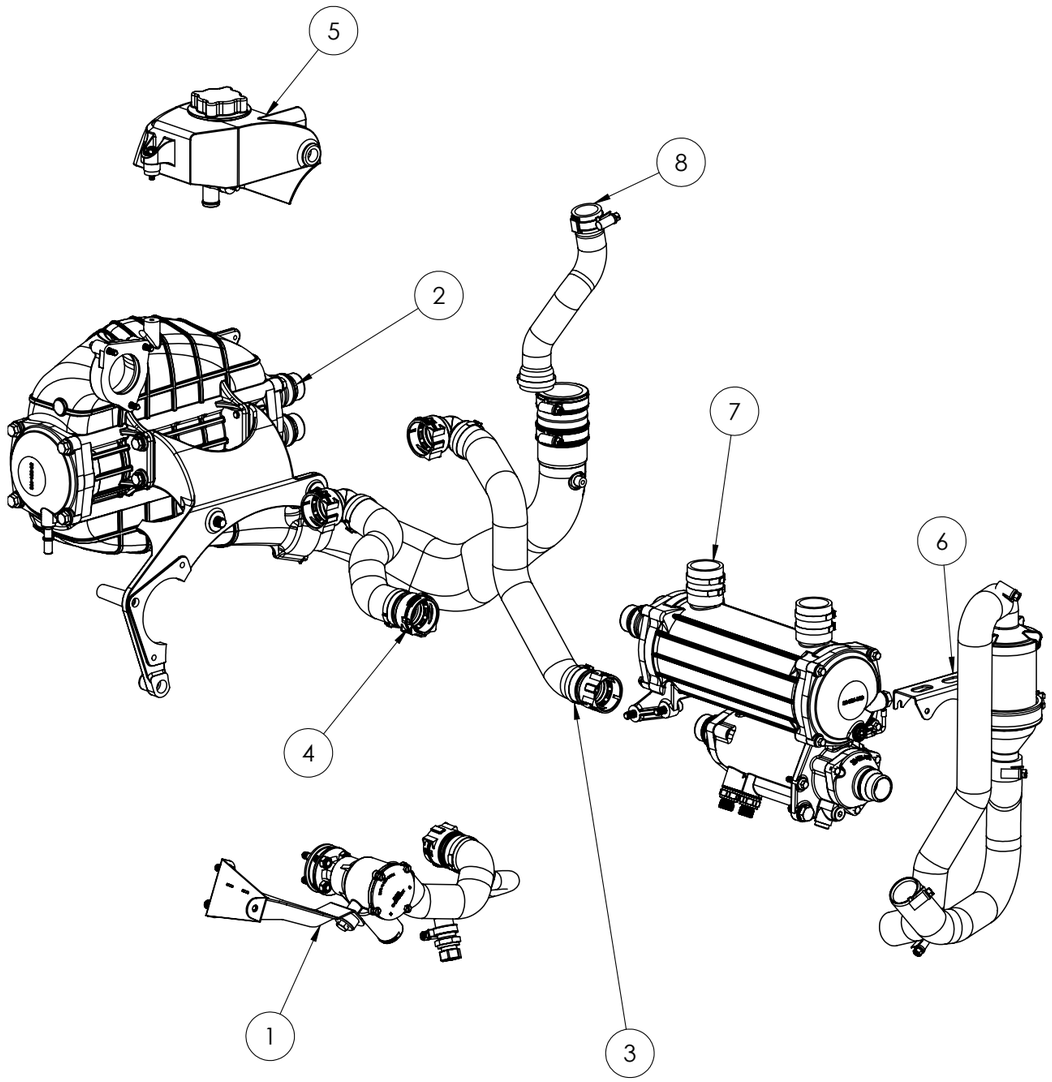

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-085	Water pump assembly	1
2	30-0114-148	Intercooler assembly	1
3	30-0114-177	Intercooler in hose cpl	1
4	30-0114-178	intercooler out hose cpl	1
5	30-0114-188	Expansion tank assembly	1
6	30-0114-196	Sea water filter assembly	1
7	30-0114-199	Heat exchanger assembly	1
8	30-0114-245	HX out hose cpl	1

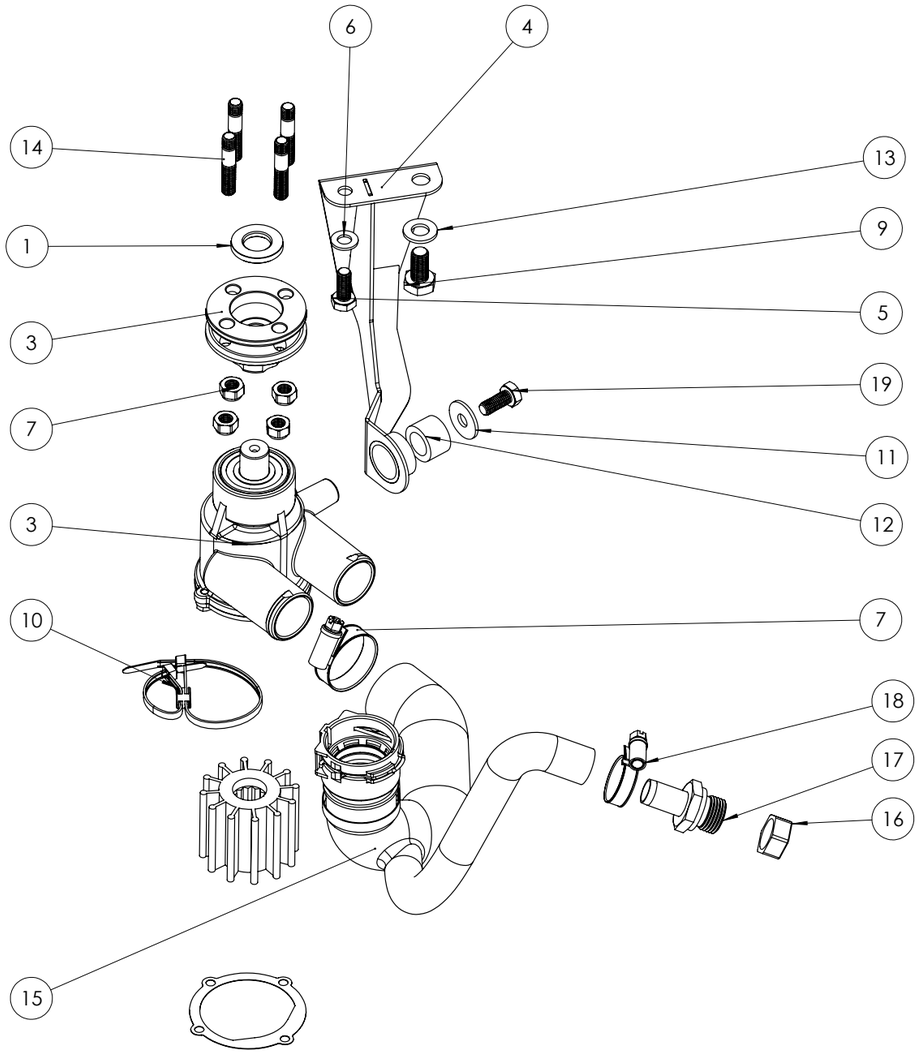

1.5.3.1 SEA WATER PUMP ASSEMBLY
30-0114-085
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-045	Drive flange, sea water pump	1
2	30-0114-053	Guide washer, sea water pump	1
3	30-0114-059	Water pump cpl	1
4	30-0114-130	Bushing, water pump	1
5	30-0114-273	Bracket	1
6	30-0114-491	Pump out hose	1
7	30-0122-050	Hose clamp	1
8	30-0130-121	Bolt	1
9	30-0130-152	Bolt	1
10	30-0130-192	Washer	1
11	30-0130-345	Washer	1
12	30-0130-262	Nut	4
13	30-0130-340	Bolt	4
14	30-0122-250	Clip	1
15	30-0130-193	Washer	1
16	30-0122-242	End cap	1
17	30-0122-241	Fitting, hose	1
18	30-0122-049	Hose clamp	1
19	30-0130-380	Screw	1

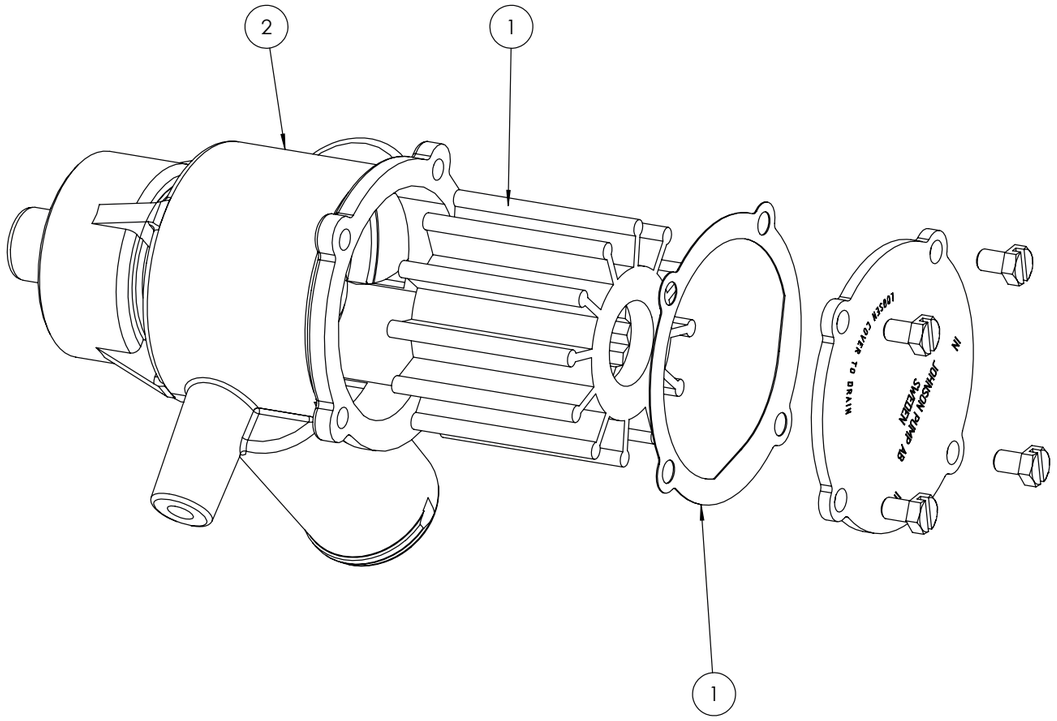

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0190-912	Impeller kit	1
2	30-0114-466	Water pump housing	1

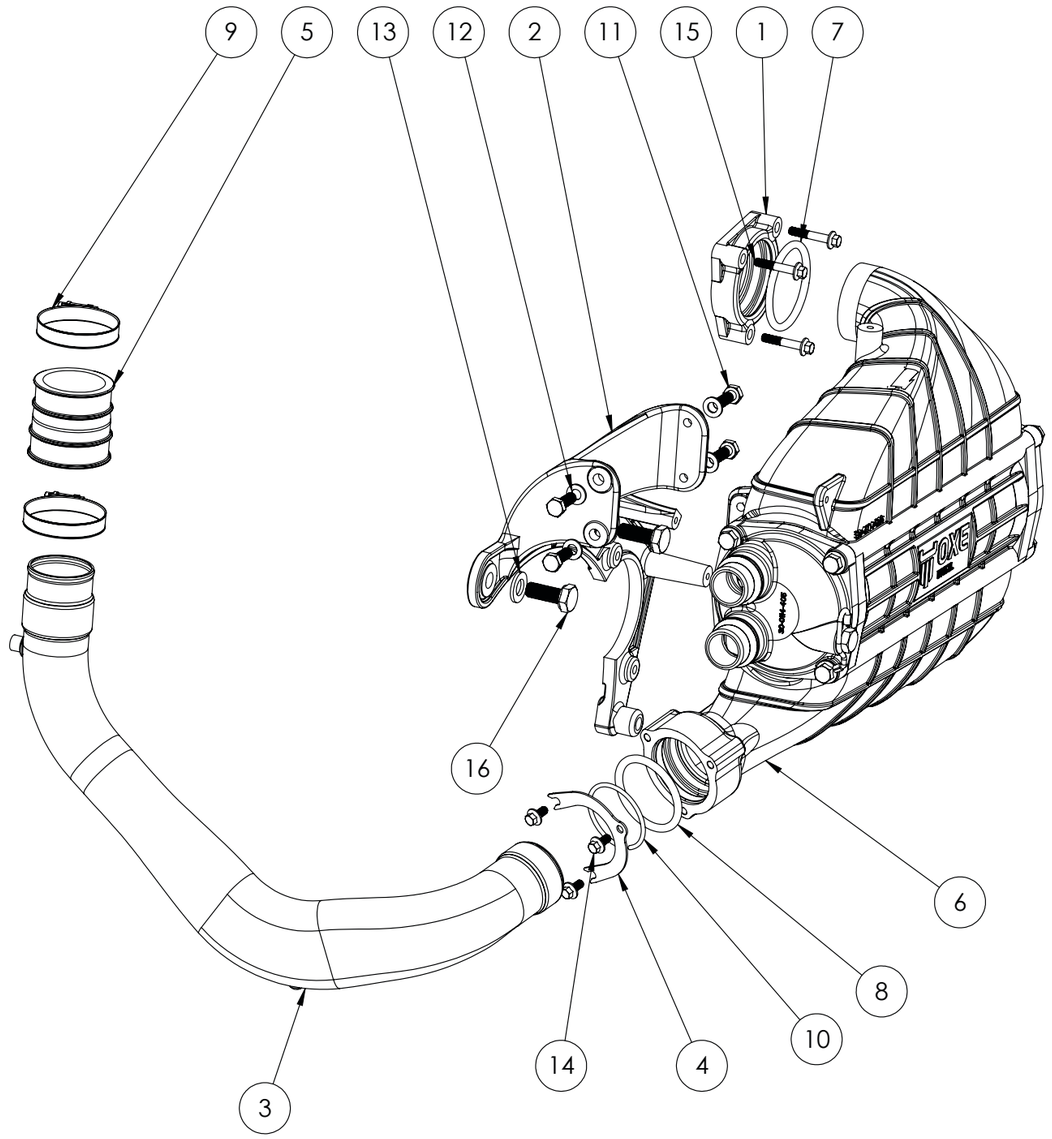

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-174	Intake flange	1
2	30-0114-175	Intercooler bracket	1
3	30-0114-385	Pipe, air pressure	1
4	30-0114-386	Intercooler retainer, pressure pipe	1
5	30-0114-388	Hose, pressure pipe	1
6	30-0114-408	Intercooler	1
7	30-0121-029	O-ring	1
8	30-0121-066	O-ring	1
9	30-0122-054	Hose clamp	2
10	30-0122-221	Spacer, o-ring	1
11	30-0130-122	Bolt	4
12	30-0130-192	Washer	4
13	30-0130-194	Washer	2
14	30-0130-240	Bolt	3
15	30-0130-246	Bolt	3
16	30-0130-325	Bolt	2

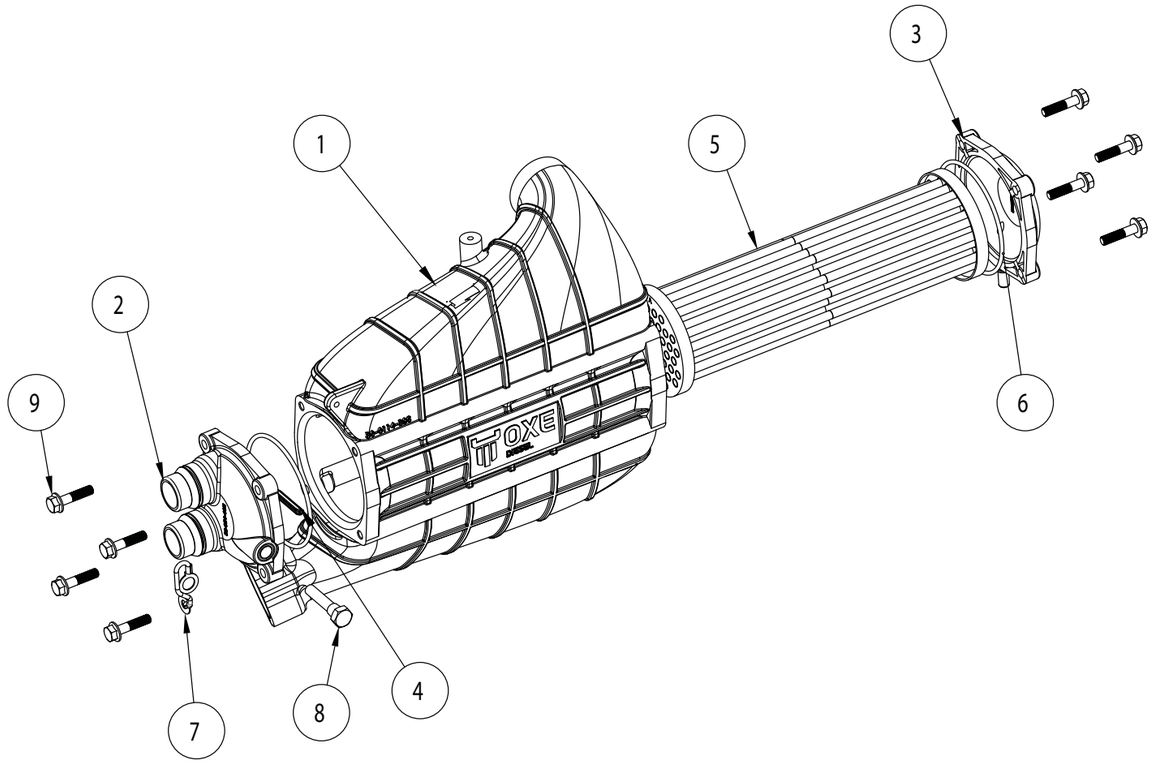

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-396	Intercooler housing	1
2	30-0114-405	End cap, water inlet/outlet, intercooler	1
3	30-0114-406	End cap, intercooler	1
4	30-0114-420	Seal, Intercooler cap divider	1
5	30-0114-407	Core, intercooler	1
6	30-0121-069	O-ring, intercooler	2
7	30-0122-225	Ground wire, intercooler	1
8	30-0122-226	Anode, intercooler	1
9	30-0130-302	Bolt	8

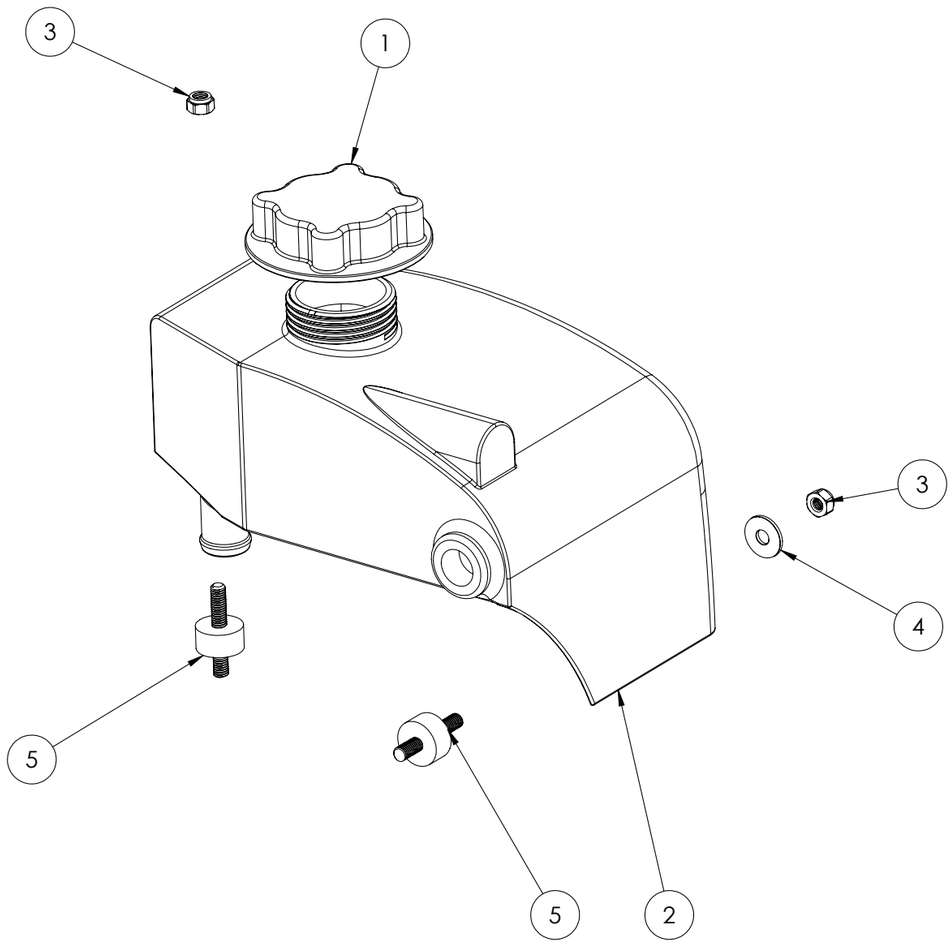

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-078	Cap, expansion bottle	1
2	30-0114-183	Expansion tank	1
3	30-0130-261	Nut	2
4	30-0130-347	Washer	1
5	30-0122-269	Rubber mounting	2

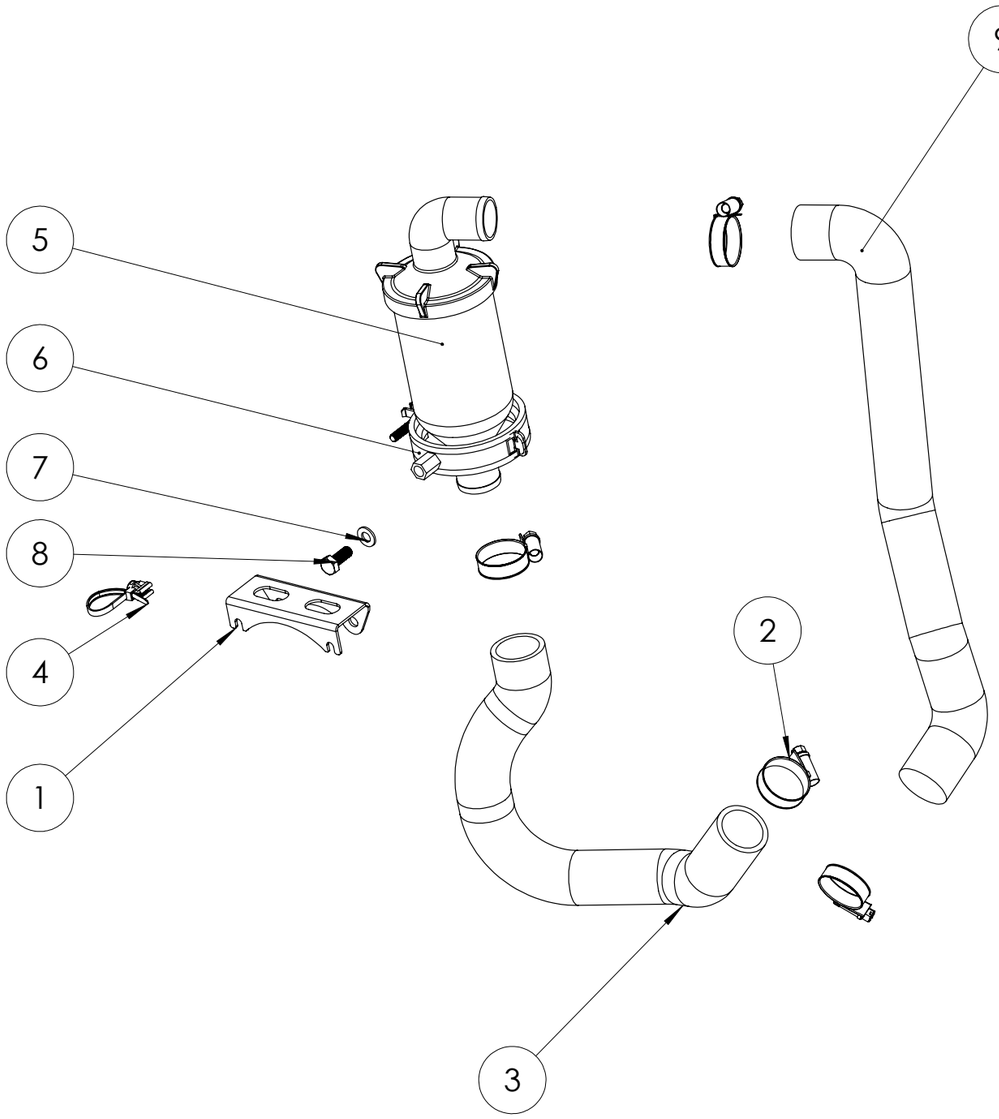

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-410	Bracket, sea water strainer	1
2	30-0122-050	Hose clamp	4
3	30-0114-261	Hose, sea water inlet	1
4	30-0122-258	Clip	1
5	30-0114-498	Sea water strainer	1
6	30-0114-522	Holder, sea water strainer	1
7	30-0130-192	Washer	1
8	30-0130-121	Bolt	1
9	30-0114-518	Hose, sea water outlet	1

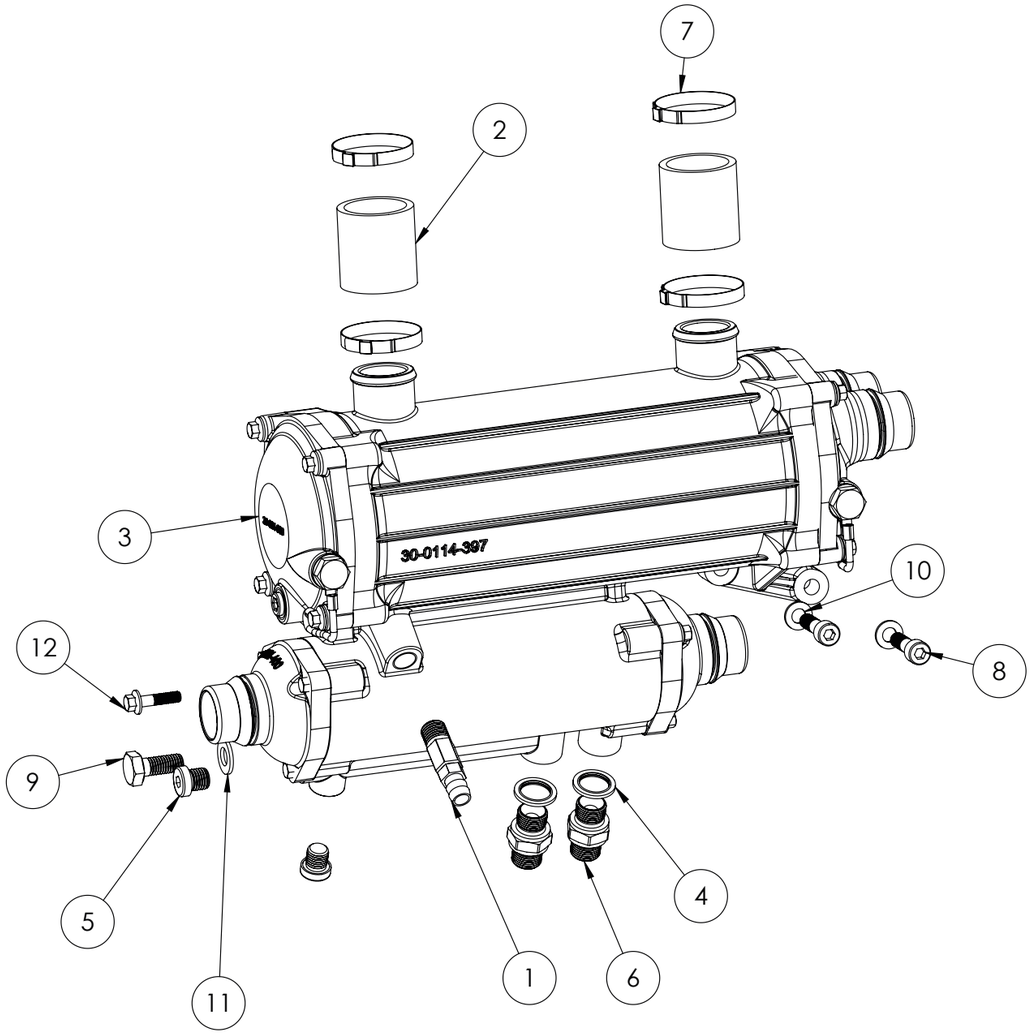

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-208	Valve, drain	1
2	30-0114-290	Hose, coolant	2
3	30-0114-403	Heat exchanger	1
4	30-0121-050	Seal washer	2
5	30-0122-135	Plug	2
6	30-0122-137	Plug	2
7	30-0122-140	Hose clamp	4
8	30-0130-043	Bolt	2
9	30-0130-153	Bolt	1
10	30-0130-192	Washer	2
11	30-0130-193	Washer	1
12	30-0130-243	Bolt	1

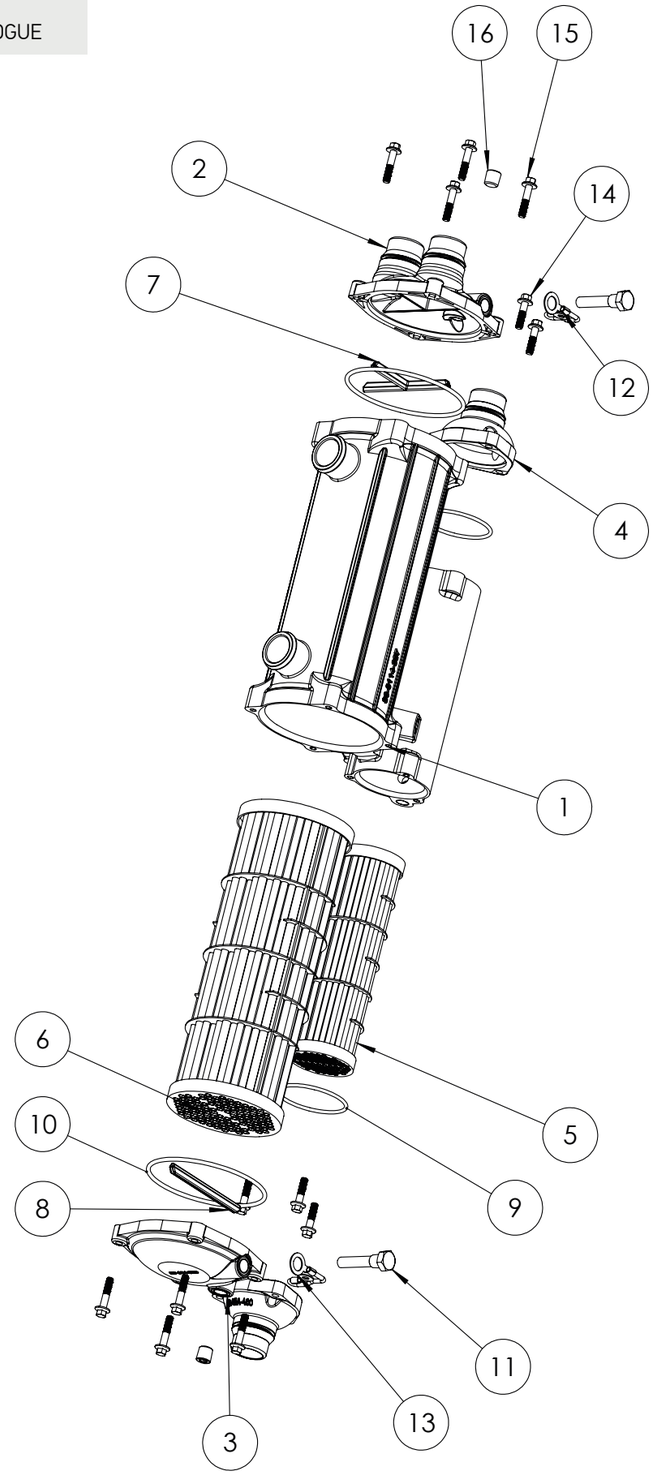

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-397	Heat exchanger housing	1
2	30-0114-398	End cap, fliud inlet/outlet, heat exchanger	1
3	30-0114-399	End cap, heat exchanger	1
4	30-0114-400	End cap, oil inlet/outlet, oil cooler	2
5	30-0114-401	Hydraulic oil cooler bundle	1
6	30-0114-402	Heat exchanger bundle	1
7	30-0114-409	Rear end-cap divider seal	1
8	30-0114-411	Front end-cap divider seal	1
9	30-0121-067	Hydraulic oil cooler o-ring	2
10	30-0121-068	Heat exchanger o-ring	2
11	30-0122-226	Anode	2
12	30-0122-227	Heat exhanger ground wire front	1
13	30-0122-229	Heat exhanger ground wire rear	1
14	30-0130-243	Bolt	6
15	30-0130-244	Bolt	8
16	30-0130-370	Plug	2

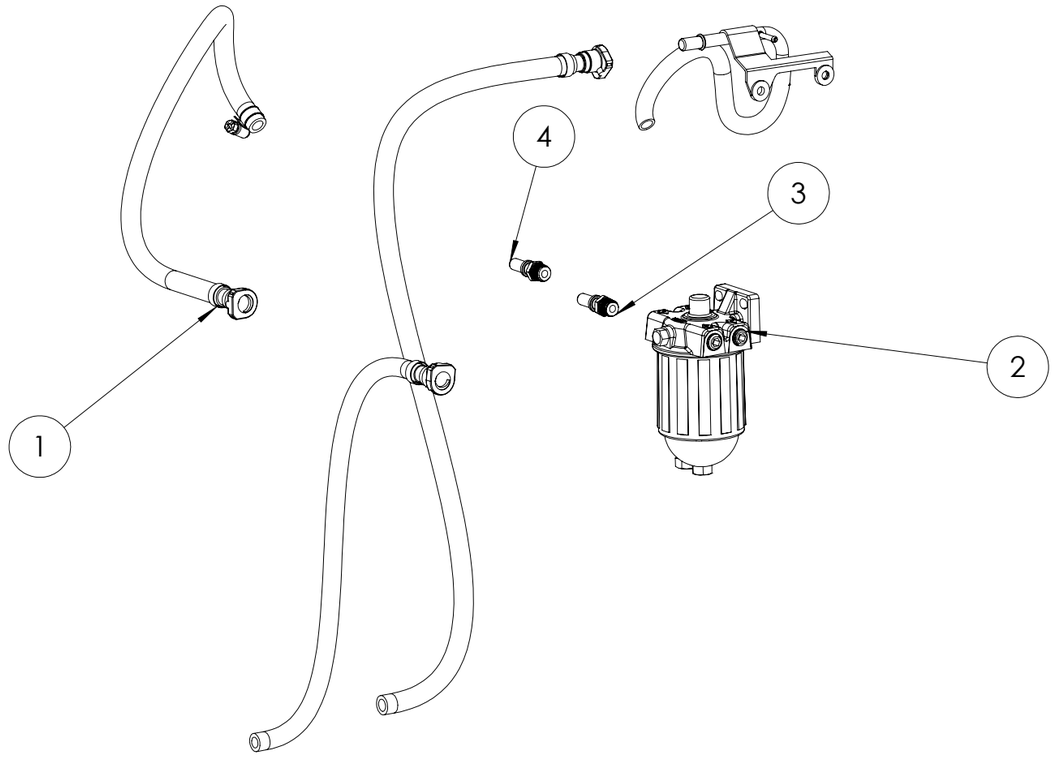

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-484	Hose, fuel inlet	1
2	30-0114-488	Fuel filter	1
3	30-0114-485	Quick connector, hose	1
4	30-0114-489	Quick connector, hose	1

1.5.4 FUEL SYSTEM ASSEMBLY
30-0114-088
OXE DIESEL PARTS CATALOGUE

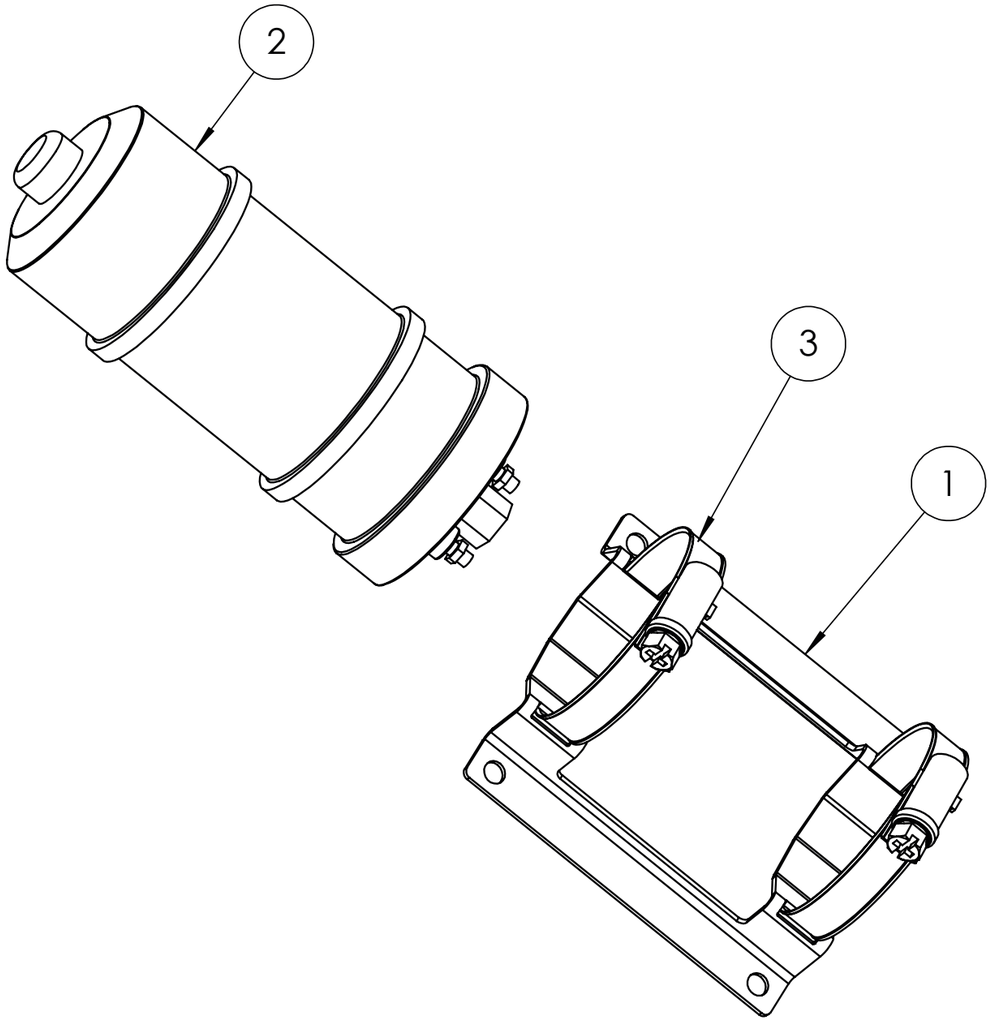

1.5.4.1 EXTERNAL FUEL PUMP KIT
30-0114-465
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-445	Bracket	1
2	30-0114-444	Fuel pump	1
3	30-0122-054	Hose clamp	2

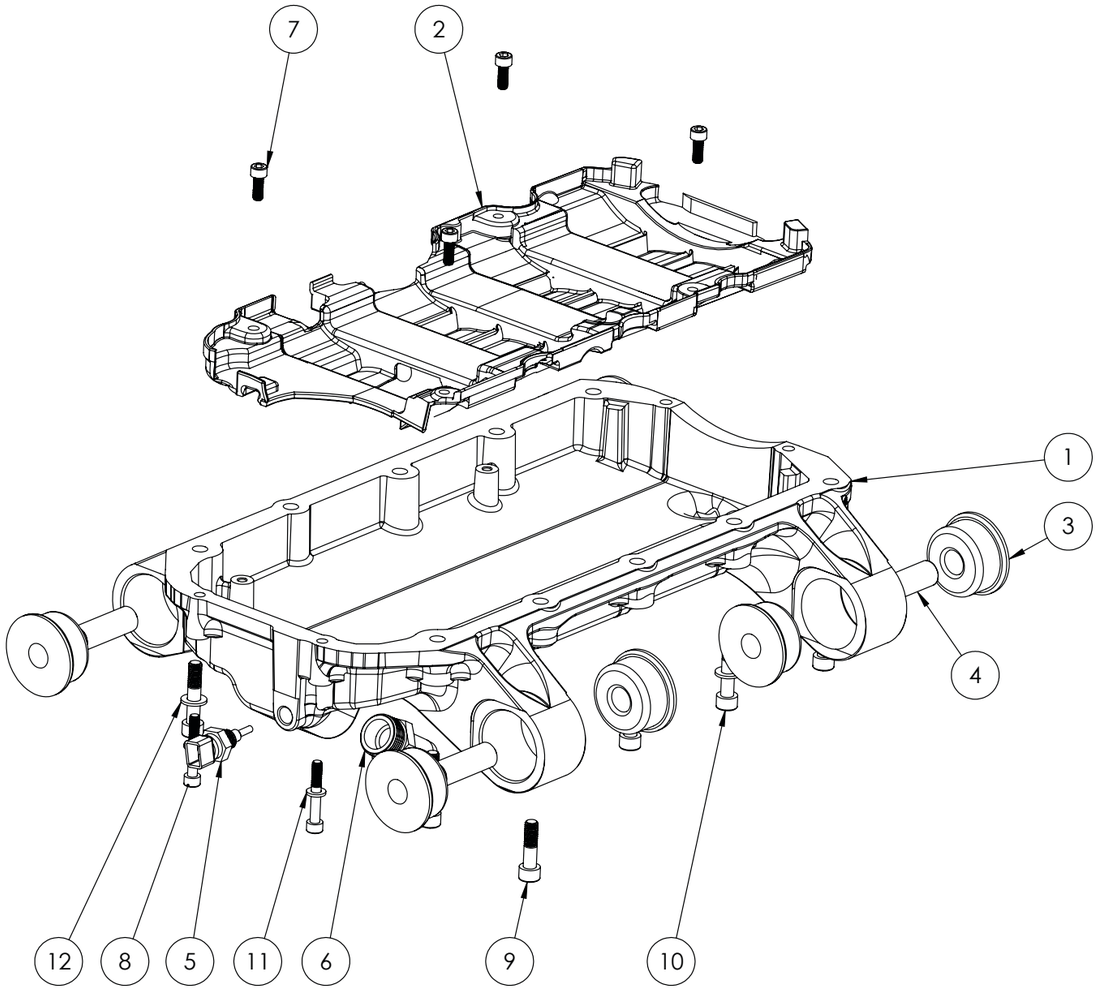

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-022	Dry sump	1
2	30-0114-092	Oil pan scraper	1
3	30-0114-206	Bushing, engine mount	8
4	30-0114-207	Spacer	4
5	30-0116-080	Sensor, oil temp	1
6	30-0122-147	Connector, hose	1
7	30-0130-020	Bolt	4
8	30-0130-025	Bolt	4
9	30-0130-043	Bolt	1
10	30-0130-057	Bolt	9
11	30-0130-191	Washer	4
12	30-0130-192	Washer	9

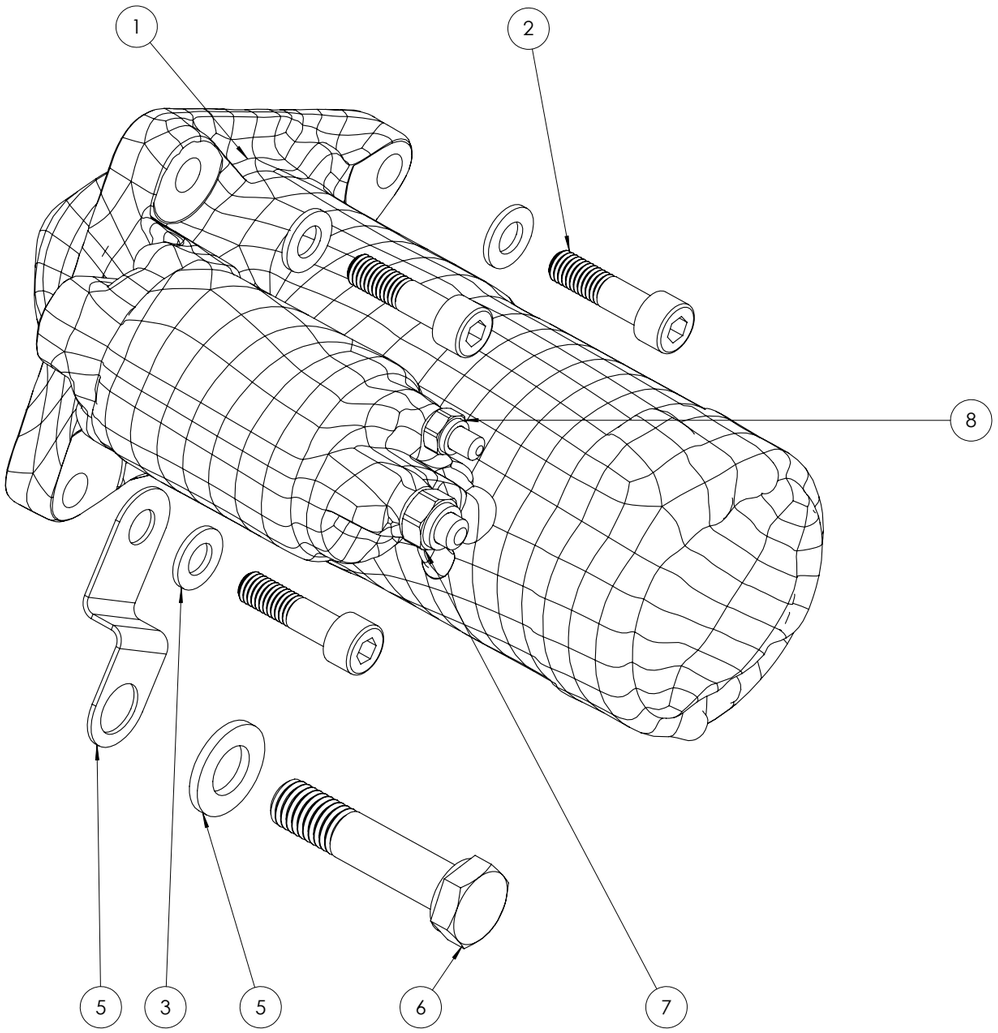

1.5.6 STARTER MOTOR ASSEMBLY
30-0114-094
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-019	Starter motor	1
2	30-0116-091	Ground plate, starter motor	1
3	30-0130-043	Bolt	3
4	30-0130-167	Bolt	1
5	30-0130-192	Washer	3
6	30-0130-194	Washer	1
7	30-0130-262	Nut	1
8	30-0130-261	Nut	1

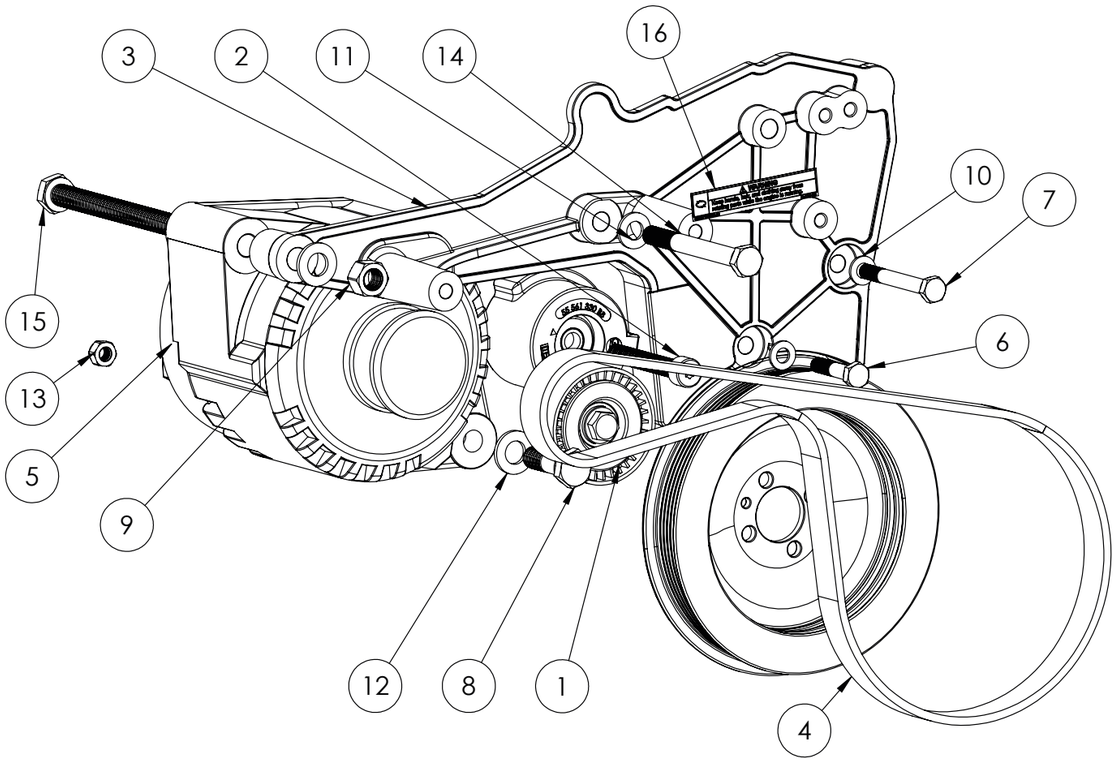

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-072	Tensioner	1
2	30-0130-385	Bolt	1
3	30-0114-389	Lower timing belt cover	1
4	30-0114-426	Belt	1
5	30-0116-131	Alternator	1
6	30-0130-125	Bolt	1
7	30-0130-134	Bolt	1
8	30-0130-164	Bolt	1
9	30-0130-184	Nut	1
10	30-0130-192	Washer	2
11	30-0130-193	Washer	1
12	30-0130-194	Washer	2
13	30-0130-262	Nut	1
14	30-0130-362	Bolt	1
15	30-0130-363	Bolt	1
16	30-0300-004	Rotation warning label	1

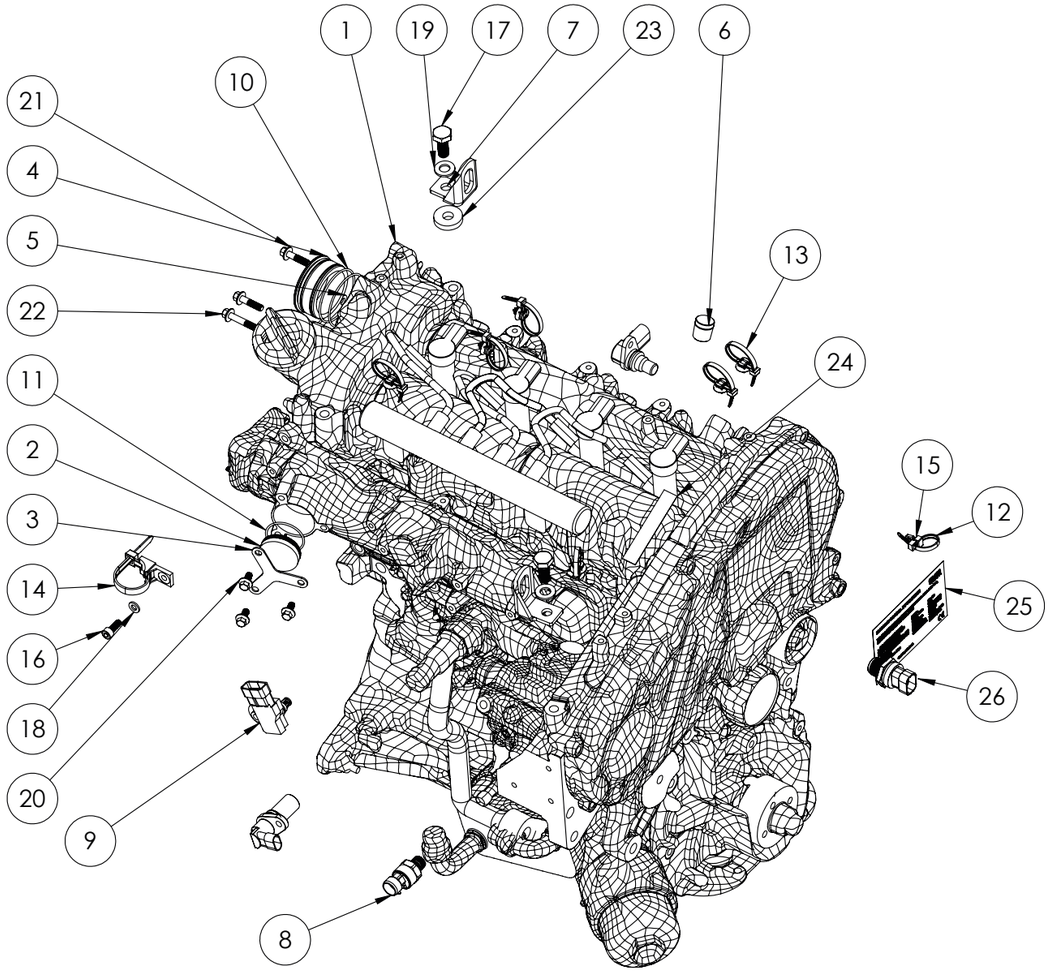

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-002	Engine block	1
2	30-0114-211	Plug	1
3	30-0114-212	Plug retainer	1
4	30-0114-213	Cover	1
5	30-0114-214	Cover retainer	1
6	30-0114-350	Plug	1
7	30-0114-355	Lifting eye	2
8	30-0116-050	Sensor	1
9	30-0116-904	Sensor	1
10	30-0121-012	O-ring	2
11	30-0121-025	O-ring	1
12	30-0122-246	Cable	1
13	30-0122-248	Pine clip	7
14	30-0122-249	P-clip	1
15	30-0122-252	Arrow-head clip	1
16	30-0130-020	Bolt	2
17	30-0130-153	Bolt	2
18	30-0130-191	Washer	1
19	30-0130-193	Washer	2
20	30-0130-240	Bolt	3
21	30-0130-243	Bolt	2
22	30-0130-246	Bolt	1
23	30-0130-349	Washer	1
24	30-0300-006	Read manual label	1
25	30-0300-010	Emission Label	1
26	30-0116-903	Sensor, fuel pressure	1

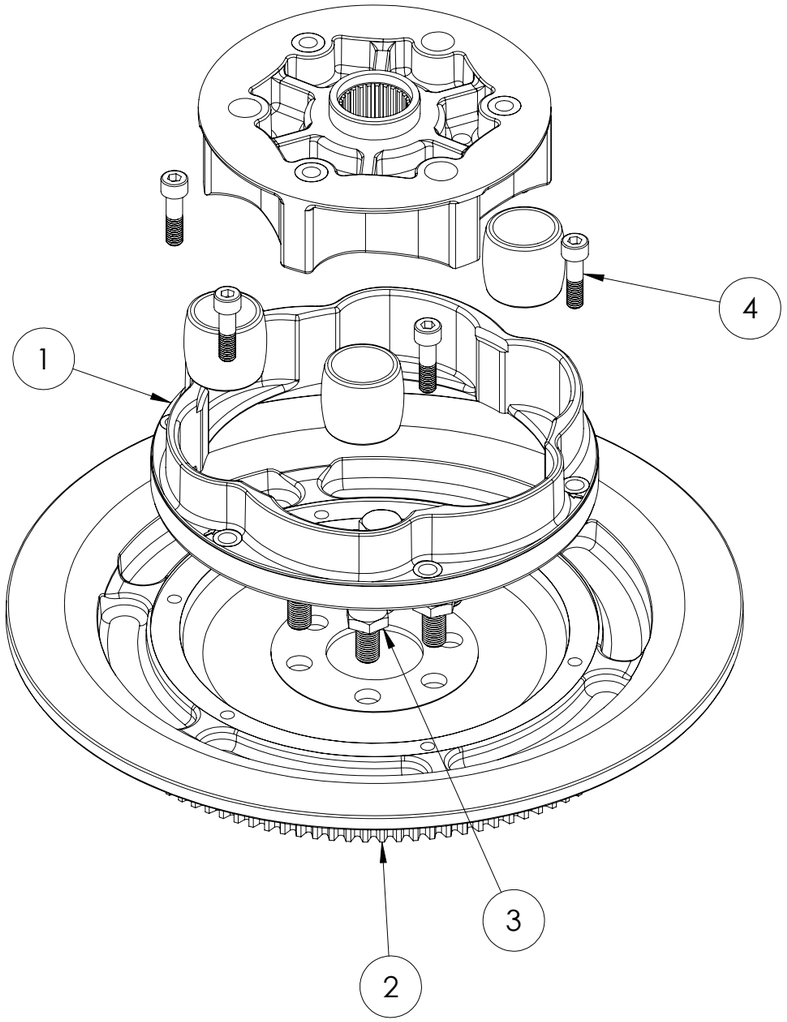

1.5.9 FLYWHEEL ASSEMBLY
30-0114-101
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-058	Flex Coupling	1
2	30-0114-302	Flywheel	1
3	30-0114-468	Bolt	6
4	30-0130-043	Bolt	6

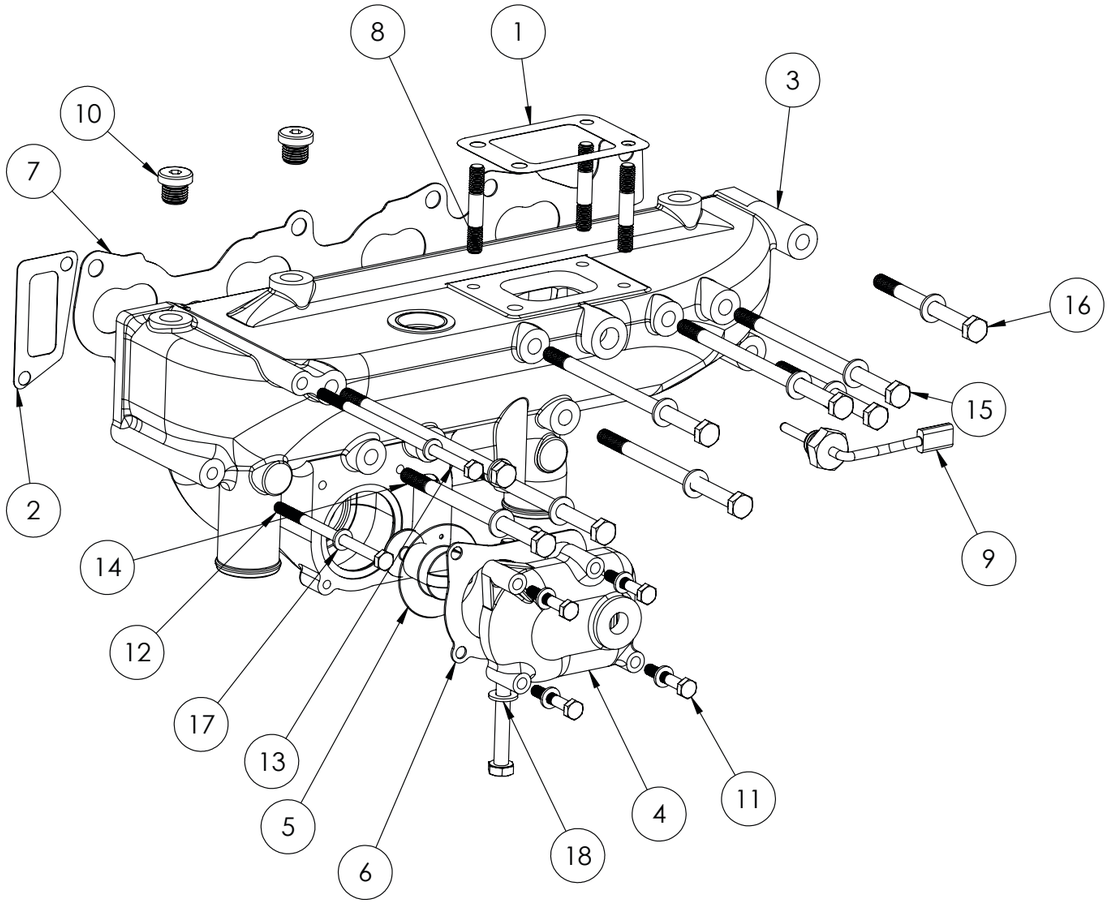

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-076	Gasket, turbo	1
2	30-0114-106	Gasket	1
3	30-0114-151	Manifold, water cooled	1
4	30-0114-222	Thermostat housing, exhaust manifold	1
5	30-0114-224	Thermostat	1
6	30-0114-258	Gasket	1
7	30-0114-263	Gasket	1
8	30-0114-296	Stud bolt	3
9	30-0116-053	Sensor, EGT	1
10	30-0122-136	Plug	2
11	30-0130-105	Bolt	4
12	30-0130-110	Bolt	1
13	30-0130-112	Bolt	1
14	30-0130-131	Bolt	4
15	30-0130-132	Bolt	4
16	30-0130-133	Bolt	2
17	30-0130-191	Washer	6
18	30-0130-192	Washer	10

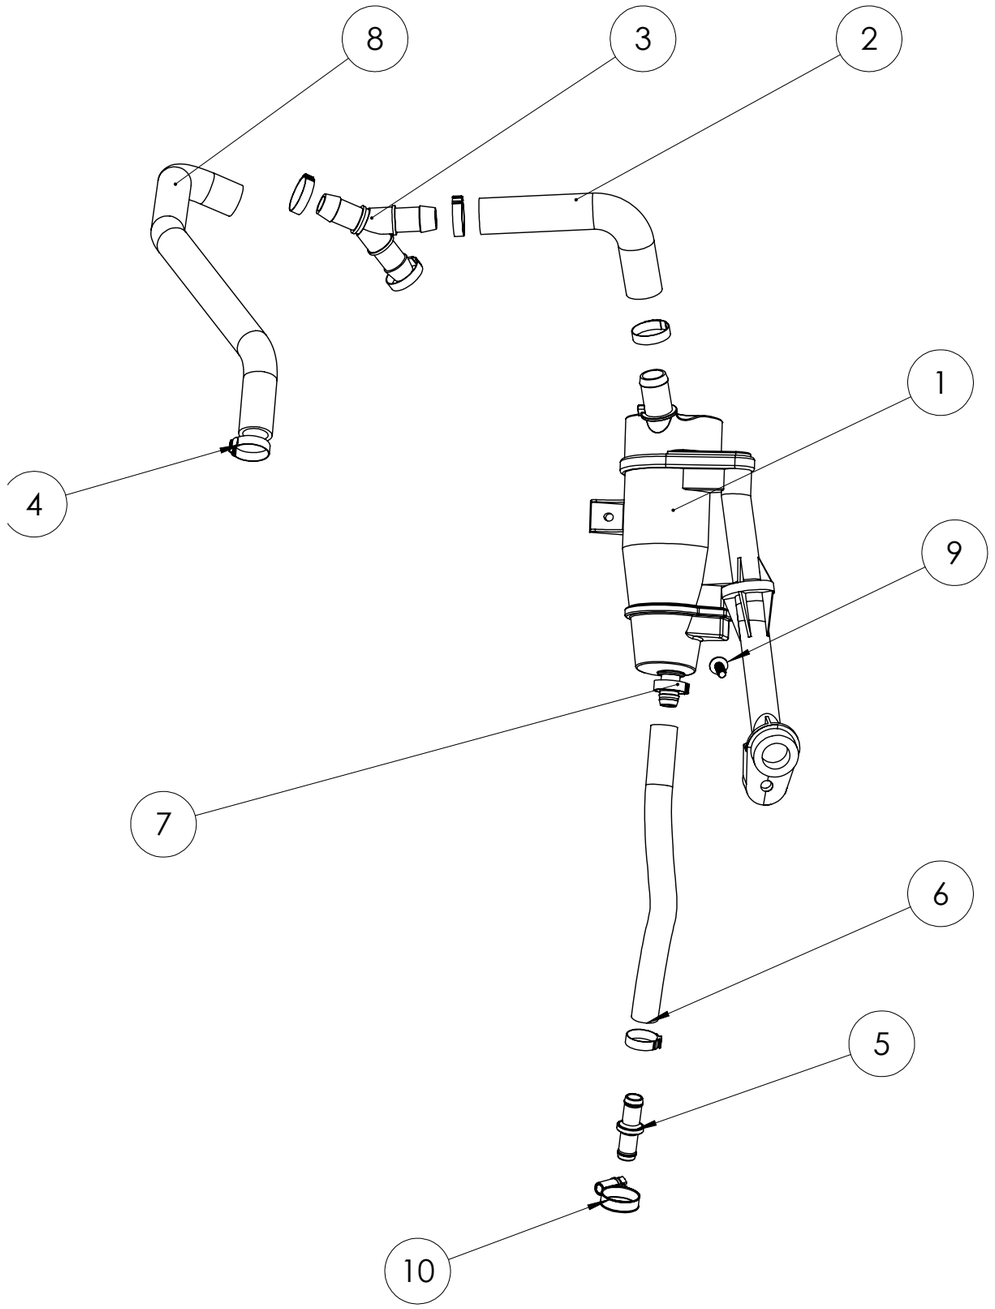

1.5.11 CRANKCASE VENTILATION ASSEMBLY
30-0114-117
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-071	Oil separator, crankcase ventilation	1
2	30-0114-294	Breather hose, oil separator	1
3	30-0114-293	Y-junction, breather	1
4	30-0122-113	Hose clamp	5
5	30-0114-255	Hose fitting	1
6	30-0114-321	Hose, crankcase ventilation oil return	1
7	30-0122-139	Hose clamp	2
8	30-0114-437	Hose, filter adapter	1
9	30-0130-241	Screw	1
10	30-0122-049	Hose clamp	1

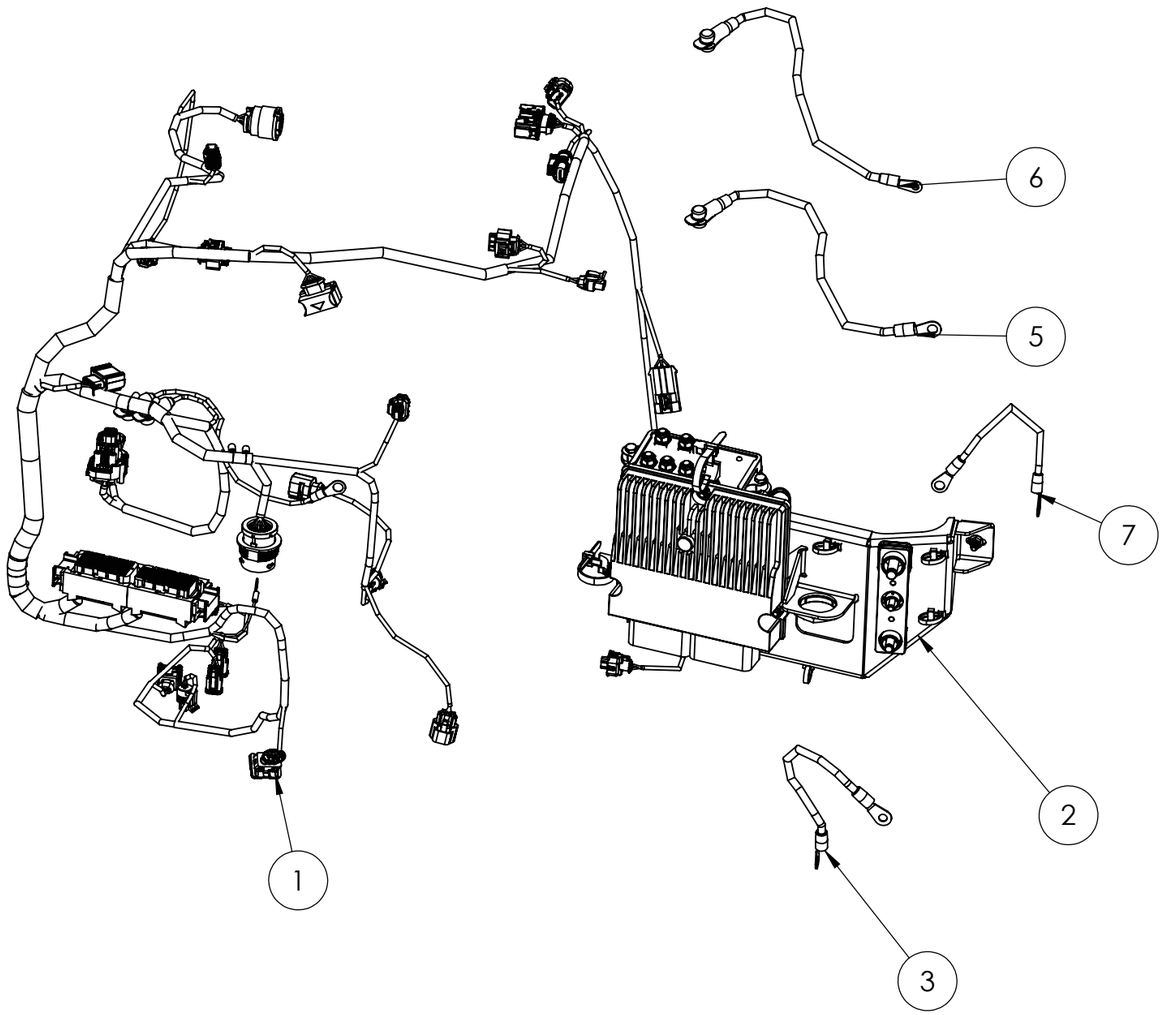

1.6 ELECTRIC SYSTEM
30-0116-001
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY**
1	30-0116-026	Engine harness	1
2	30-0116-800	ECU assembly	1
3	30-0116-956	Starter motor supply	1
4	30-0116-957	Engine block GND	1
5	30-0116-958	PSU GND	1
6	30-0116-959	PSU supply	1
7	30-0116-961	Alternator supply	1

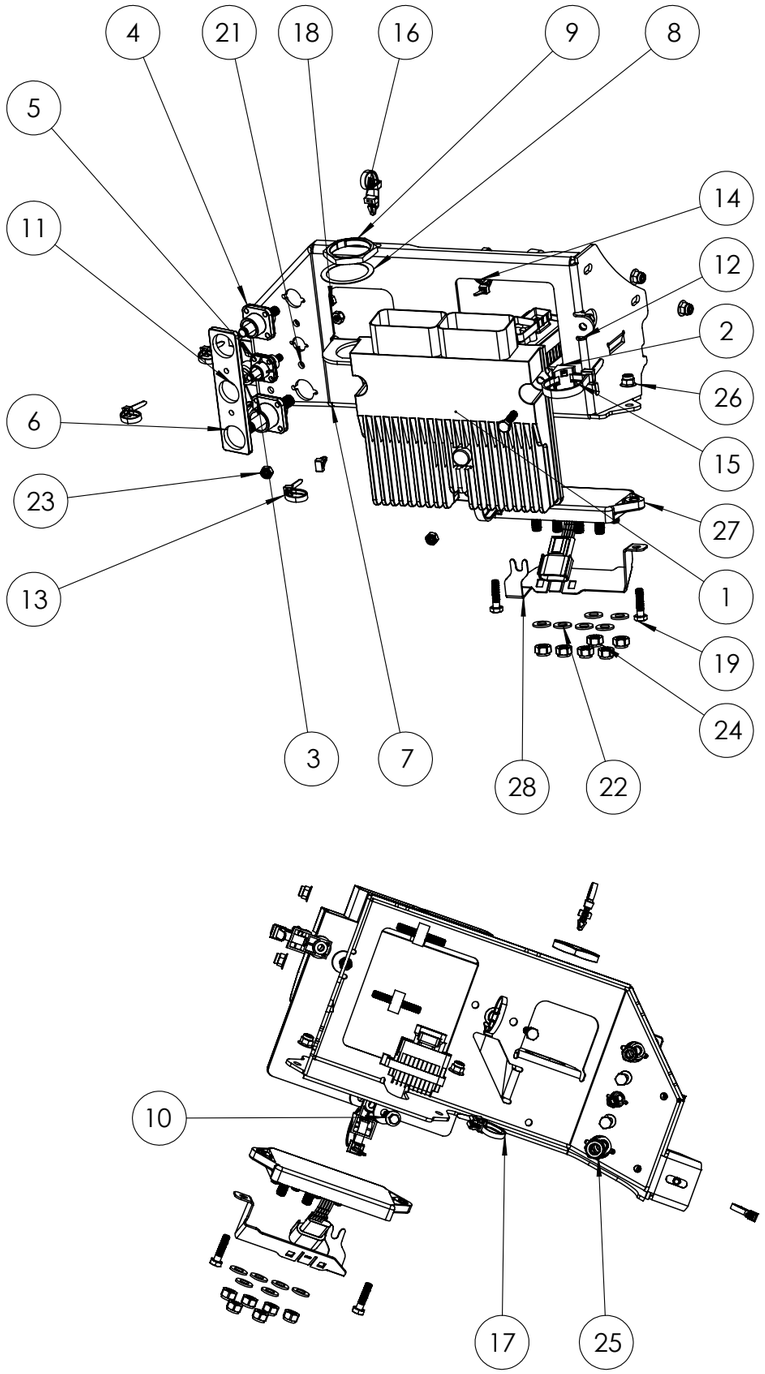

1.6.1 ECU ASSEMBLY
30-0116-800
OXE DIESEL PARTS CATALOGUE

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY**
1	30-0116-022	ECU	1
2	30-0116-039	GPCM	1
3	30-0116-186	Connector, power	1
4	30-0116-187	Connector, power	1
5	30-0116-188	Connector, power	1
6	30-0116-953	Lock ring	1
7	30-0116-954	ECU bracket	1
8	30-0116-978	Washer	1
9	30-0116-979	Nut	1
10	30-0130-244	Bolt	1
11	30-0122-104	Rubber damper	3
12	30-0122-244	Cable tie	1
13	30-0122-246	Cable tie	4
14	30-0122-248	Pine clip	1
15	30-0122-249	P-clip	2
16	30-0122-252	Arrow-head clip	4
17	30-0122-258	Edge/swivel clip	1
18	30-0130-100	Bolt	2
19	30-0130-102	Bolt	4
20	30-0130-158	Plastic washer	1
21	30-0130-191	Washer	1
22	30-0130-192	Washer	6
23	30-0130-261	Nut	4
24	30-0130-262	Nut	7
25	30-0130-263	Nut	1
26	30-0130-270	Locking nut	5
27	30-0116-169	PSU cpl	1
28	30-0116-173	Bracket, PSU connector	1

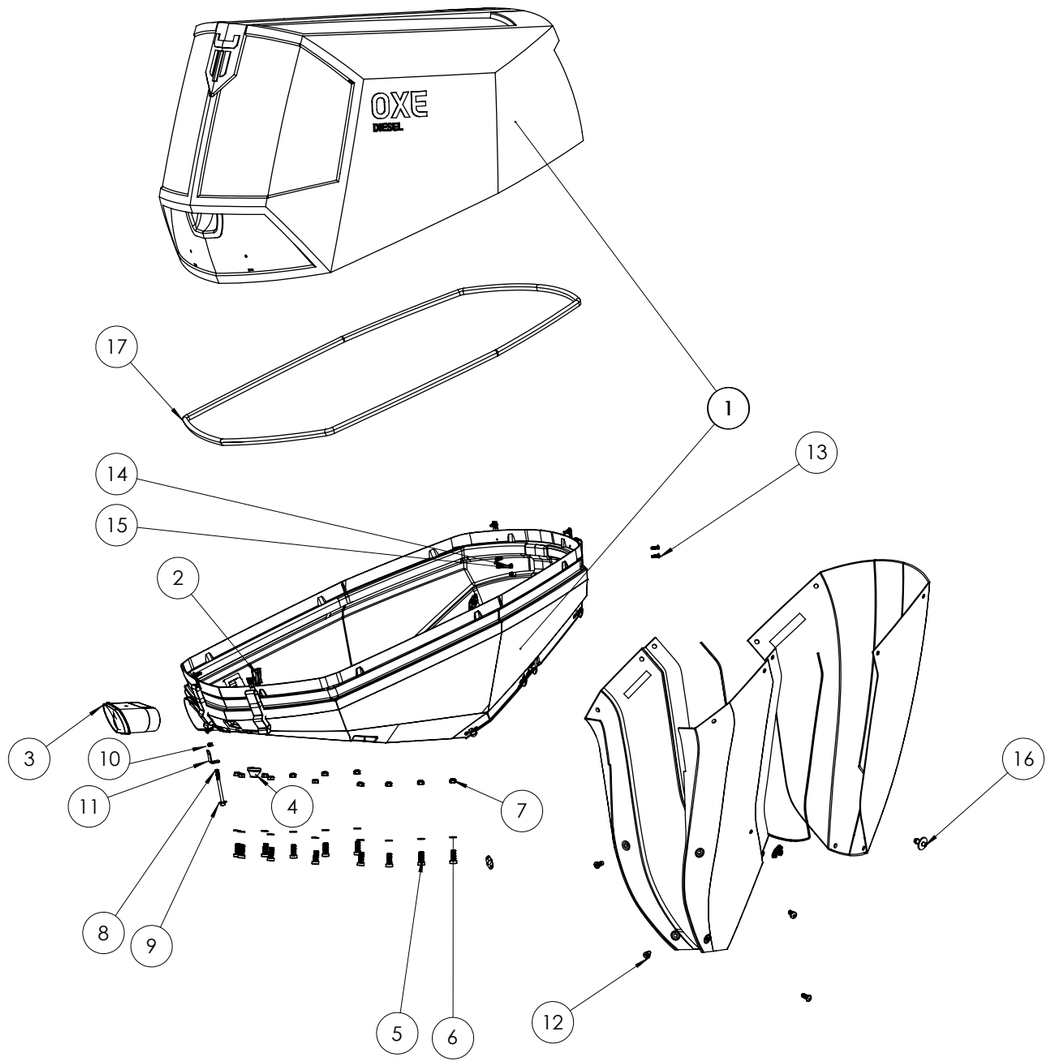

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0117-200	Cowl Set	1
2	30-0116-073	PTT switch	1
3	30-0117-056	Rubber grommet, cowling assy.	1
4	30-0122-092	Cable grommet, cowling assy.	1
5	30-0130-230	Bolt	12
6	30-0130-192	Washer	24
7	30-0130-262	Nut	12
8	30-0130-032	Bolt	1
9	30-0130-347	Washer	1
10	30-0130-261	Nut	1
11	30-0117-239	Plate, grommet	1
12	30-0130-224	Bolt	4
13	30-0130-212	Bolt	3
14	30-0130-259	Nut	3
15	30-0130-190	Bolt	3
16	30-0117-240	Nipple, water outlet	1
17	30-0117-090	Cowling Seal	1

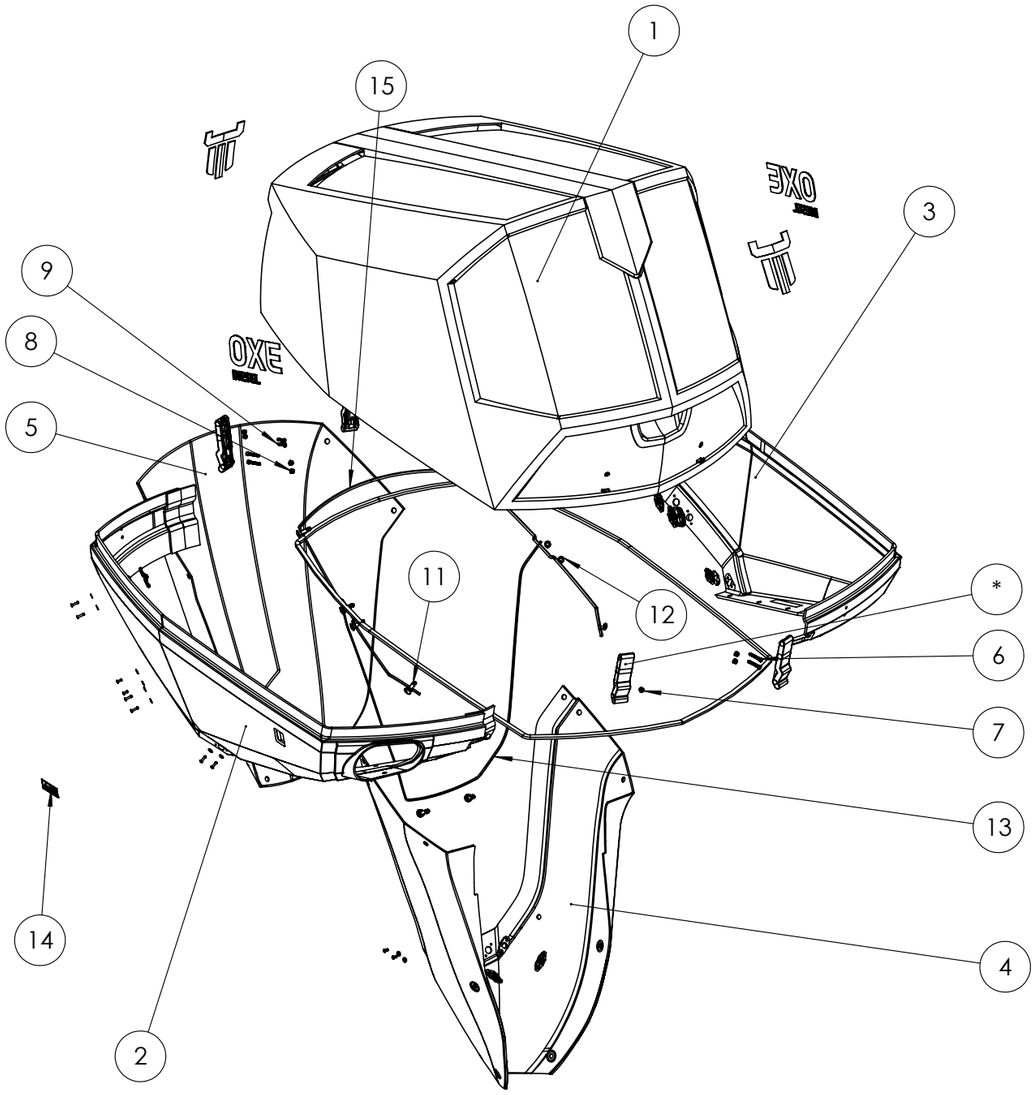

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0117-201	Top cowl assy	1
2	30-0117-202	Middle cowl assy, right.	1
3	30-0117-203	Middle cowl assy, left.	1
4	30-0117-204	Back cowl assy	1
5	30-0117-205	Belt cowl assy	1
6	30-0130-098	Bolt	8
7	30-0130-113	Washer	7
8	30-0130-099	Nut	13
9	30-0130-314	Bolt	4
10	30-0117-055	Latch, cowl (Order Kit Nr. 30-0190-944)	4
11	30-0117-225	Bolt	10
12	30-0117-226	Washer	20
13	30-0117-224	Seal, belt cowling	1
14	30-0300-009	Label, read the manual, small	1
15	30-0117-234	Seal, middle cowling	1

INTERNAL ENGINE PARTS

ASSEMBLY LIST	
ITEM NO.	**DESCRIPTION**
1.8.1	Camshaft assembly
1.8.2	Crankshaft assembly
1.8.3	Cylinder head assembly
1,8,4	Timing belt assembly
1.8.5	Engine oil system assembly
1.8.6	Oil pump assembly
1.8.7	Glow plugs and injectors

1.8 ENGINE INTERNAL PARTS
30-0170-001
OXE DIESEL PARTS CATALOGUE

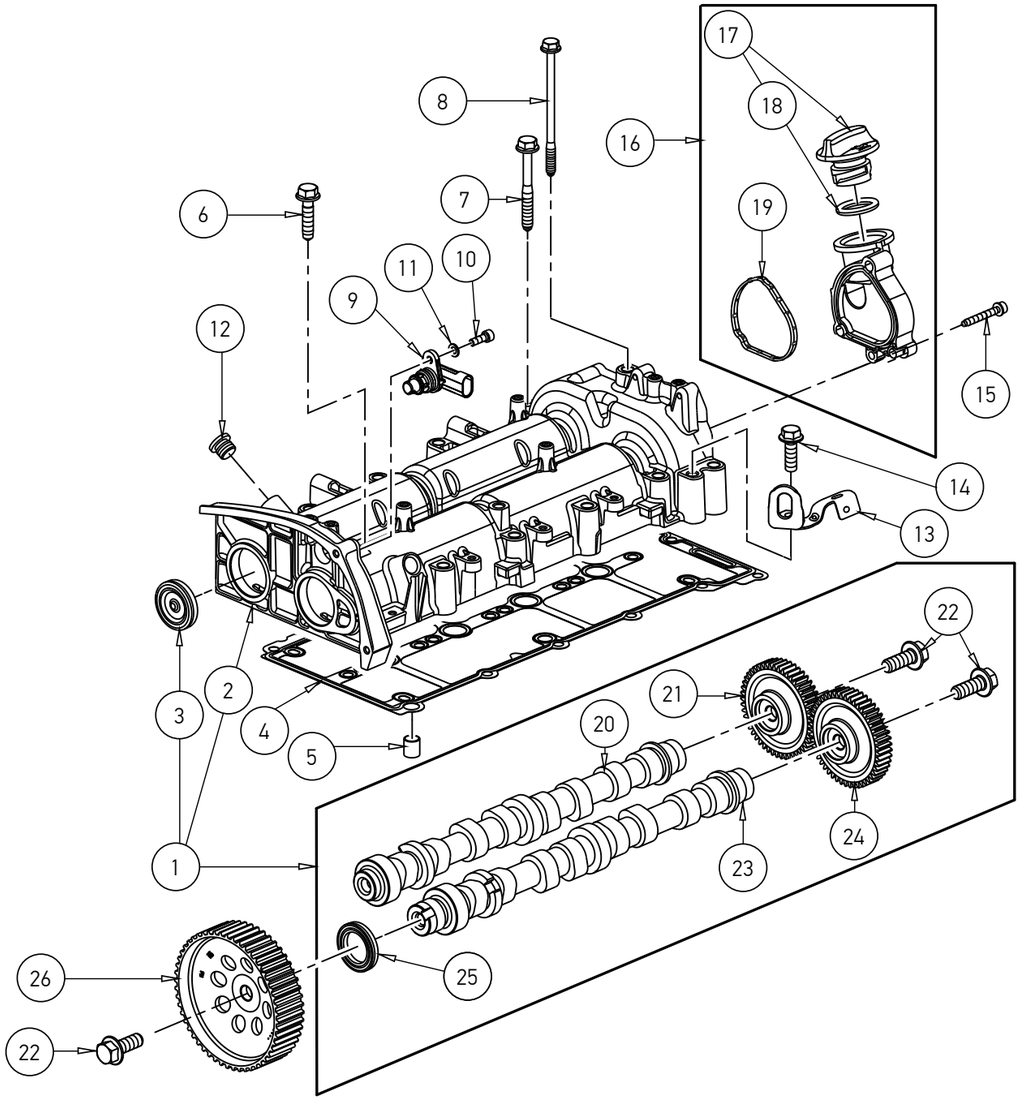

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0170-001	Camshaft assembly	1
2	30-0170-002	Camshaft case	1
3	30-0170-003	Plug	1
4	30-0170-004	Gasket	1
5	30-0170-005	Sleeve	2
6	30-0170-006	Screw	5
7	30-0170-007	Screw	1
8	30-0170-008	Screw	1
9	30-0170-009	Sensor, camshaft position	1
10	30-0170-010	Screw	10
11	30-0170-011	Washer	1
12	30-0170-012	Plug	1
13	30-0170-013	Schackle	1
14	30-0130-153	Screw	1
16	30-0170-015	Oil filter housing	1
17	30-0170-016	Cap, oil housing	1
18	30-0170-017	Gasket	1
19	30-0170-018	Gasket	1
15	30-0170-019	Screw	3
20	30-0170-020	Camshaft	1
21	30-0170-021	Sprocket	1
22	30-0170-022	Screw	4
23	30-0170-023	Camshaft exhaust	1
24	30-0170-024	Sprocket exhaust	1
25	30-0170-025	Seal	1
26	30-0170-080	Sprocket	2

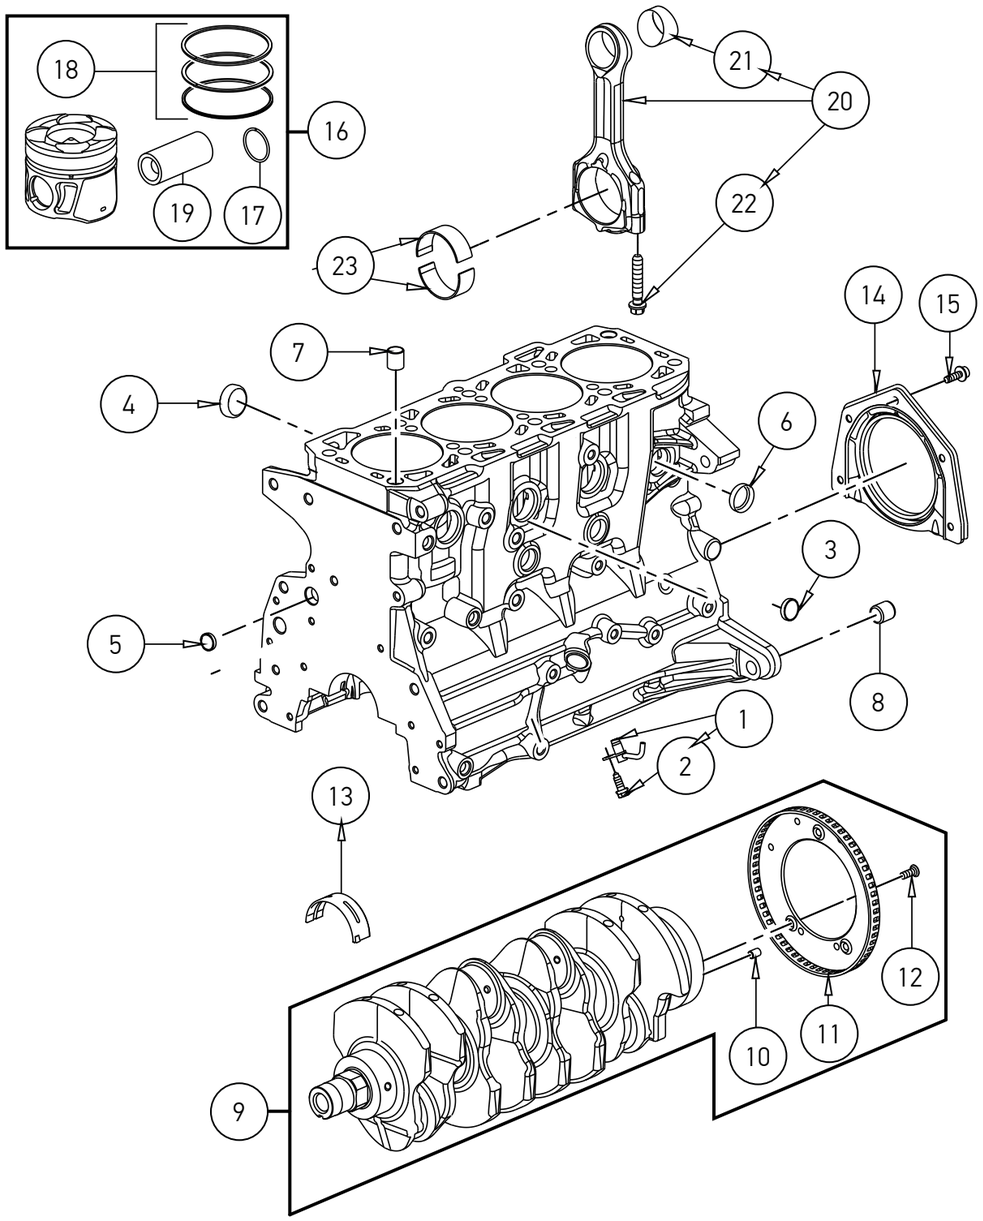

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0170-053	Jet	1
2	30-0170-054	Screw	1
3	30-0170-055	Plug	1
4	30-0170-056	Plug	1
5	30-0170-057	Plug	1
6	30-0170-058	Plug	1
7	30-0170-112	Sleeve	1
8	30-0170-059	Pin	1
9	30-0170-060	Camshaft	1
10	30-0170-061	Pin	1
11	30-0170-062	Trigger disc	1
12	30-0170-063	Screw	1
13	30-0170-064	Bearing	1
14	30-0170-065	Flange	1
15	30-0170-066	Screw	1
16	30-0170-067	Piston	1
17	30-0170-068	Ring	1
18	30-0170-069	Ring set	1
19	30-0170-070	Gudgeon	1
20	30-0170-071	Rod	1
21	30-0170-072	Bush	1
22	30-0170-073	Screw	1
23	30-0170-074	Bearing	1

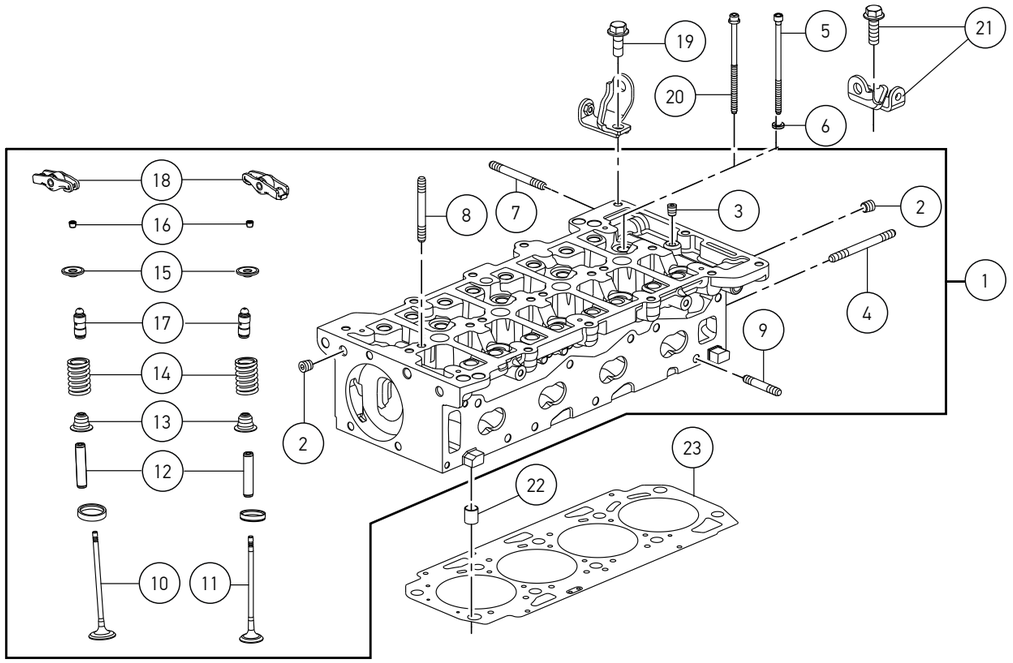

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0170-026	Cylinder head assembly	1
2	30-0170-027	Plug	2
3	30-0170-028	Plug	1
4	30-0170-029	Stud	1
5	30-0170-091	Screw	2
6	30-0170-030	Washer	1
7	30-0170-031	Stud	1
8	30-0170-032	Stud	1
9	30-0114-296	Stud	1
10	30-0170-034	Valve	1
11	30-0170-035	Valve	1
12	30-0170-036	Guide	2
13	30-0170-037	Seal	2
14	30-0170-038	Spring	2
15	30-0170-039	Cup	2
16	30-0170-040	Key	2
17	30-0170-041	Lifter	2
18	30-0170-042	Arm	2
19	30-0170-043	Screw	2
20	30-0170-033	Screw	
21	30-0170-044	Schackle	1
22	30-0170-112	Sleeve	1
23	30-0170-046	Gasket	1

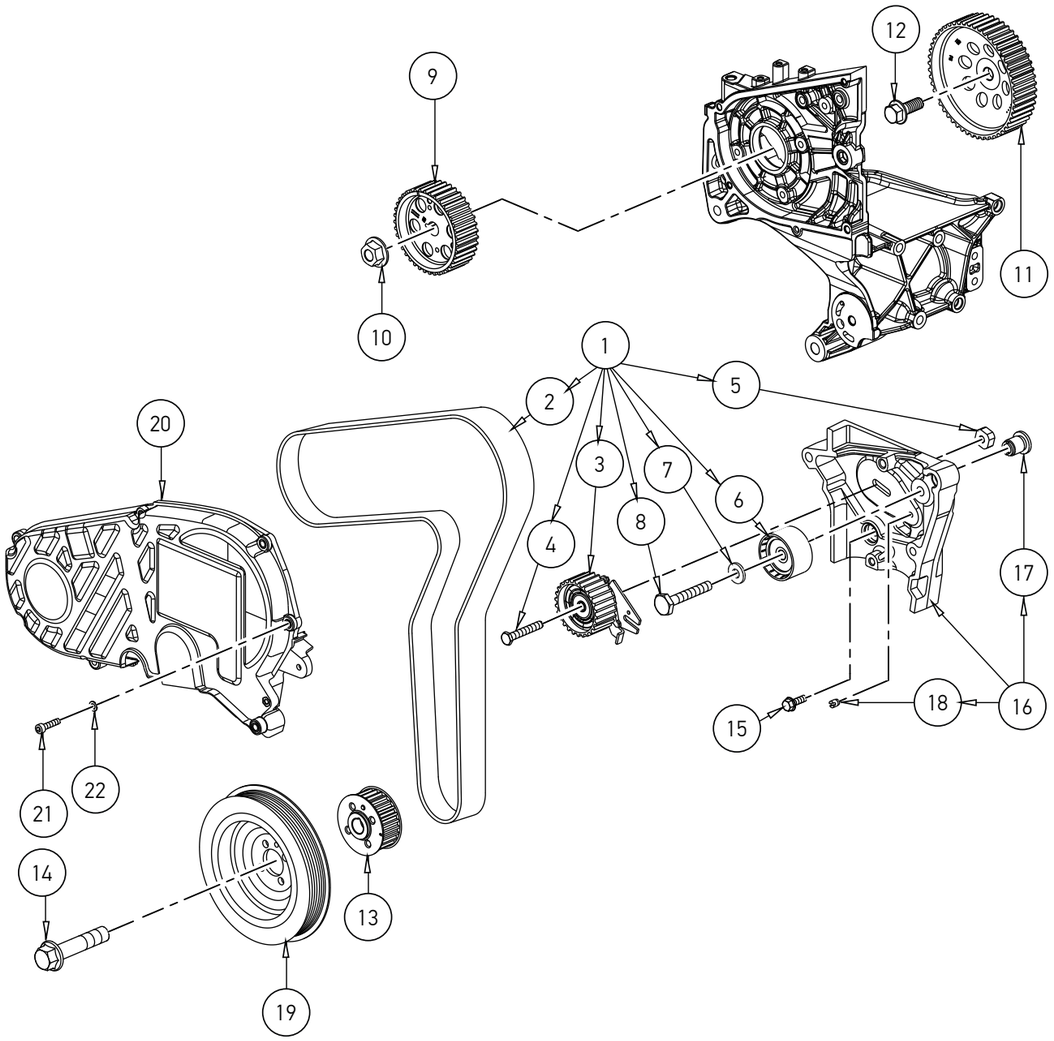

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0170-122	Timing Belt Assy	1
2	30-0170-045	Cambelt	1
3	30-0170-077	Tensioner, cambelt	1
4	30-0170-078	Screw	1
5	30-0170-079	Nut	1
6	30-0170-047	Roller	1
7	30-0170-081	Washer	1
8	30-0170-082	Screw	1
9	30-0170-083	Gear	1
10	30-0170-084	Nut	1
11	30-0170-080	Sprocket	1
12	30-0170-081	Screw	3
13	30-0170-086	Gear	1
14	30-0170-087	Screw	1
15	30-0170-088	Screw	1
16	30-0170-089	Bracket	1
17	30-0170-090	Bush	1
18	30-0114-267	Screw	1
19	30-0114-020	Crankshaft pulley	1
20	30-0170-093	Timing belt cover	1
21	30-0170-094	Screw	1
22	30-0170-095	Washer	1

OXE DIESEL

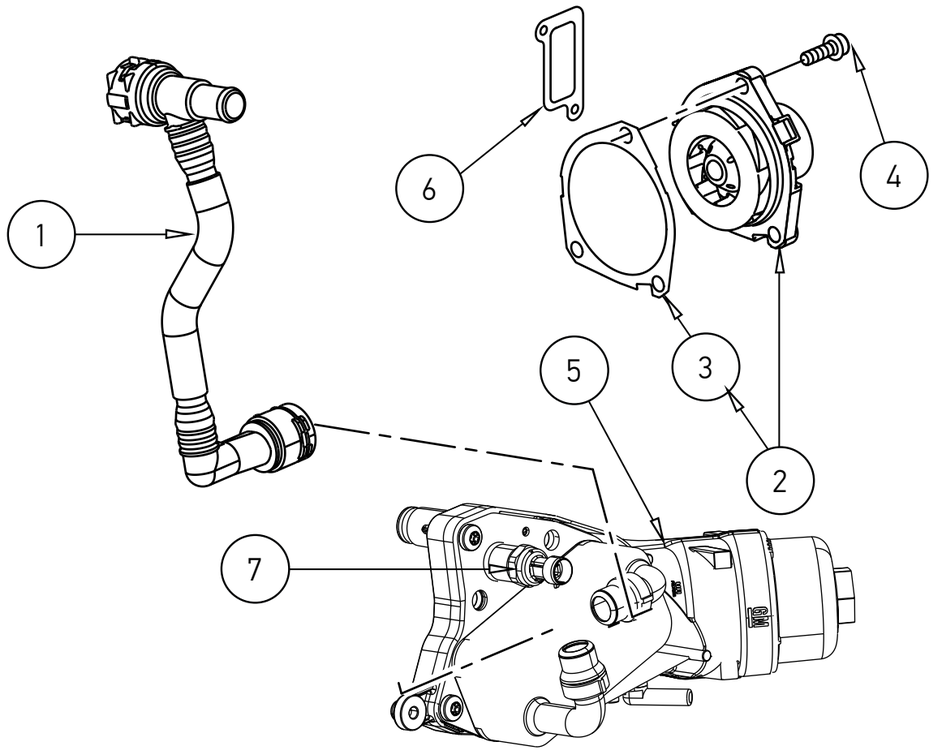

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	30-0170-131	Hose, oil cooler outlet	1
2	30-0170-129	Pump, water, engine circulation	1
3	30-0170-132	Gasket, water pump	1
4	30-0170-133	Bolt, water pump	3
5	30-0114-007	Oil Filter Assy	1
6	30-0114-106	Gasket, engine cooling, water outlet	1
7	30-0116-050	Sensor, oil pressure	

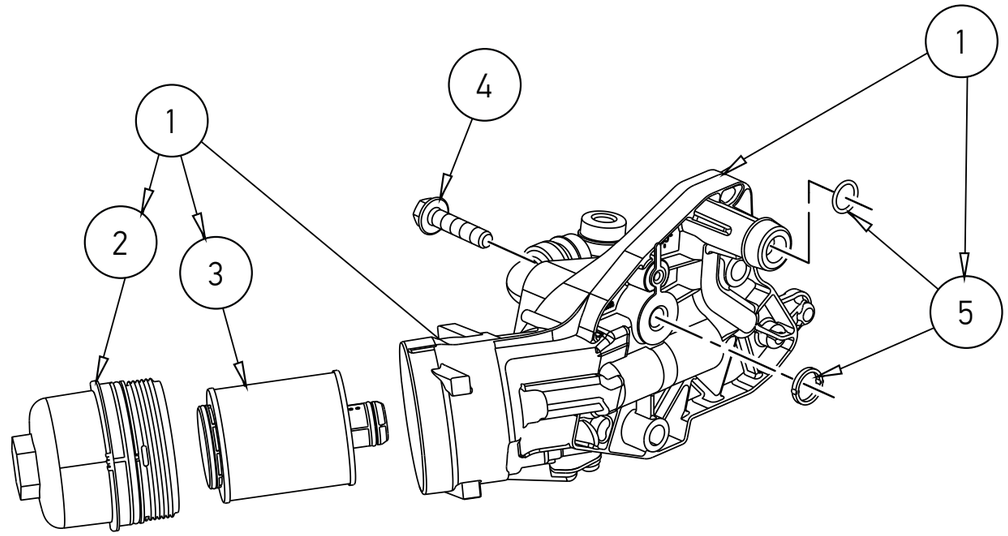

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	30-0114-007	Oil Filter Assy	1
2	30-0170-097	Cap, oil filter	1
3	30-0170-128	Oil filter element	1
4	30-0170-098	Bolt	1
5	30-0170-099	Seal kit, oil filter assembly	1

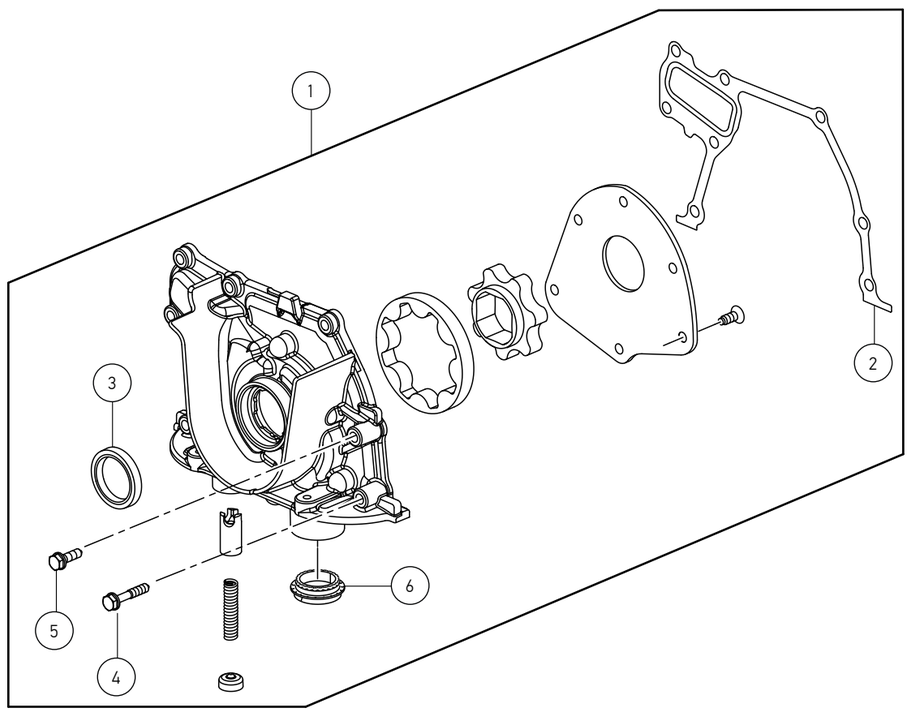

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	30-0170-076	Oil pump assembly	1
2	30-0170-048	Gasket	1
3	30-0170-049	Ring	1
4	30-0170-050	Bolt	3
5	30-0170-051	Bolt	5
6	30-0170-052	Gasket	1

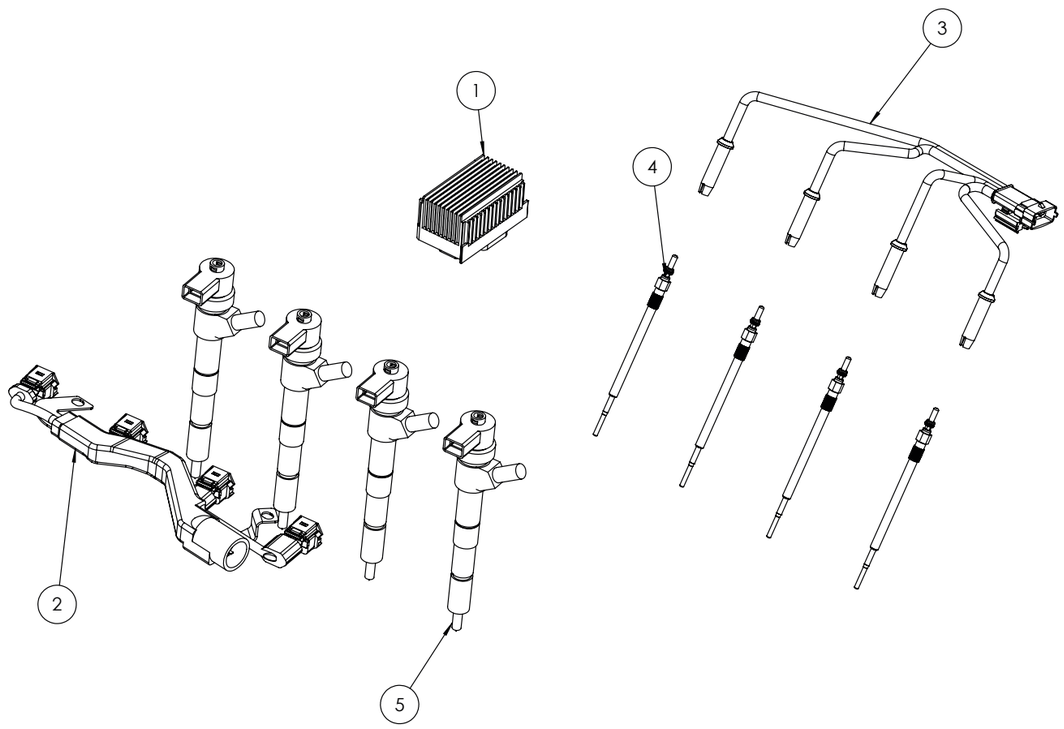

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0116-039	Control module, glow plugs	1
2	30-0116-900	Injector, electrical harness	1
3	30-0116-901	Glow plugs, electrical harness	1
4	30-0116-902	Glow plug	4
5	30-0116-907	Injector	4

PART LIST		
ITEM NO.	**PART NUMBER**	**DESCRIPTION**
1.9.1	30-0190-901	Service kit 1 - 50h
1.9.2	30-0190-902	Service kit 2 - 200h XL
1.9.3	30-0190-949	Service kit 2 - 200h XXL
1.9.4	30-0190-903	Service kit 3 - 800h XL
1.9.5	30-0190-946	Service kit 3 - 800h XXL
1.9.6	30-0190-910	Heat exchanger bundle kit
1.9.7	30-0190-911	Hydraulic cooler core Kit
1.9.8	30-0190-914	Turbocharger service kit
1.9.9	30-0190-915	Upper belt service kit
1.9.10	30-0190-938	Intercooler core kit
1.9.11	30-0190-917/30-0190-936	Lower belt service kit XL/XXL
1.9.12	30-0190-928	Propeller shaft replacement kit
1.9.13	30-0190-935	External fuel pump kit
1.9.14	30-0190-930	Anode kit 25”
1.9.15	30-0190-498	Anode kit 33”

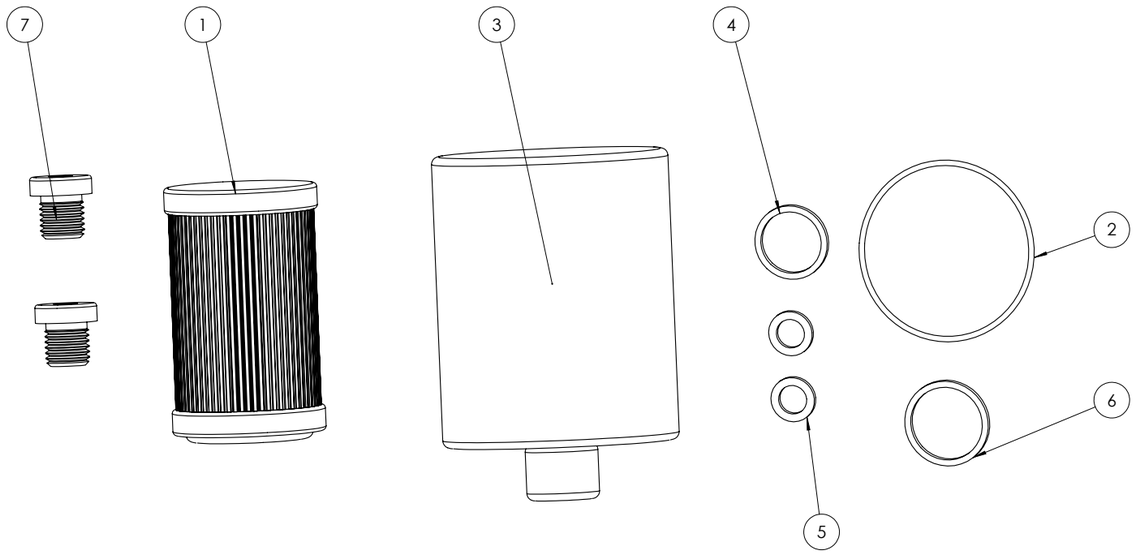

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0115-028	Hydraulic filter	1
2	30-0121-042	O-ring	1
3	30-0170-128	Filter, engine oil	1
4	30-0121-060	Seal	1
5	30-0121-080	Seal	1
6	30-0122-218	Seal	2
7	30-0122-135	Plug, upper belt housing	2

1.9.2 SERVICE KIT 2 XL/ 200H

30-0190-902 / XL

OXE DIESEL PARTS CATALOGUE

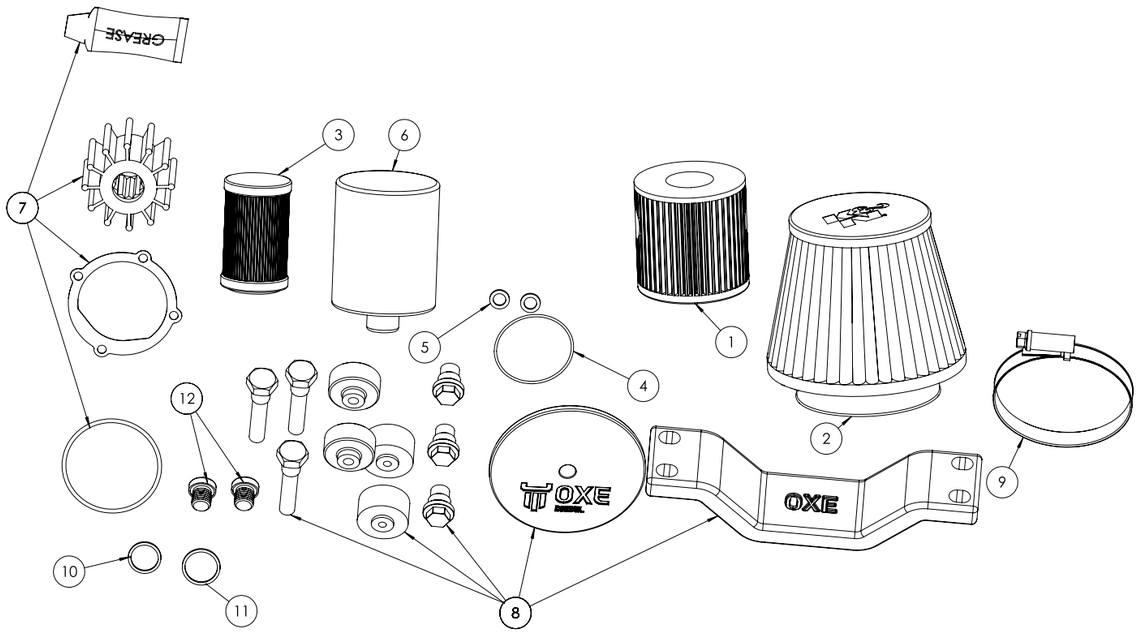

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-494	Fuel filter	1
2	30-0114-427	Air filter	1
3	30-0115-028	Hydraulic filter	1
4	30-0121-042	O-ring	1
5	30-0122-218	Fiber seal	2
6	30-0170-128	Engine oil filter	1
7	30-0190-912	Impeller kit	1
8	30-0190-930	Anode kit 25”	1
9	30-0122-056	Clamp	1
10	30-0121-060	Seal	1
11	30-0121-080	Seal	1
12	30-0122-135	Plug	2

1.9.3 SERVICE KIT 2 XXL/ 200H

30-0190-949

OXE DIESEL PARTS CATALOGUE

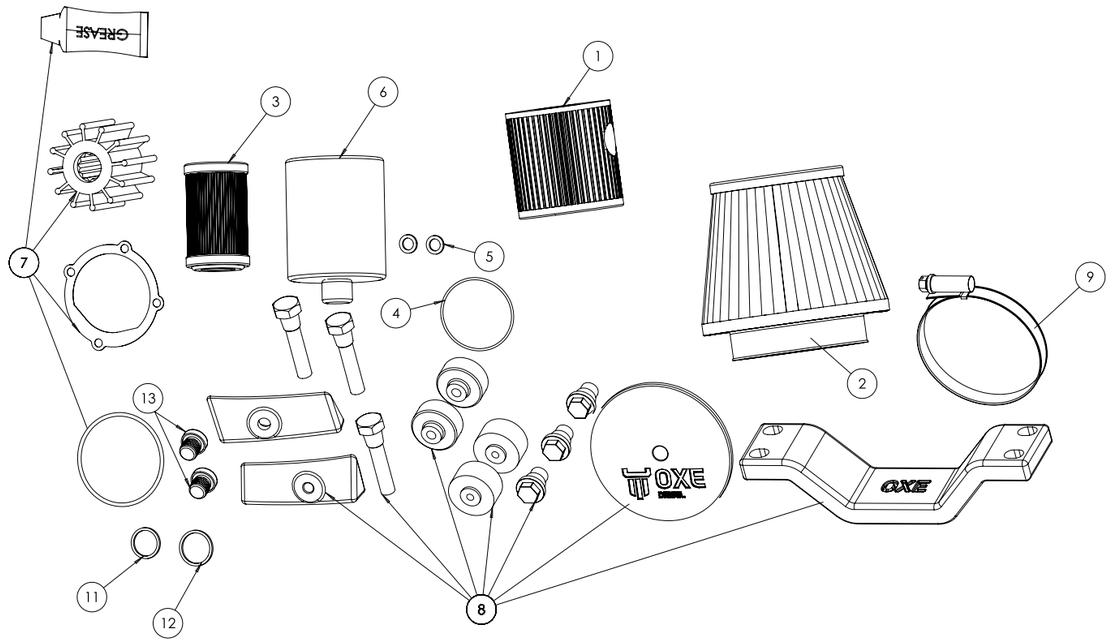

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-494	Fuel filter	1
2	30-0114-427	Air filter	1
3	30-0115-028	Hydraulic filter	1
4	30-0121-042	O-ring	1
5	30-0122-218	Fiber seal	2
6	30-0170-128	Engine oil filter	1
7	30-0190-912	Impeller kit	1
8	30-0190-948	Anode kit 33”	1
9	30-0122-056	Clamp	1
10	30-0121-060	Seal	1
11	30-0121-080	Seal	1
12	30-0122-135	Plug	2

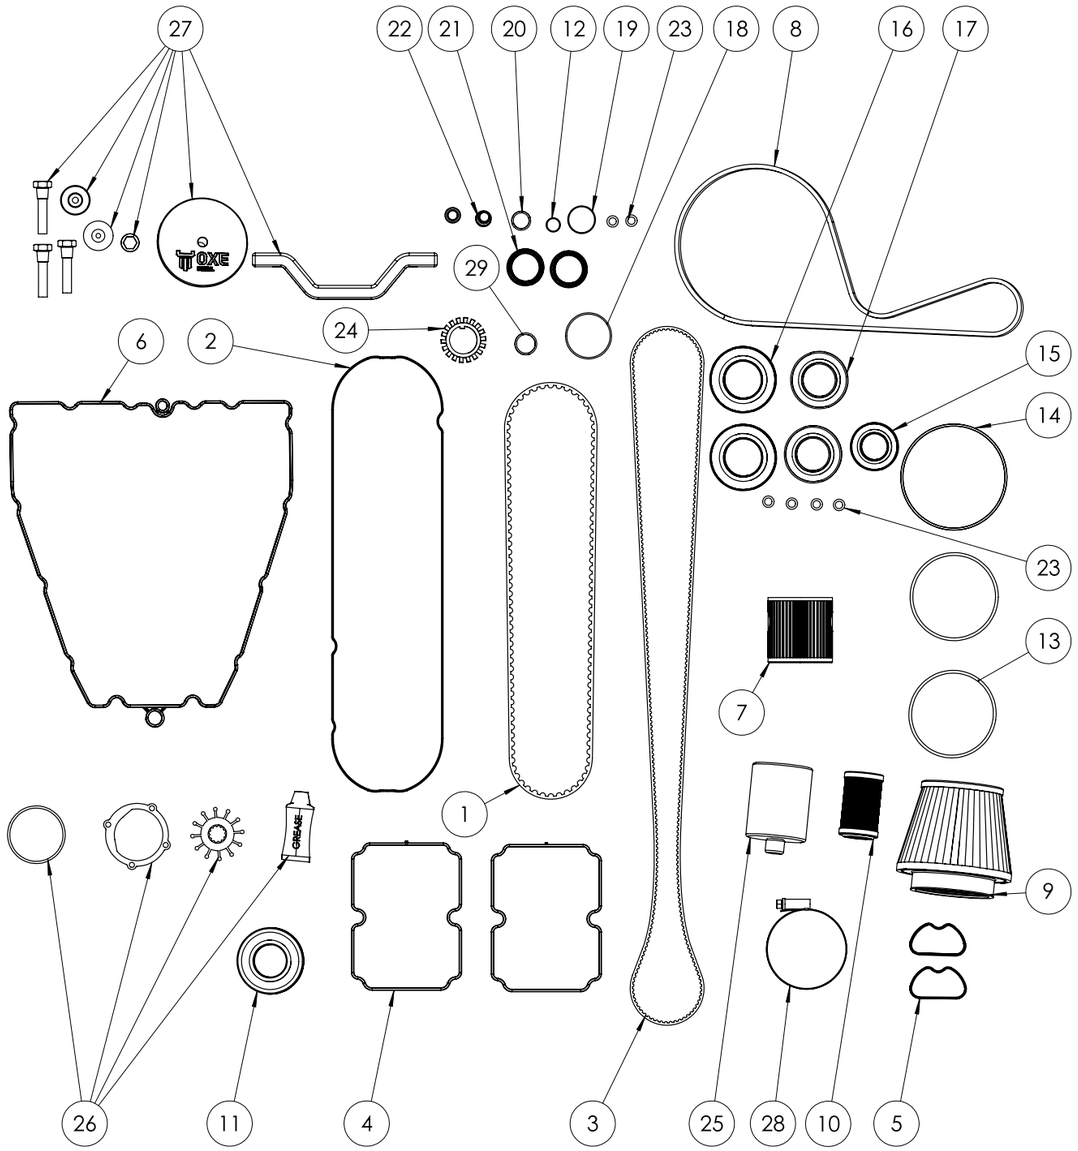

PART LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0110-062	Upper belt	1
2	30-0110-083	Belt housing seal	1
3	30-0111-002	Lower belt	1
4	30-0111-121	Lower housing belt cavity seal	2
5	30-0111-124	Lower housing water cavity seal	2
6	30-0111-125	Gearbox housing seal	1
7	30-0114-494	Fuel filter	1
8	30-0114-426	Alternator belt	1
9	30-0114-427	Air filter	1
10	30-0115-028	Hydraulic filter	1
11	30-0120-001	Roller bearing	1
12	30-0121-002	O-ring	1
13	30-0121-008	O-ring	2
14	30-0121-009	O-ring	1
15	30-0121-014	Radial seal	1
16	30-0121-018	Radial seal	2
17	30-0121-031	Radial seal	2
18	30-0121-042	O-ring	1
19	30-0121-044	O-ring	1
20	30-0121-060	Seal	1
21	30-0121-071	Radial seal	2
22	30-0122-135	Plug	2
23	30-0122-218	Fiber Seal	6
24	30-0130-195	Locking ring	1
25	30-0170-128	Filter, engine oil	1
26	30-0190-912	Sea water impeller kit	1
27	30-0190-930	Anode kit 25”	1
28	30-0122-056	Clamp	1
29	30-0121-080	Seal	1

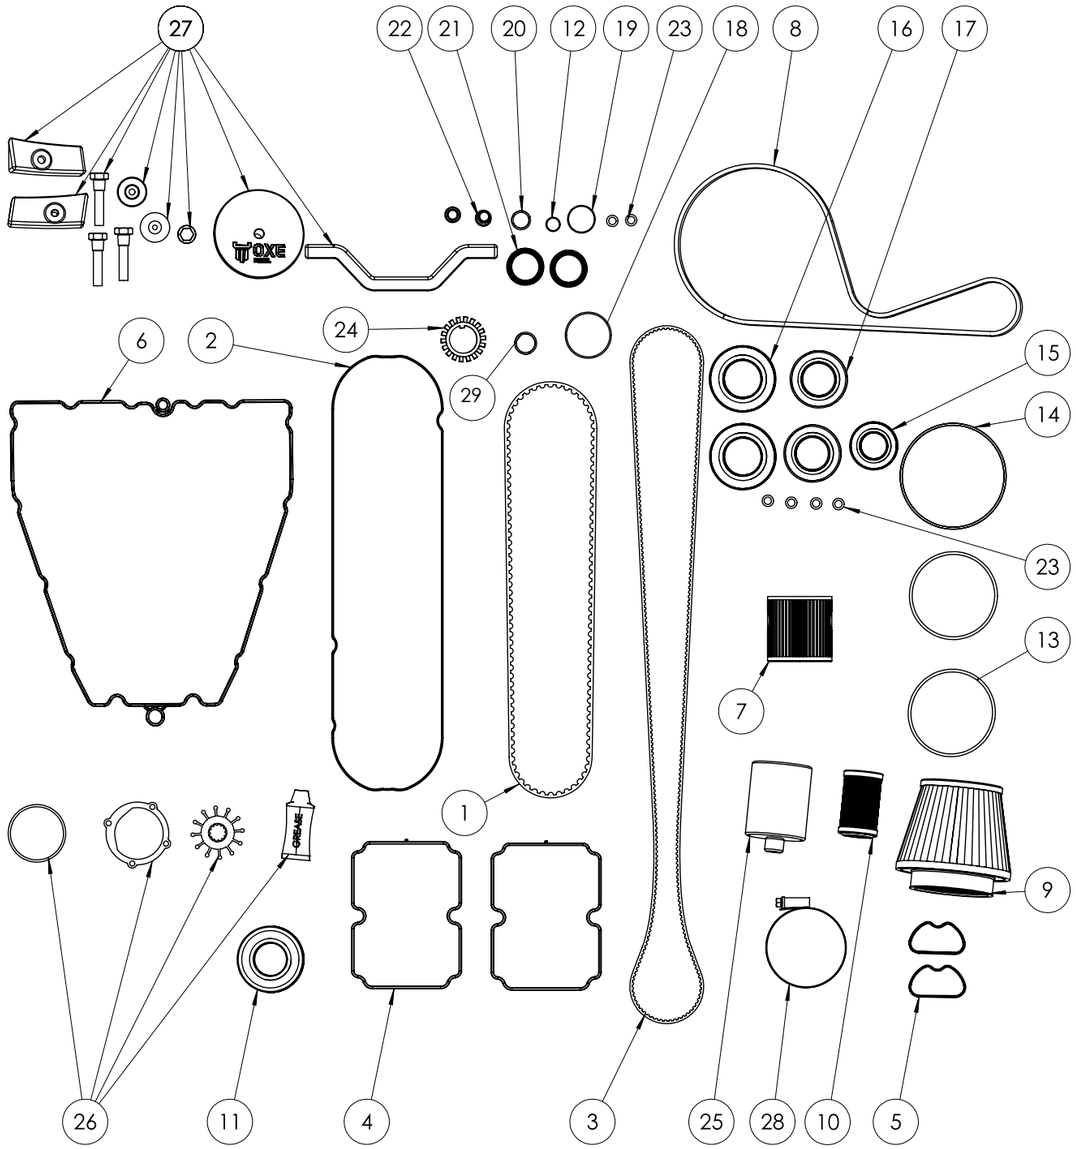

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0110-062	Upper belt	1
2	30-0110-083	Belt housing seal	1
3	30-0111-002	Lower belt	1
4	30-0111-121	Lower housing belt cavity seal	2
5	30-0111-124	Lower housing water cavity seal	2
6	30-0111-125	Gearbox housing seal	1
7	30-0114-494	Fuel filter	1
8	30-0114-426	Alternator belt	1
9	30-0114-427	Air filter	1
10	30-0115-028	Hydraulic filter	1
11	30-0120-001	Roller bearing	1
12	30-0121-002	O-ring	1
13	30-0121-008	O-ring	2
14	30-0121-009	O-ring	1
15	30-0121-014	Radial seal	1
16	30-0121-018	Radial seal	2
17	30-0121-031	Radial seal	2
18	30-0121-042	O-ring	1
19	30-0121-044	O-ring	1
20	30-0121-060	Seal	1
21	30-0121-071	Radial seal	2
22	30-0122-135	Plug	2
23	30-0122-218	Fiber Seal	6
24	30-0130-195	Locking ring	1
25	30-0170-128	Filter, engine oil	1
26	30-0190-912	Sea water impeller kit	1
27	30-0190-948	Anode kit 33”	1
28	30-0122-056	Clamp	1
29	30-0121-080	Seal	1

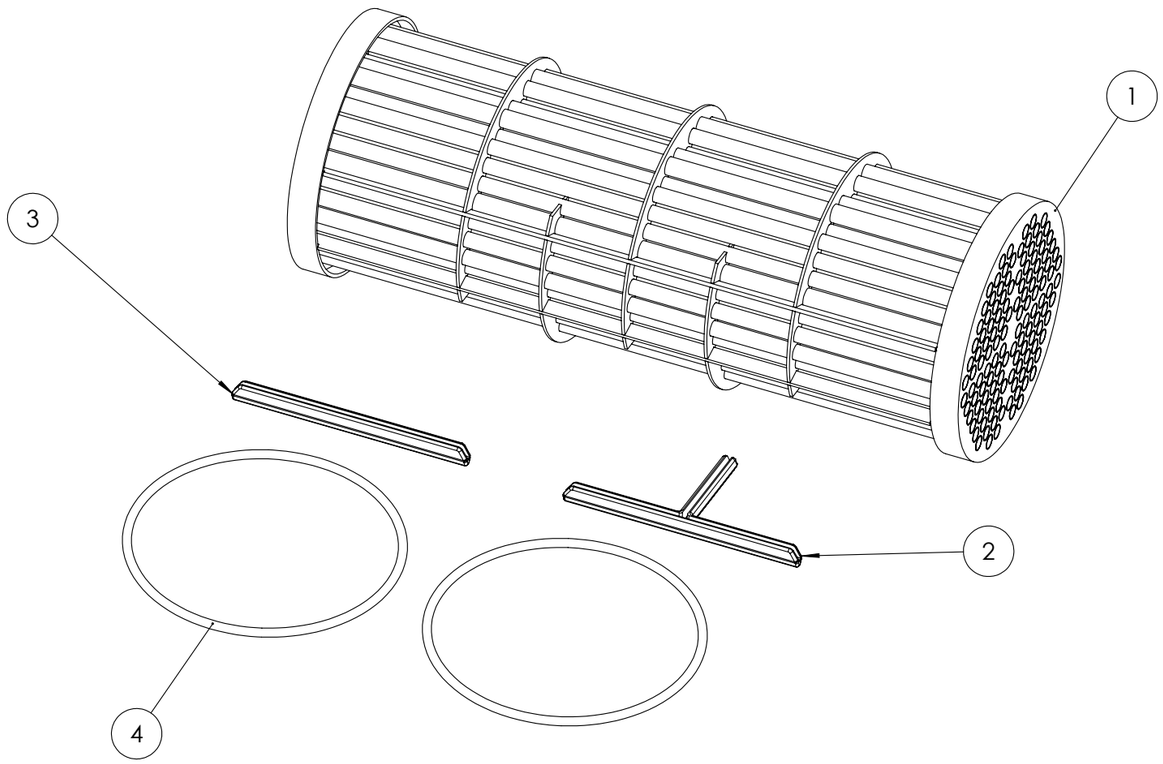

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-402	Heat exchanger bundle	1
2	30-0114-409	Rear end-cap divider seal	1
3	30-0114-411	Front end-cap divider seal	1
4	30-0121-068	Heat exchanger o-ring	2
5	30-0111-124	Lower housing water cavity seal	2

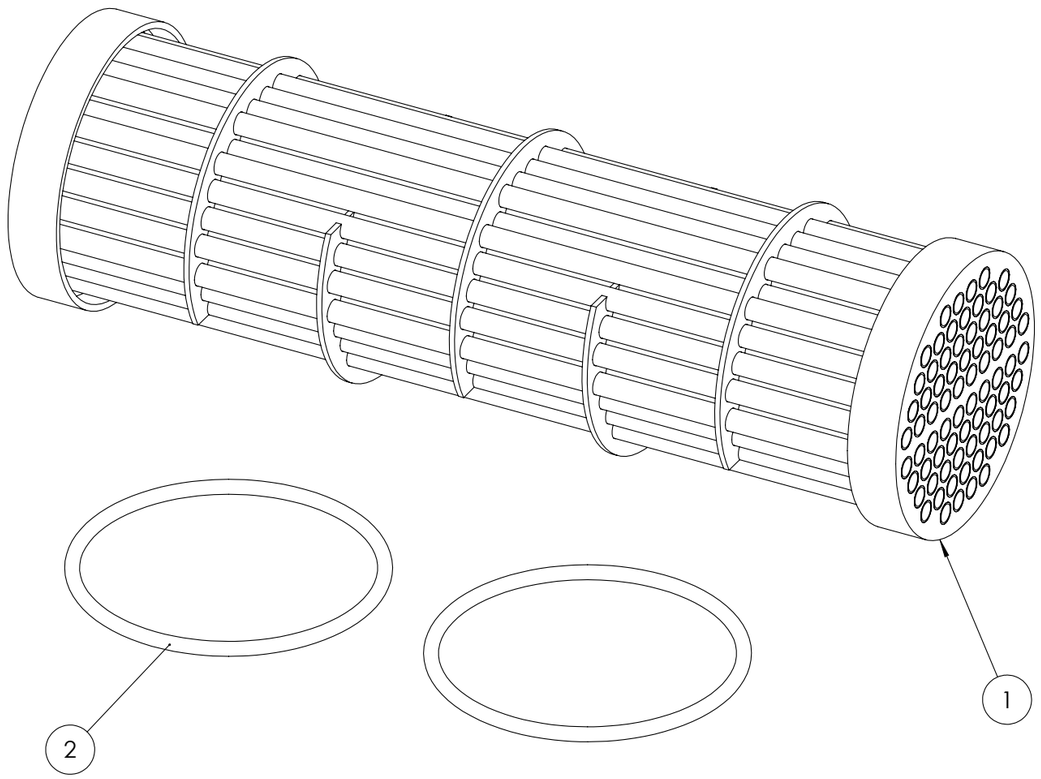

PART LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	30-0114-401	Hydraulic oil cooler bundle	1
2	30-0121-067	Hydraulic oil cooler o-ring	2

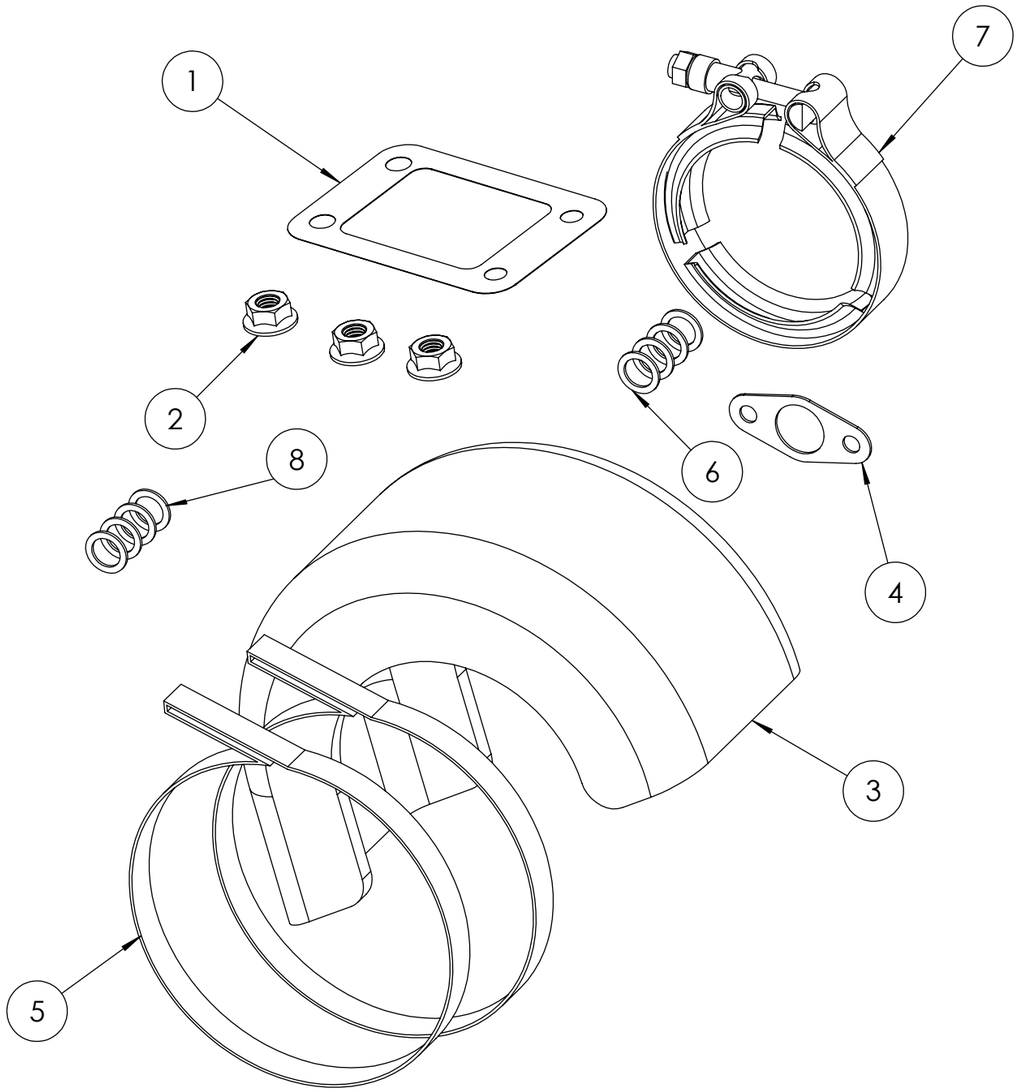

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-076	Gasket	1
2	30-0114-298	Nut	3
3	30-0114-340	Heat Cover	1
4	30-0114-428	Seal	1
5	30-0114-441	Cable tie	2
6	30-0121-052	Copper washer	4
7	30-0122-102	V-band clamp	1
8	30-0121-040	Copper washer	4

1.9.9 UPPER BELT REPLACEMENT KIT

30-0190-915

OXE DIESEL PARTS CATALOGUE

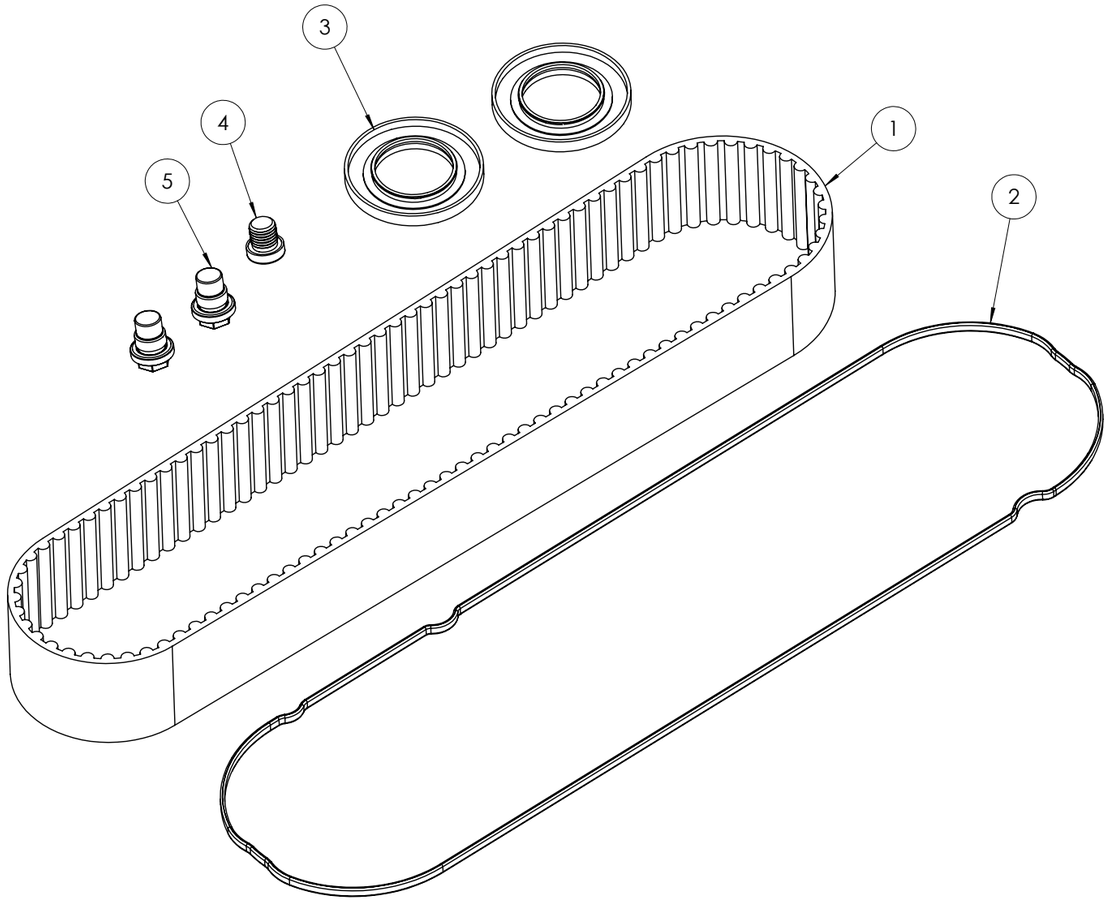

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0110-062	Upper belt	1
2	30-0110-083	Seal	1
3	30-0121-031	Radial seal	2
4	30-0122-135	Plug	1
5	30-0122-234	Anode	2

1.9.10 INTERCOOLER CORE KIT

30-0190-938

OXE DIESEL PARTS CATALOGUE

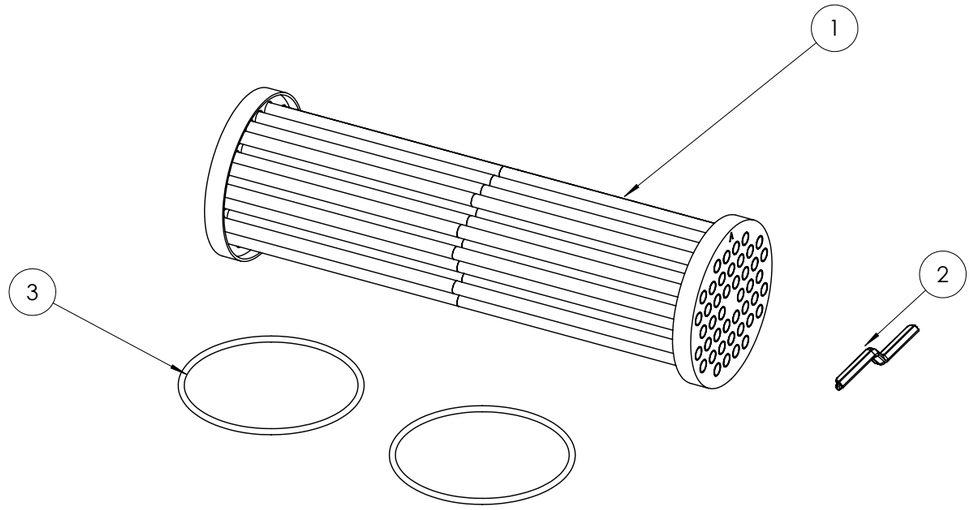

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-407	Intercooler core	1
2	30-0114-420	Seal, end cap, intercooler	1
3	30-0121-069	Oring, intercooler	2

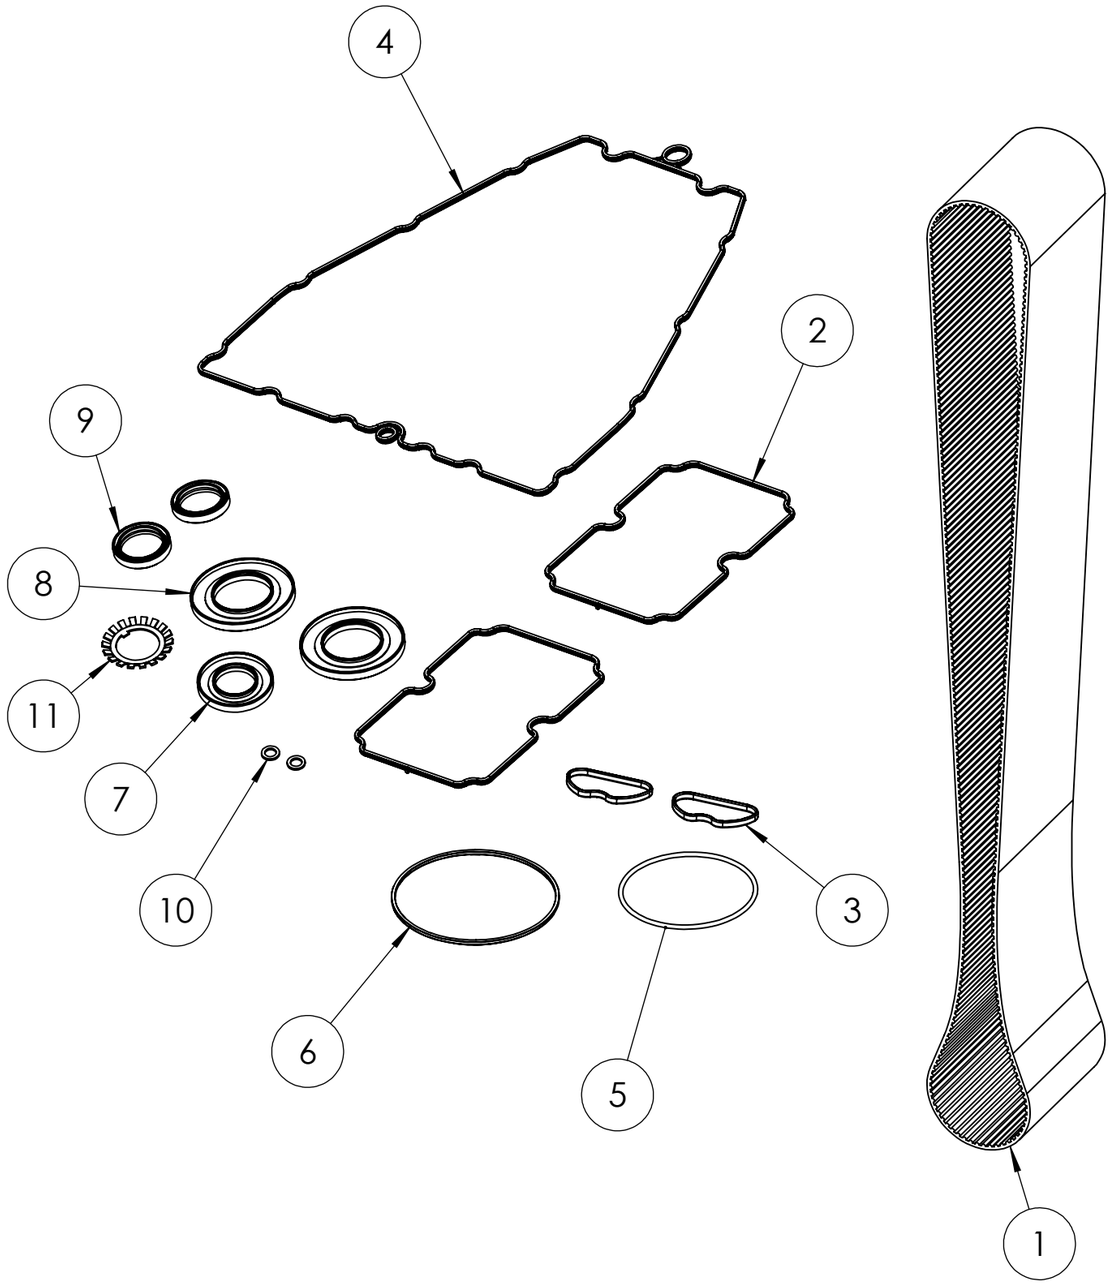

PART LIST XL			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-002	Lower belt	1
2	30-0111-121	Seal	2
3	30-0111-124	Seal	2
4	30-0111-125	Seal	1
5	30-0121-008	O-ring	1
6	30-0121-009	O-ring	1
7	30-0121-014	Radial seal	1
8	30-0121-018	Radial seal	2
9	30-0121-071	Radial seal	2
10	30-0122-218	Fiber Seal	2
11	30-0130-195	Locking ring	1

PART LIST XXL 30-0190-936			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-143	Lower belt - long rig	1
2	30-0111-121	Seal	2
3	30-0111-124	Seal	2
4	30-0111-125	Seal	1
5	30-0121-008	O-ring	1
6	30-0121-009	O-ring	1
7	30-0121-014	Radial seal	1
8	30-0121-018	Radial seal	2
9	30-0121-071	Radial seal	2
10	30-0122-218	Fiber Seal	2
11	30-0130-195	Locking ring	1

1.9.12 PROPELLER SHAFT REPAIR KIT

30-0190-928

OXE DIESEL PARTS CATALOGUE

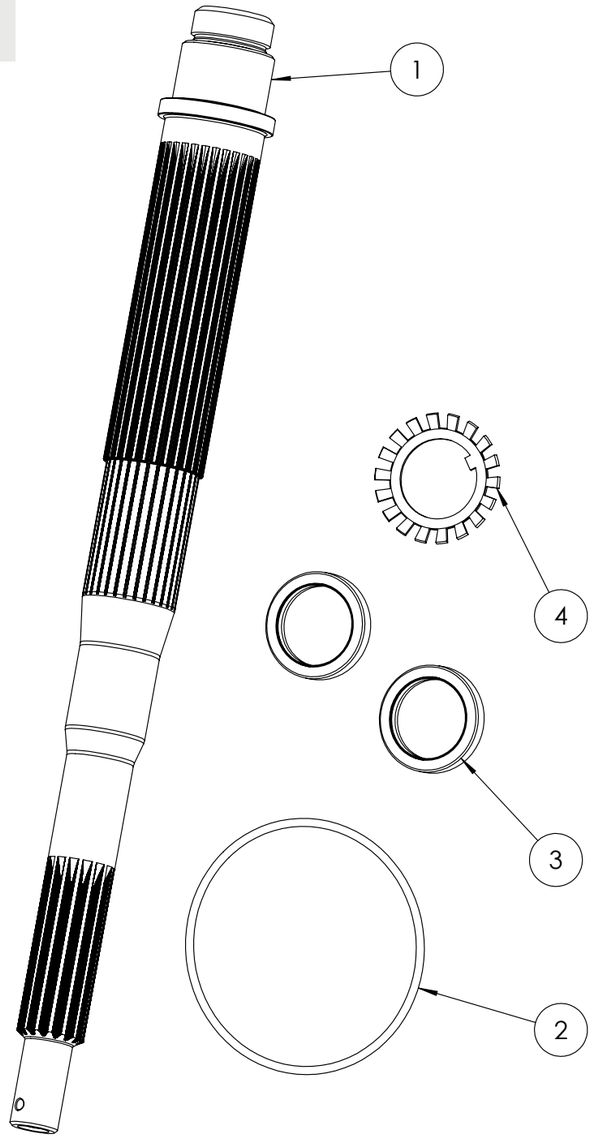

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-005	Propeller shaft	1
2	30-0121-008	O-ring	1
3	30-0121-071	Radial seal	2
4	30-0130-195	Locking ring	1

1.9.13 FUEL PUMP KIT

30-0190-935

OXE DIESEL PARTS CATALOGUE

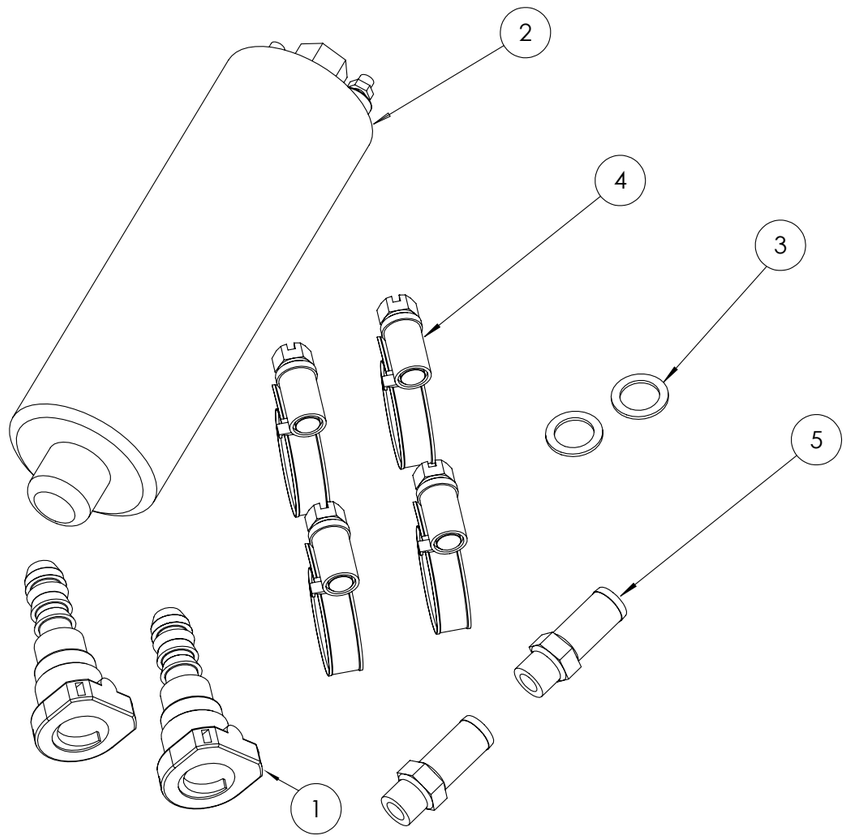

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0114-140	Quick connector	2
2	30-0114-444	Fuel pump	1
3	30-0121-052	Copper washer	2
4	30-0122-049	Hose clamp	4
5	30-0122-254	Hose connector	2
6	30-0122-234	Anode M14x1.5 zink short	3

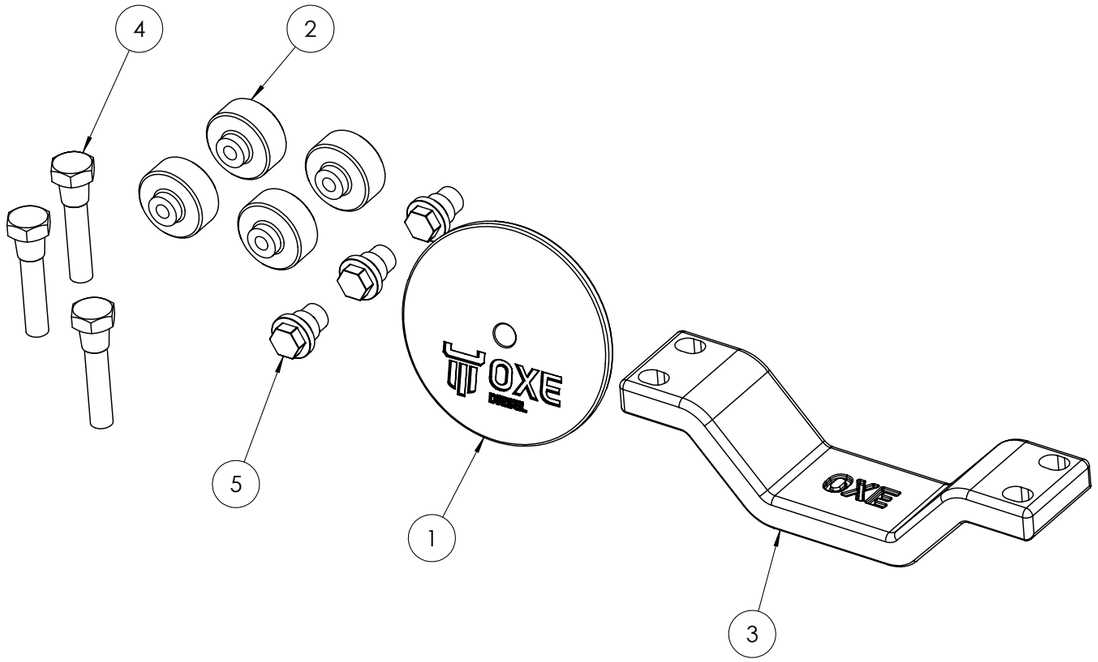

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-066	Zinc anode fin	1
2	30-0113-044	Anode	4
3	30-0113-052	Anode	1
4	30-0122-226	Cooler anode	3
5	30-0122-234	Anode	3

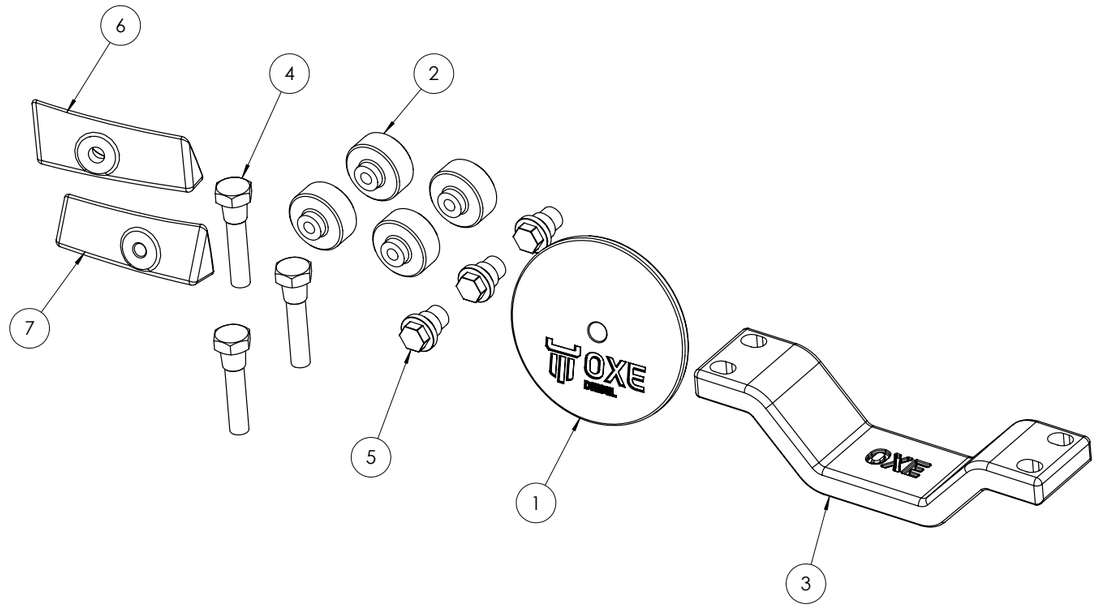

PART LIST			
ITEM NO.	**PART NUMBER**	**DESCRIPTION**	**QTY.**
1	30-0111-066	Zinc anode fin	1
2	30-0113-044	Anode	4
3	30-0113-052	Anode	1
4	30-0122-226	Cooler anode	3
5	30-0122-234	Anode	3
6	30-0111-141	Anode, adapter 33”, port	1
7	30-0111-142	Anode, adapter 33”, starbord	1

2 NOTES
OXE DIESEL PARTS CATALOGUE

EFFICIENCY / ENDURANCE
POWER / CONTROL.

CIMCO
Endurance by Engineering

Cimco Marine AB, Metallgatan 17b Ängelholm, SE-262 72 Ängelholm, SWEDEN, +46 (0)431-37 11 30, www.oxe-diesel.com
Copyright © 2018 Cimco Marine AB.